
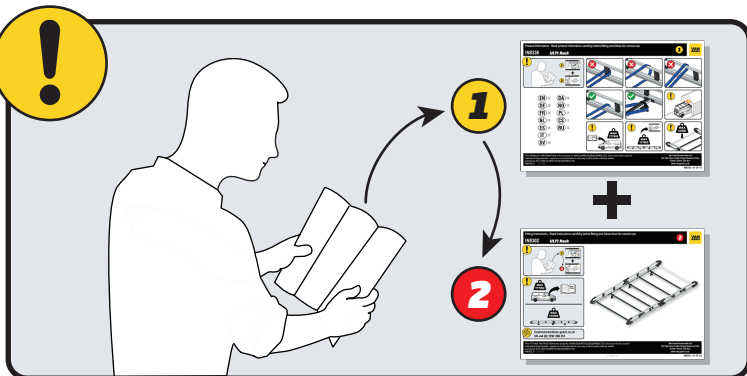


IN8352

ULTI Rack+

2

**VAN
GUARD**


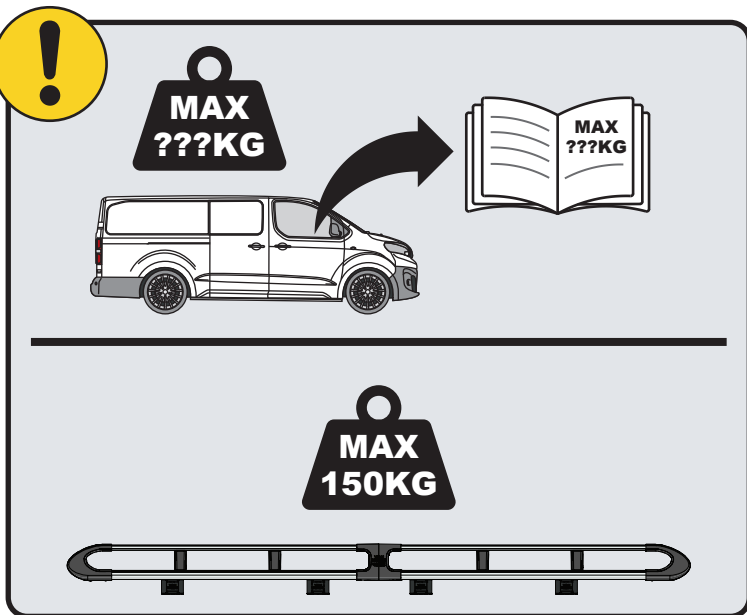


This FITTING INSTRUCTION is the property of VAN GUARD ACCESSORIES LTD. and must not be used for manufacturing purposes, copied nor communicated in any way to third parties without written permission from VAN GUARD ACCESSORIES LTD.
IN8352_C-01 (CN:01421)

Van Guard Accessories Ltd
Fair Oak Close, Exeter Airport Business Park,
Exeter, Devon, EX5 2UL
www.van-guard.co.uk

VGUR-273


Citroen Dispatch: 2016 on (L3H1)
 Fiat Scudo: 2022 on (L2H1)
 Iveco eJolly: 2026 on (L2H1)
 Peugeot Expert: 2016 on (L3H1)
 Toyota Pro-Ace: 2016 on (L3H1)
 Vauxhall Vivaro: 2019 on (L2H1)
Twin Rear Doors

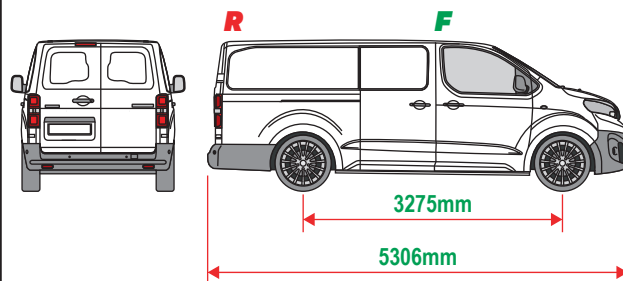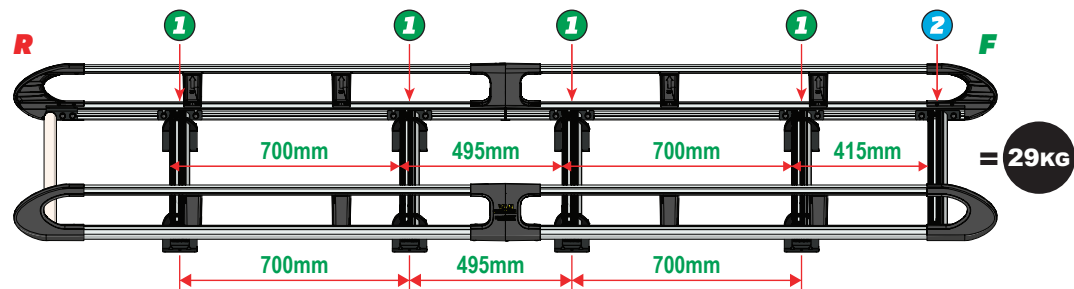



SUPPLIED COMPONENTS - CHECK ALL PARTS ARE PRESENT AND CORRECT BEFORE PROCEEDING (1 OF 2)

TOOLS REQUIRED

10MM X1

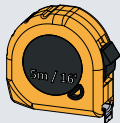


13MM X1

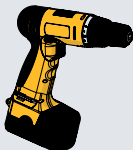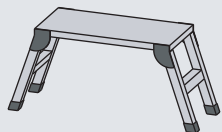


AS3539 X2

(2800 / A)

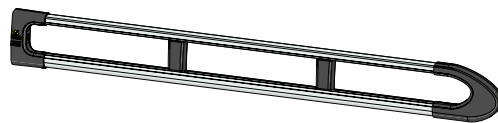


MA6118 X10



FX4241 X24




ME1622 X1



AS3538 X2


(2800 / B)




FX4008 X1



MA6145 X1




ME1623 X1



ME1627 X5

(1354mm)



FX4001 X2

(M8X40)




FX4235 X20

(M5X25)




ME0203 X8




AS3159 X1

(1340mm)




MA6007 X4




FX4248 X1


(T25)




MA6065 X8

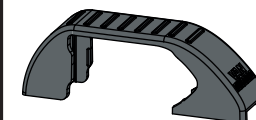

AS3590 X1

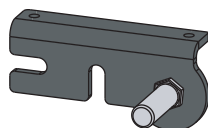


MA6093 X10




FX4239 X24

(M8X20)



ME1620 X4




FX4016 X16


(M6)



AS3591 X1



ME0316 X10




FX4240 X24

(M8)




ME1621 X4




FX4042 X16

(M6X16)




ME0823 X1

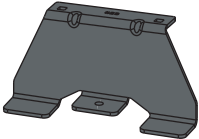


FX4341 X8

(M6X18)



ME0824 X1

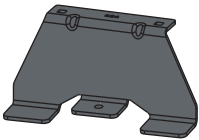


FX4017 X8


(M6)




ME0826 X1

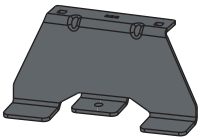


FX4126 X8




ME0827 X1

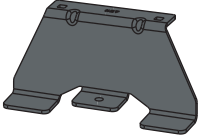

MA6081 X16



ME0872 X4

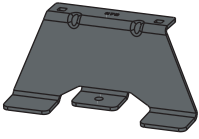


FX4010 X8

(M6)




01

1L



X4

1R



X4




2L





X1

2R



X1


02

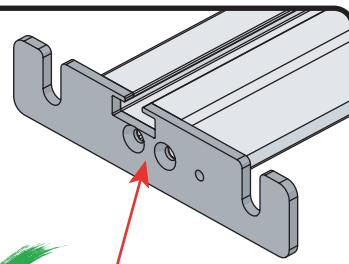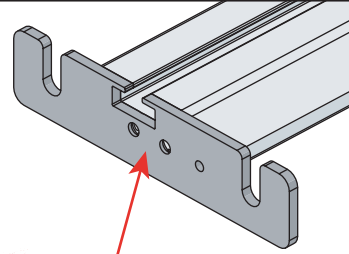


03

01


FX4248

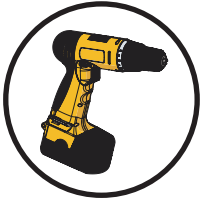


+

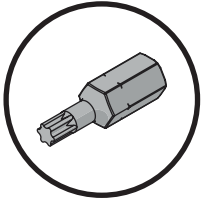

02

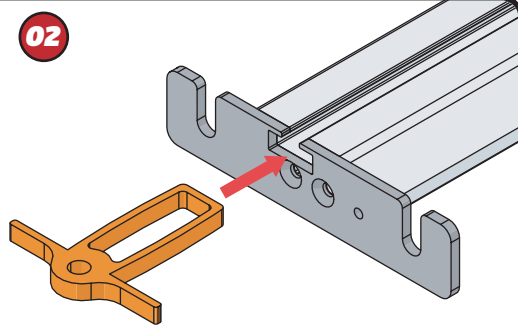

04

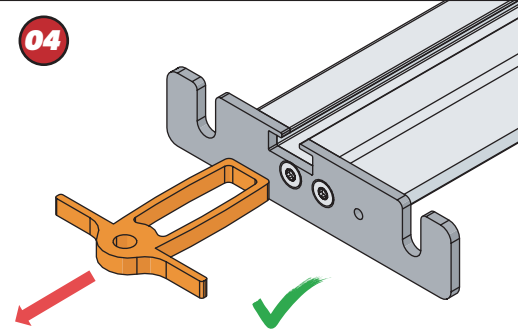

04

1

X4








2

X1


03




11Nm

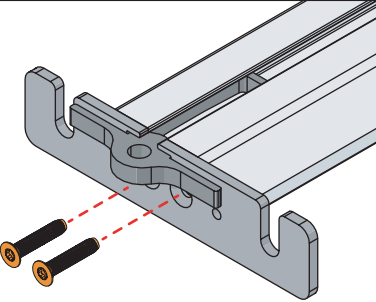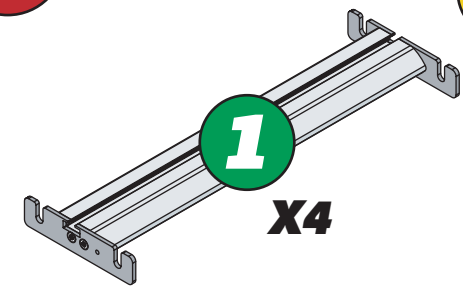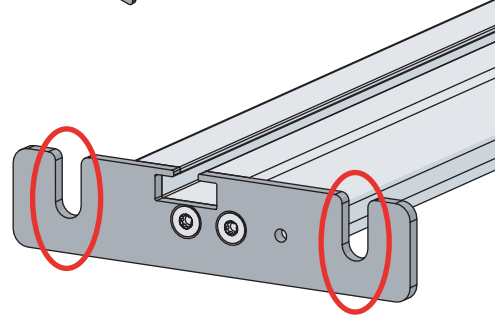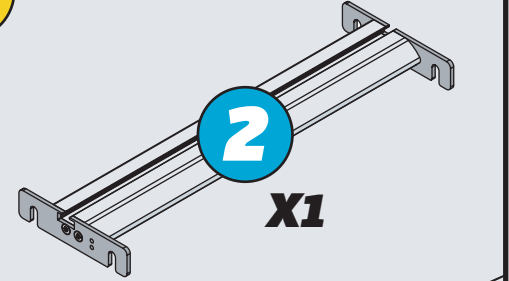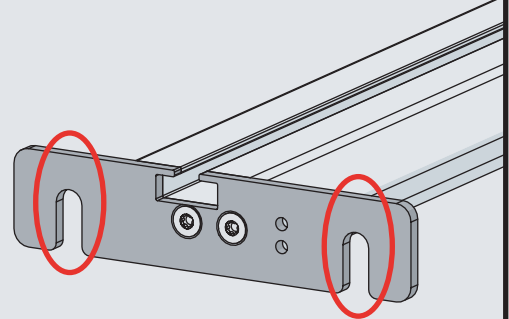


05

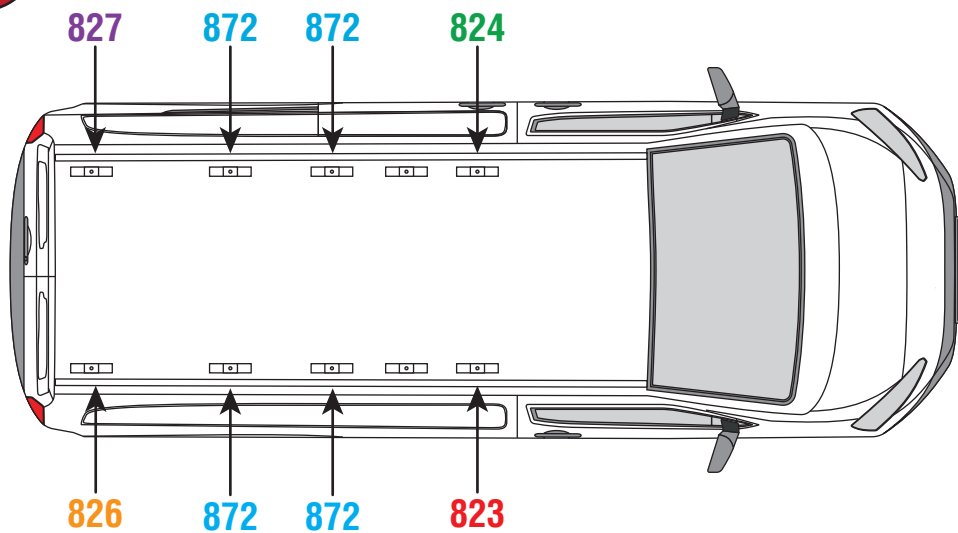


823

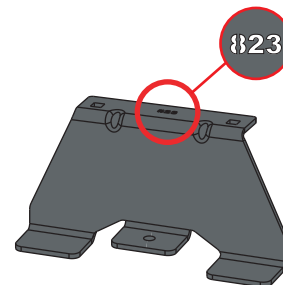


824

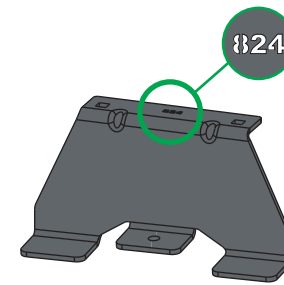


872

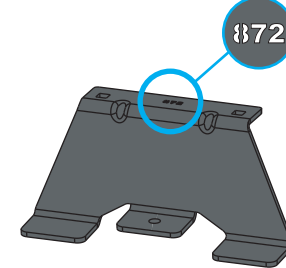


826

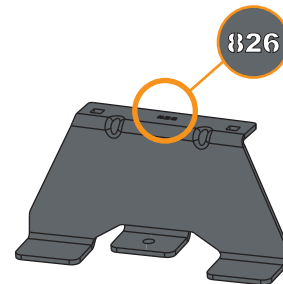

827

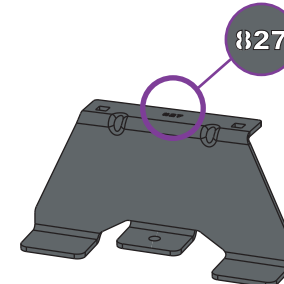



06

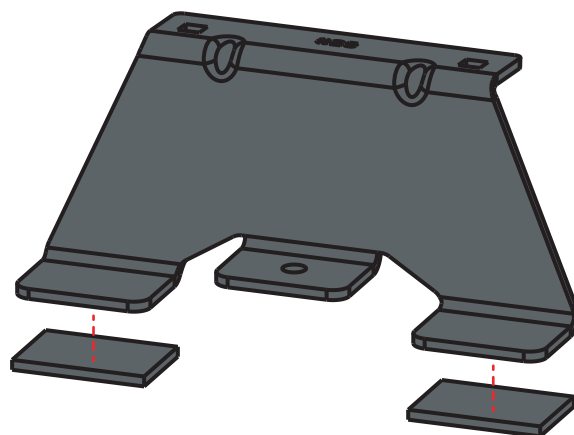


EN - STICK GASKETS TO ALL BRACKETS
 DE - KLEBEN SIE DIE DICHUNG AN ALLEN HALTERUNGEN
 FR - COUSSINETS ADHÉSIFS À TOUS LES SUPPORTS
 NL - PLAK PAKKING OP ALLE BEUGELS
 ES - PEGA LAS ALMOHADILLAS A TODOS LOS SOPORTES
 IT - ADESIVI GUARNIZIONI A TUTTE LE STAFFE

SV - FÄST GUMMI PÅ ALLA FÄSTEN
 DA - KLÆB GUMMI PÅ ALLE BESLAG
 NO - PLIST GUMMI PÅ ALLE BRAKKETTER
 PL - NAKLEJ USZCZELKI DO WSZYSTKICH WSPORNIKÓW
 CS - PŘILEPTE TĚSNĚNÍ NA VŠECHNY DRŽÁKY


07

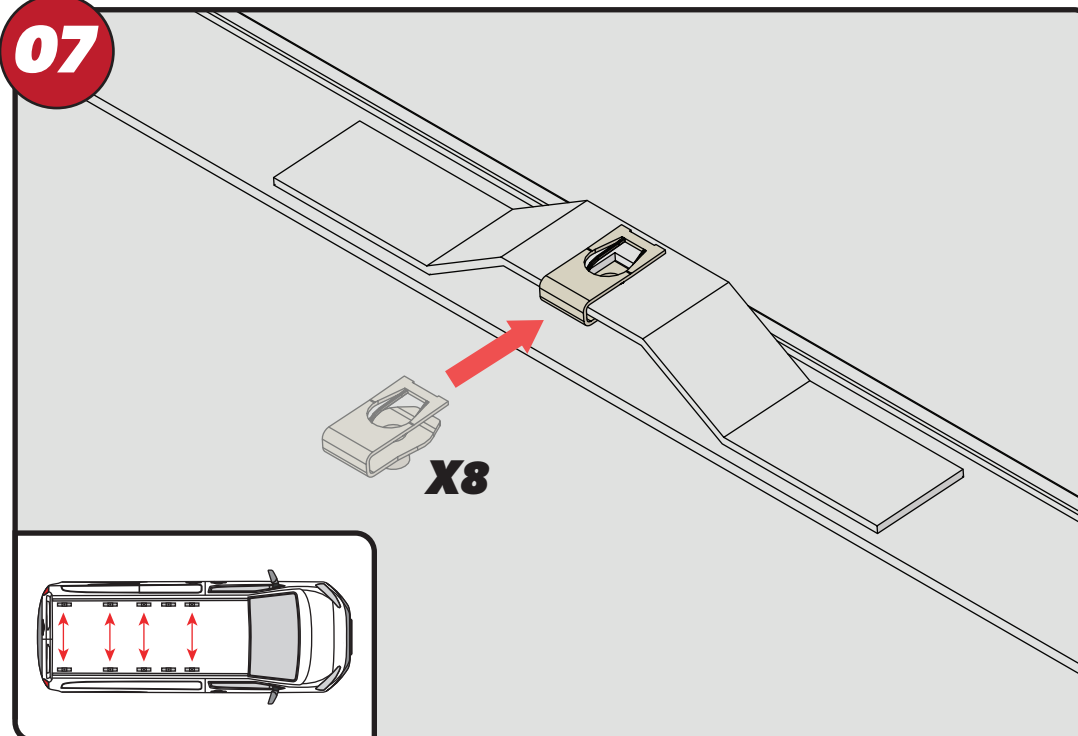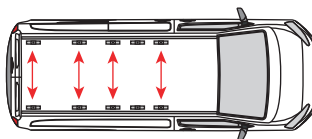


08

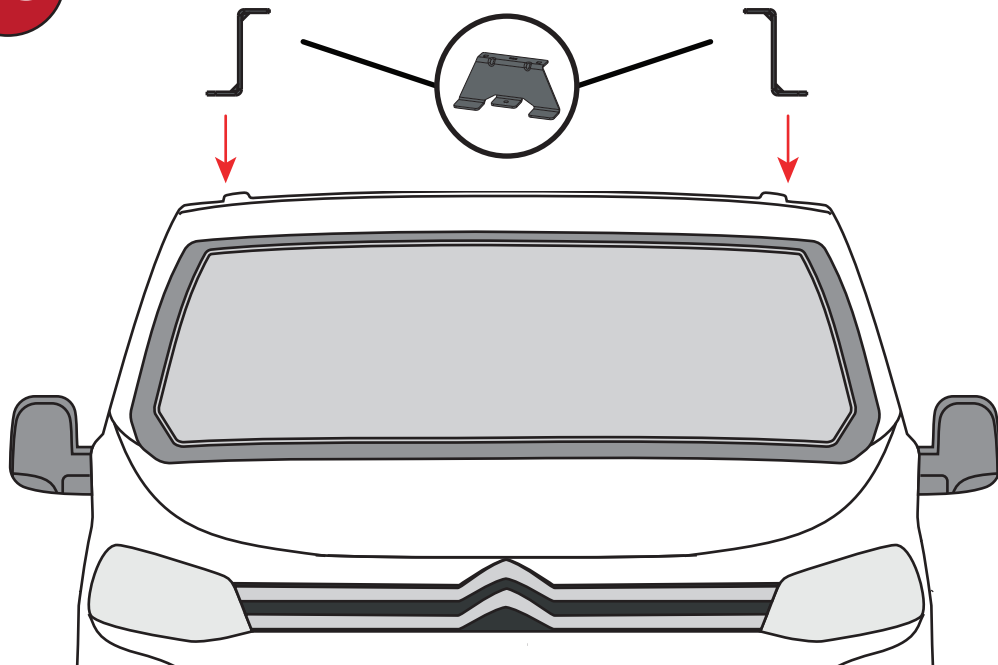


09

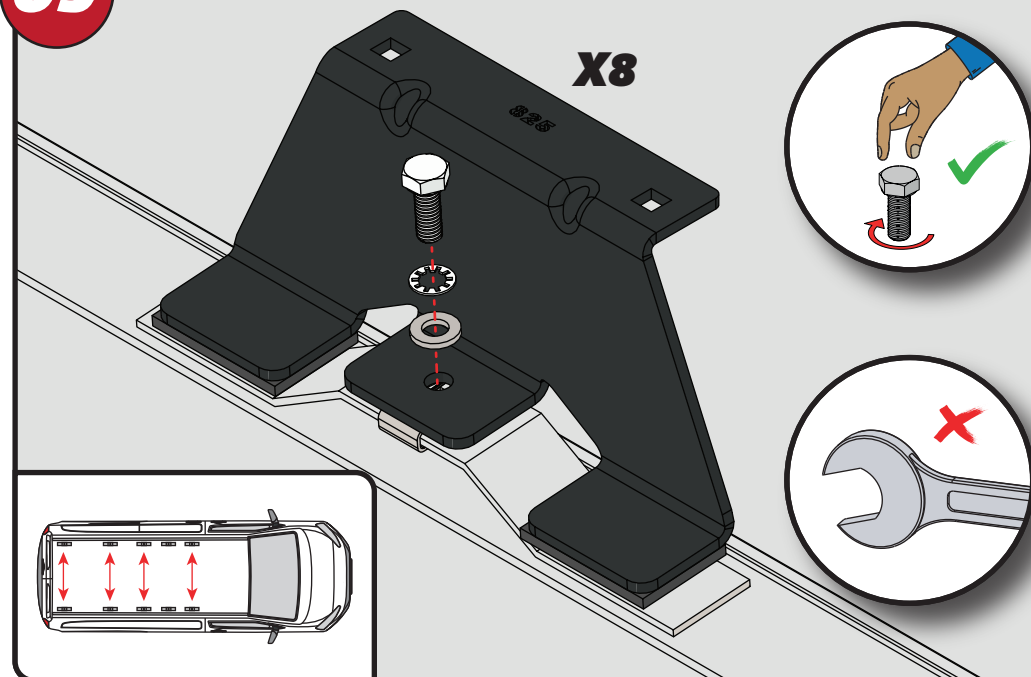

10

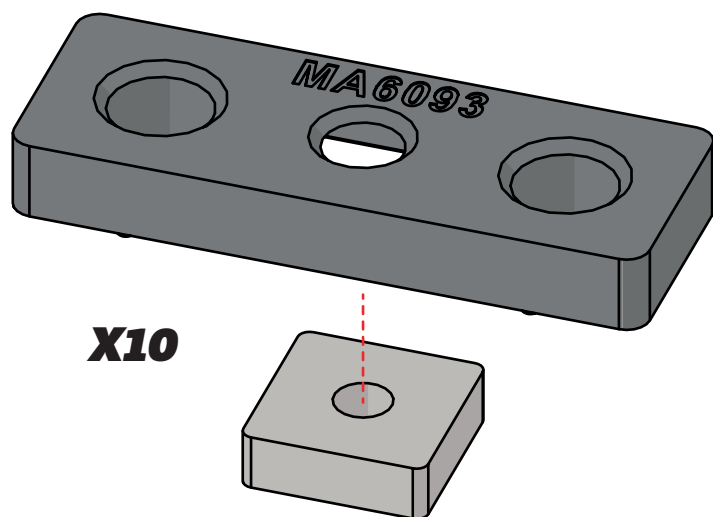


11

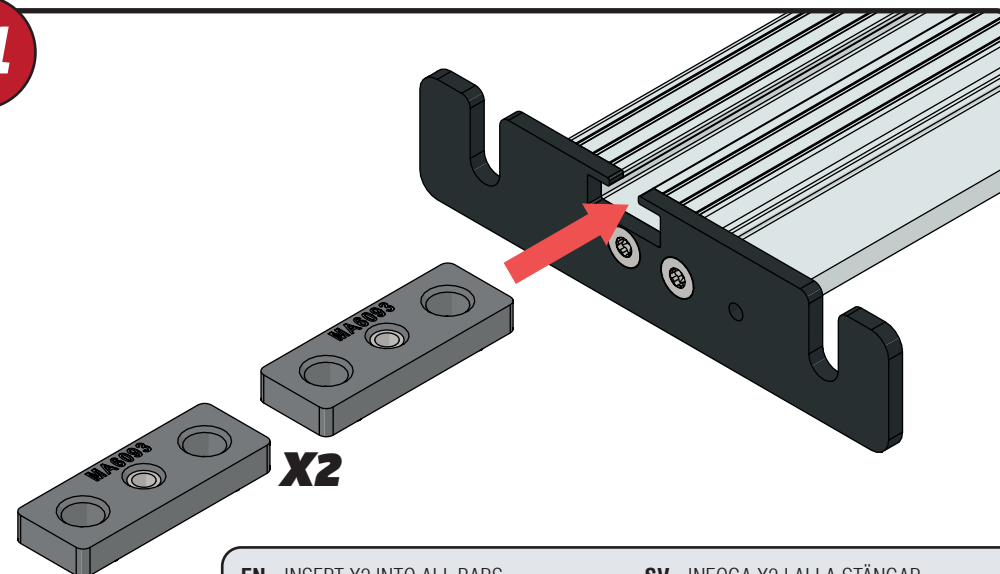


EN - INSERT X2 INTO ALL BARS
DE - X2 IN ALLE STANGEN EINFÜGEN
FR - INSÉRER X2 DANS TOUTES LES BARRES
NL - PLAATS X2 IN ALLE BARS
ES - INSERTAR X2 EN TODAS LAS BARRAS
IT - INSERIRE X2 IN TUTTE LE BARRE

SV - INFOGA X2 I ALLA STÄNGAR
DA - INDSÆT X2 I ALLE STÆNGER
NO - SETT X2 INN I ALLE TAKSTENGER
PL - WSTAW X2 DO WSZYSTKICH PRĘTÓW
CS - VLOŽTE X2 DO VŠECH TYČÍ


12

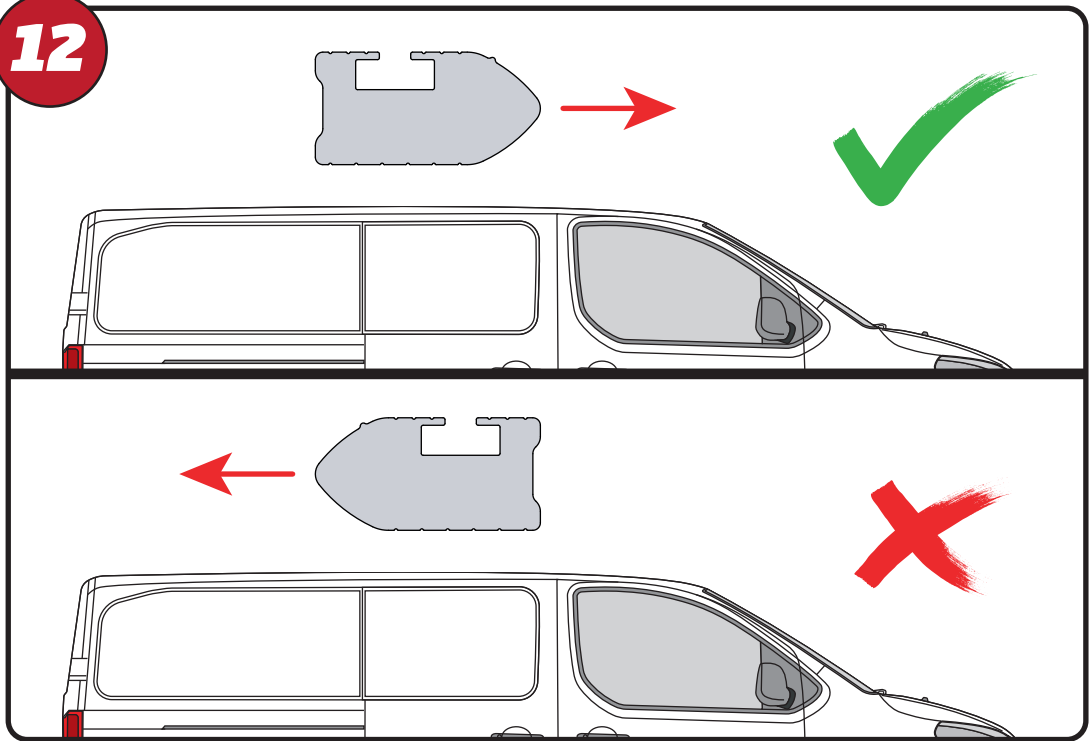


13

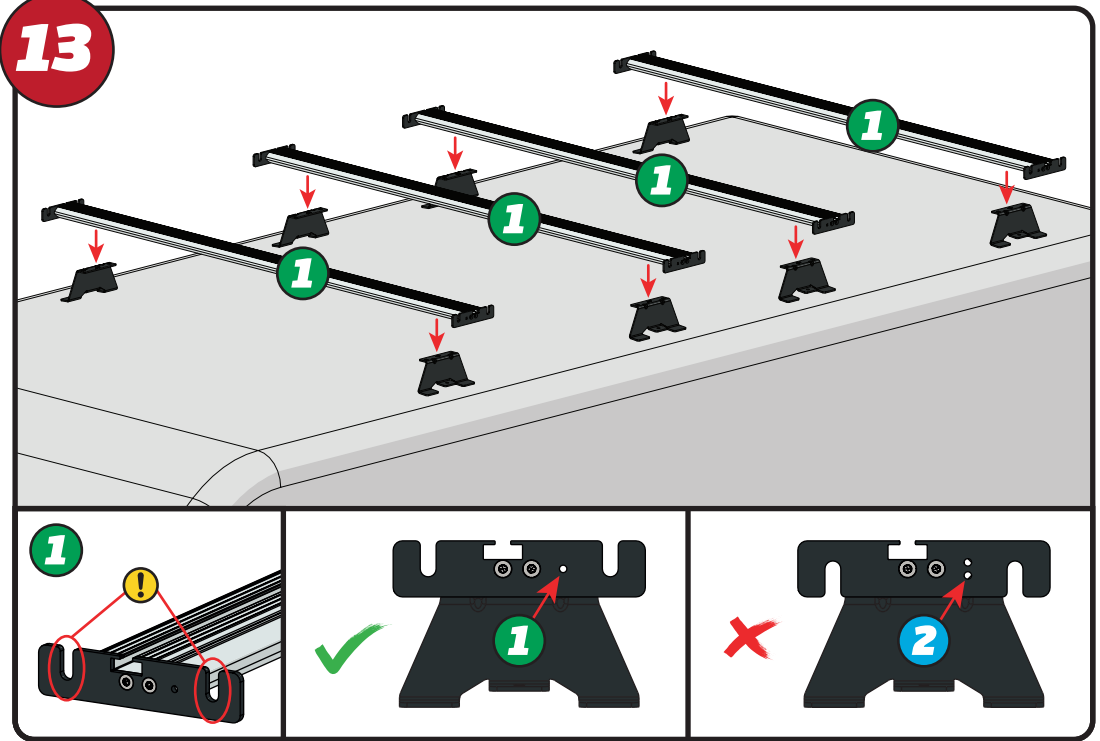




14

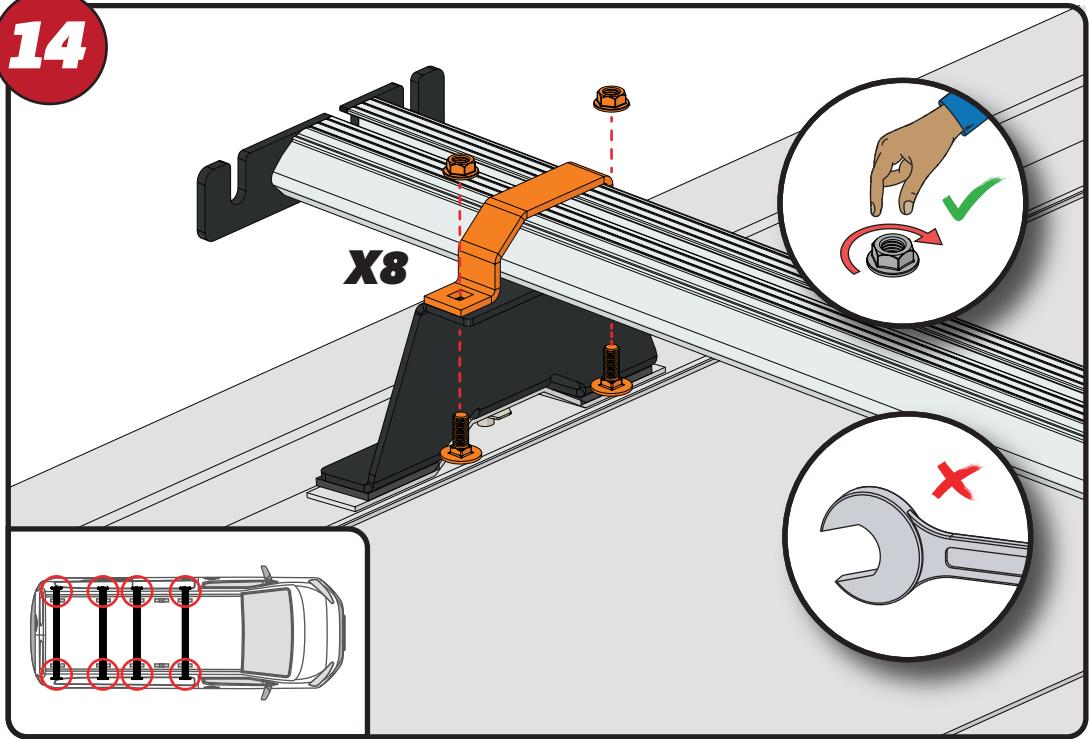


15

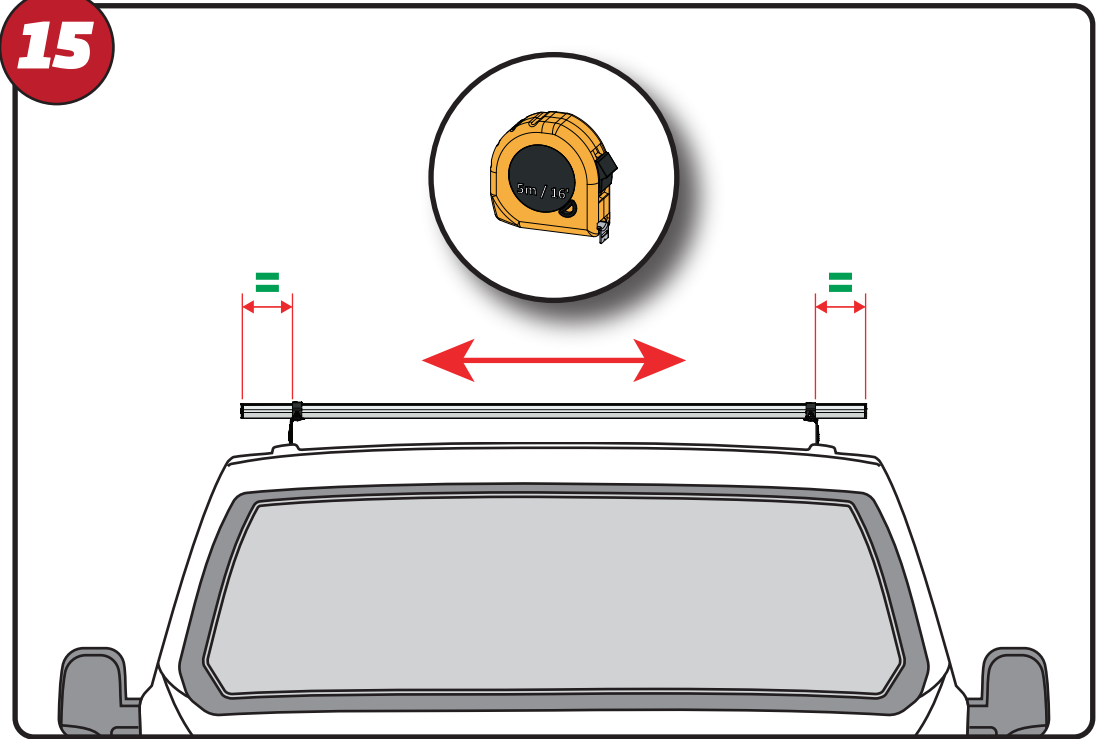


16

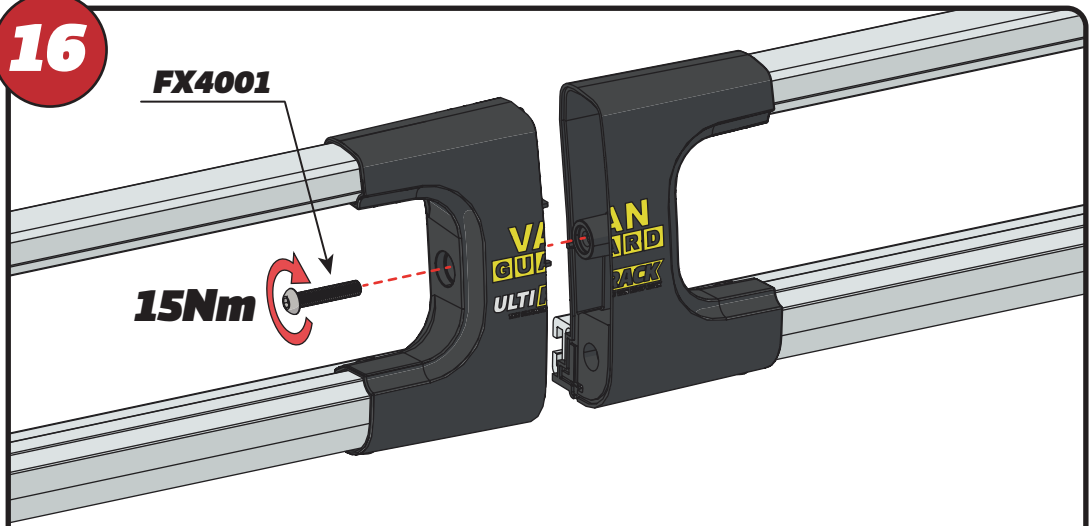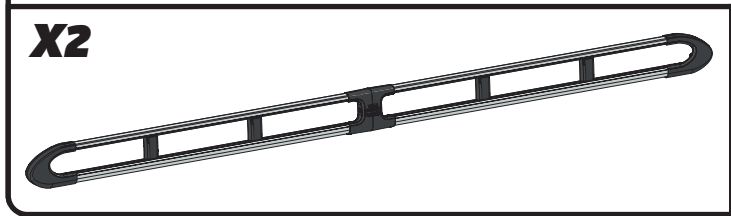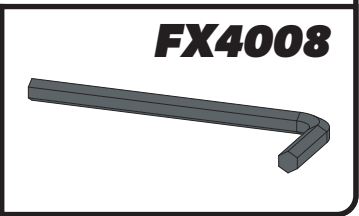


17

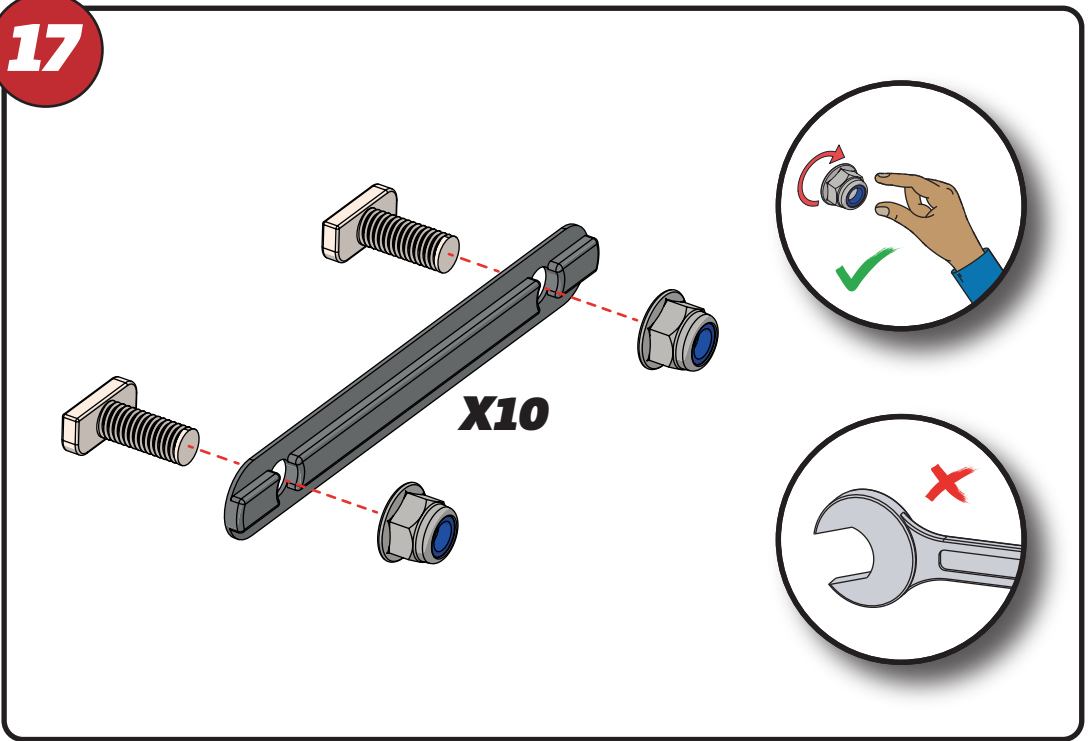




18

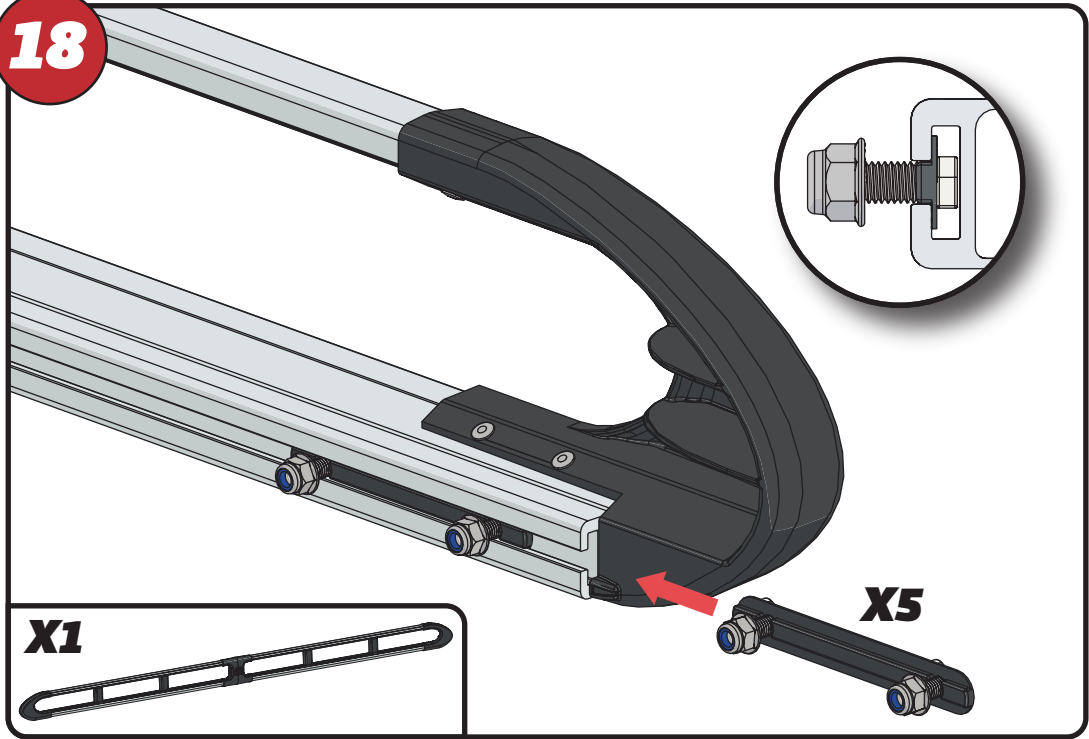



19

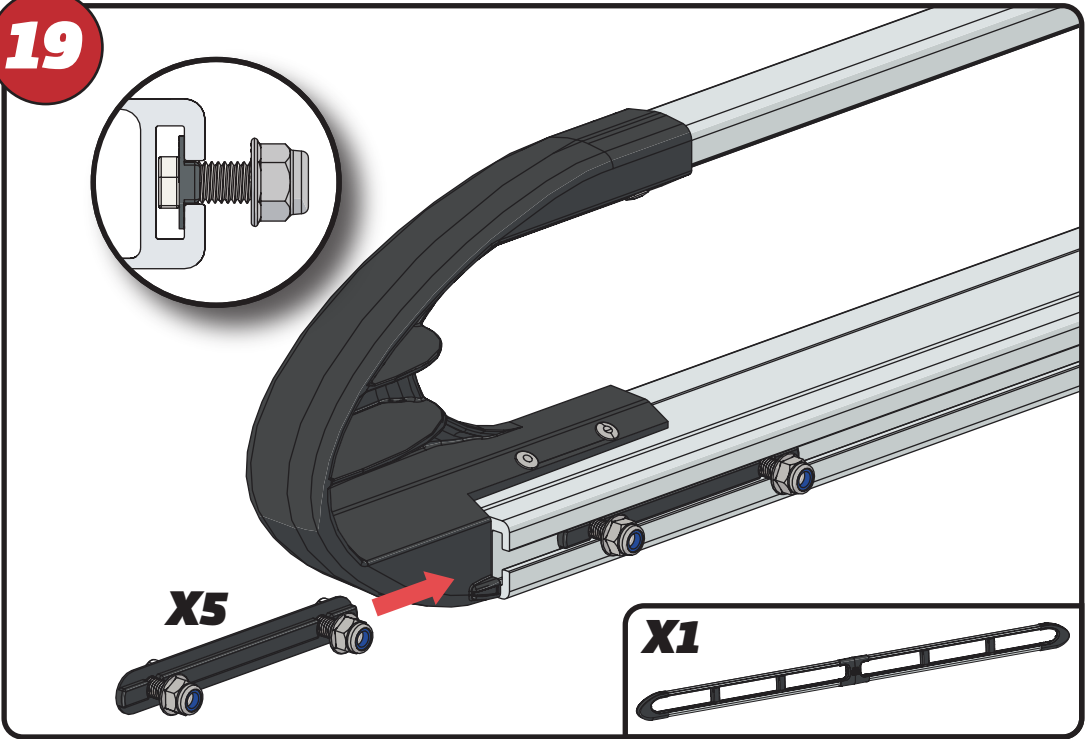



20

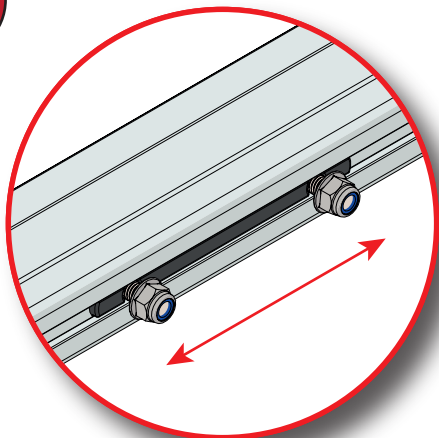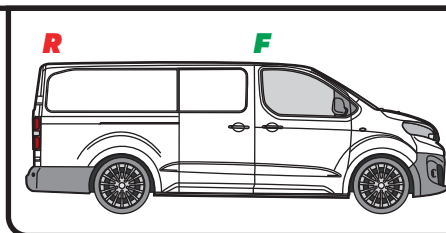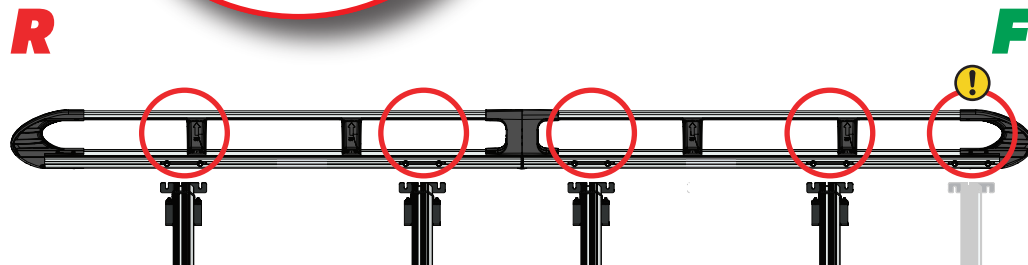



21

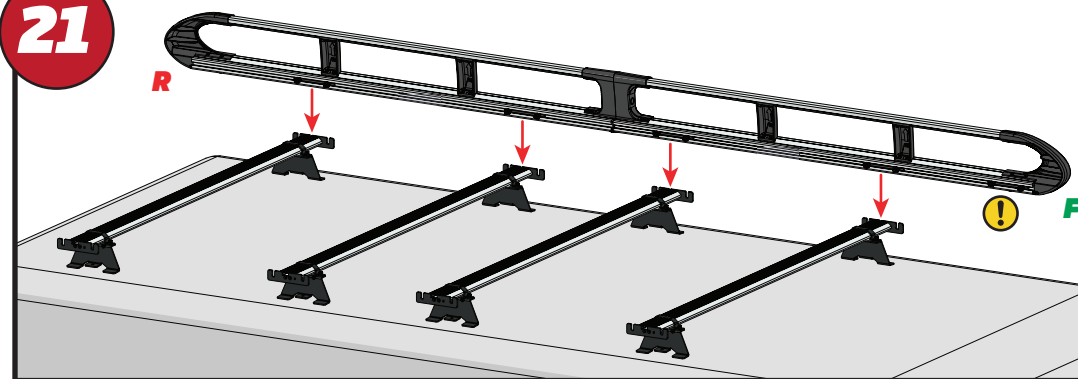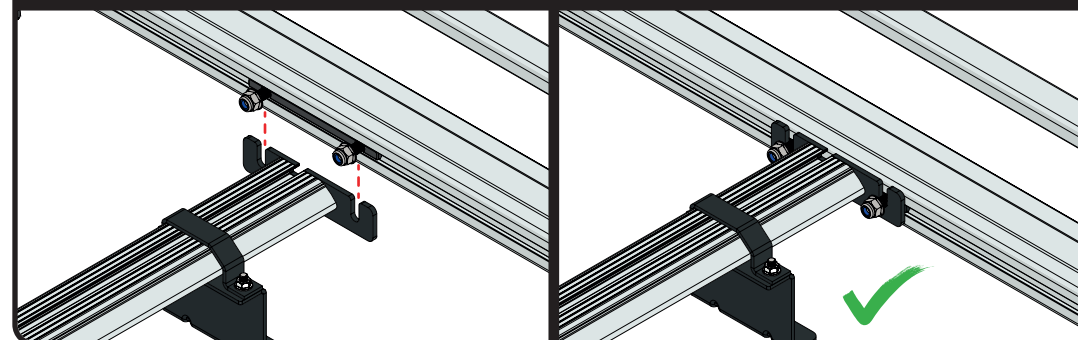



22

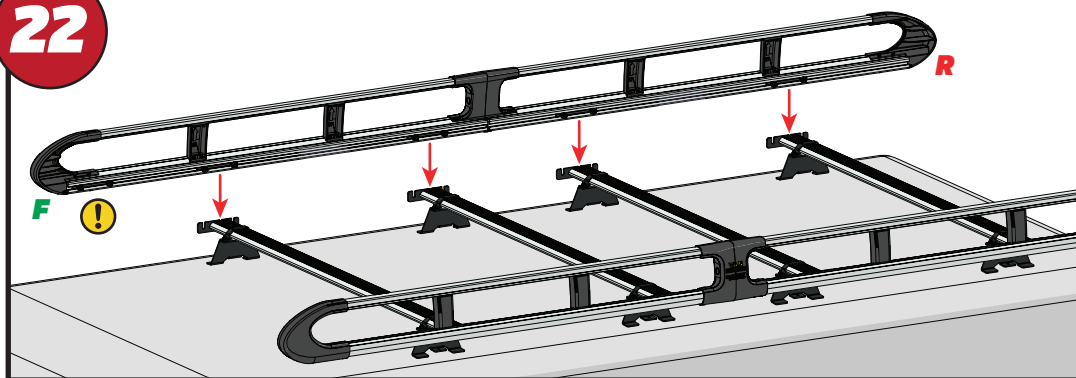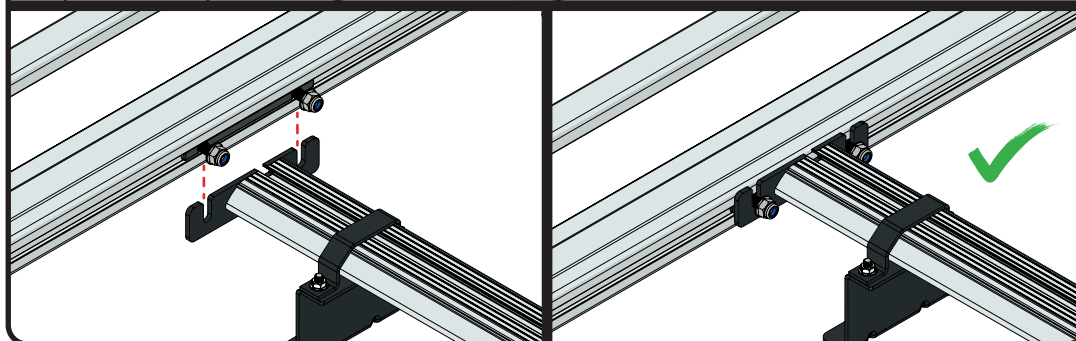



23

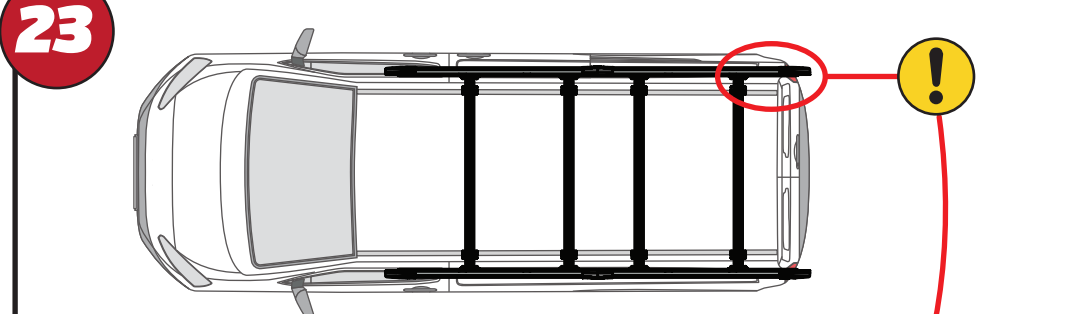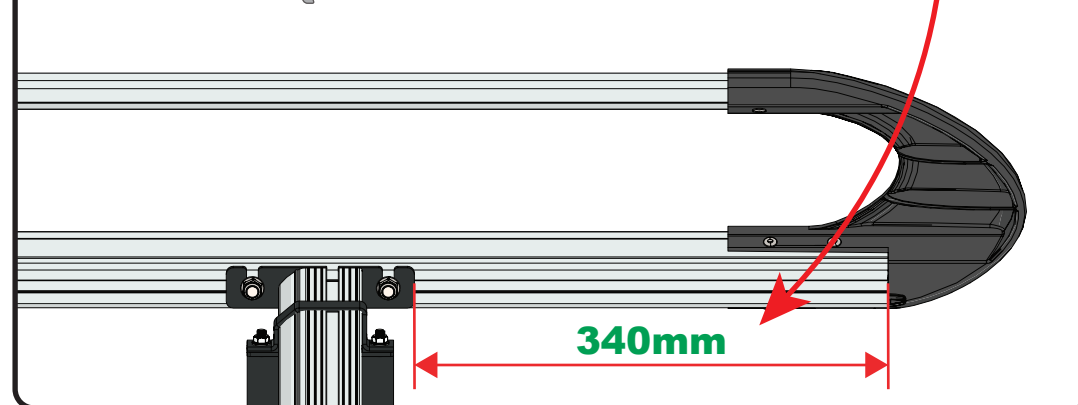

24

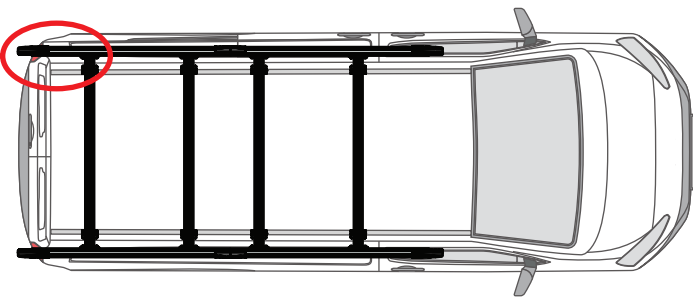
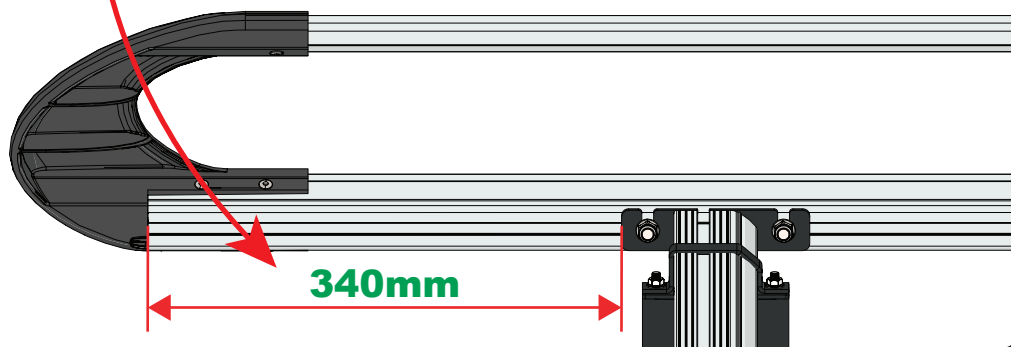


25

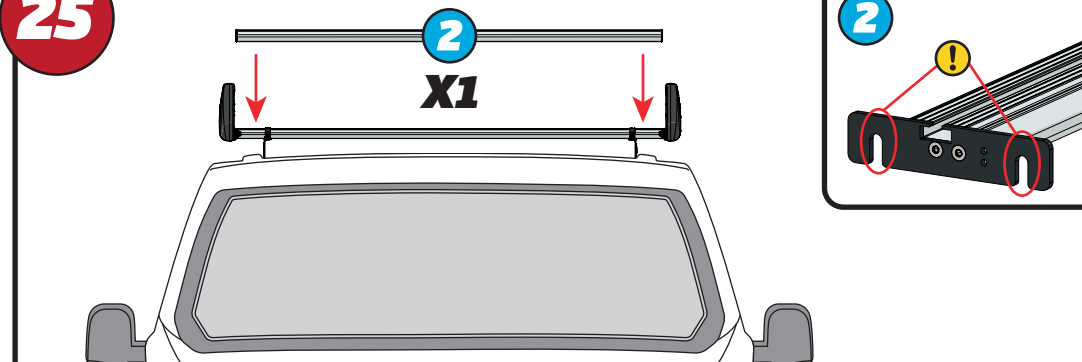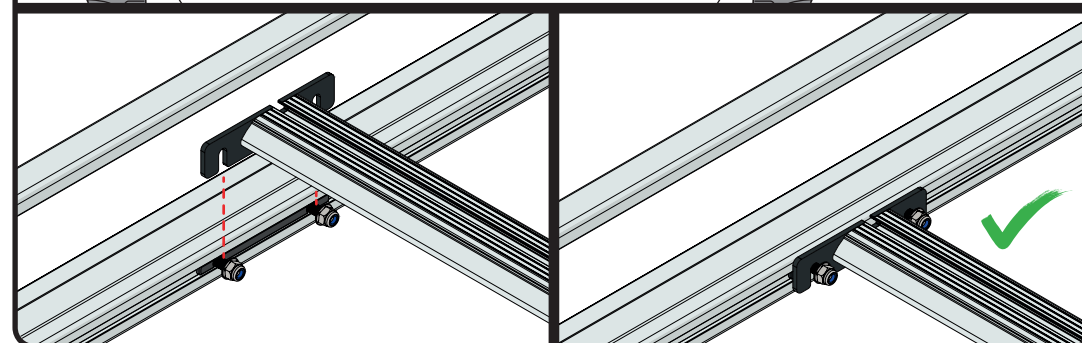


26

XXX =
PAGE 2 OF 14

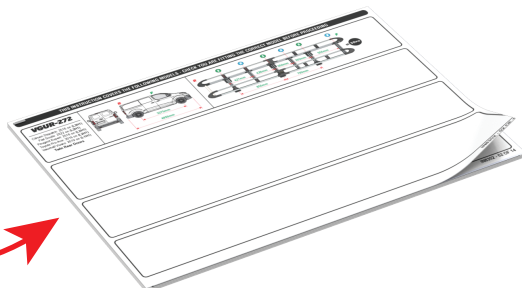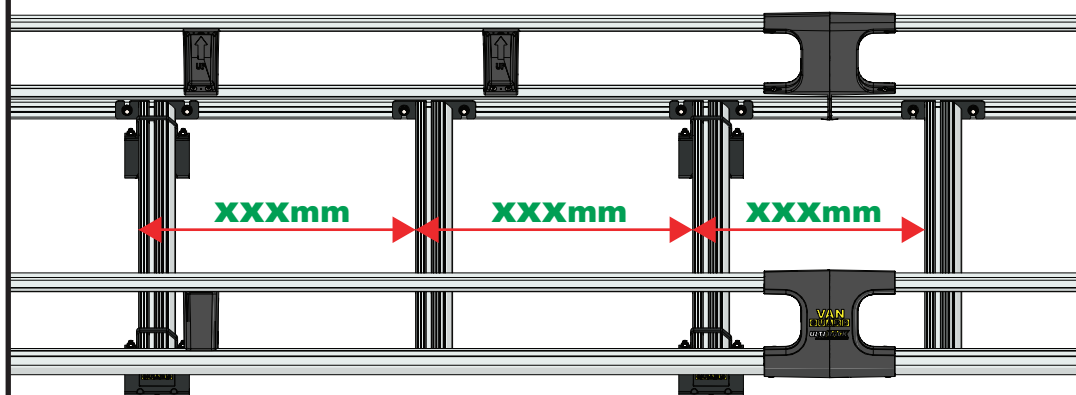


27

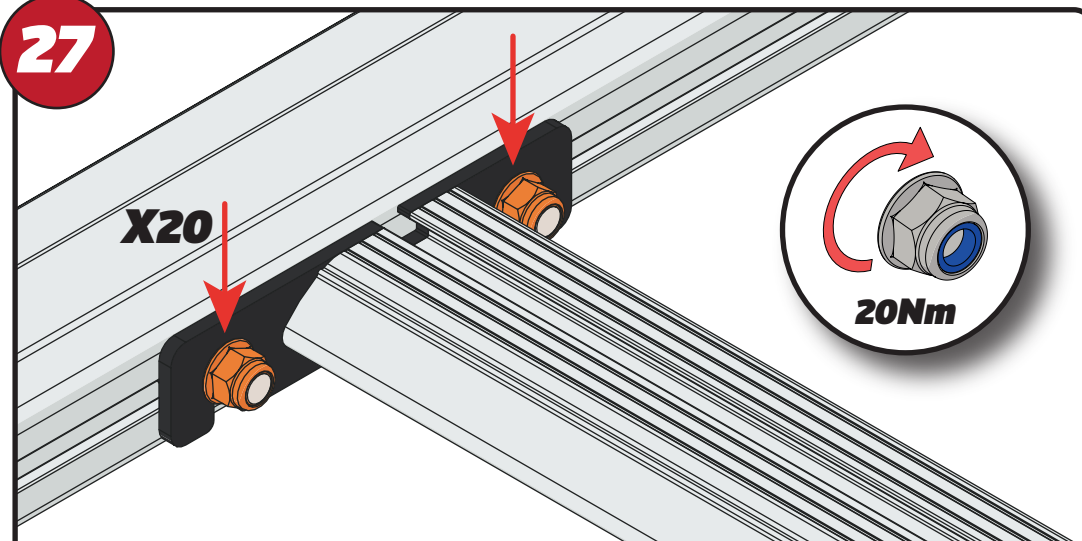



EN - TIGHTEN ALL OF THE CROSS BARS
DE - ALLE QUERSTANGEN FESTZIEHEN
FR - SERREZ TOUTES LES BARRES TRANSVERSALES
NL - DRAAI ALLE DWARSBALK VAN HET DAK AAN
ES - APIRIETE TODAS LAS BARRAS TRANSVERSALES
IT - STRINGERE TUTTE LE BARRE TRASVERSALI

SV - SKRU UPP ALLA KORSSTANGAR
DA - SKRU ALLE TAGBØJLER OP
NO - SKRU OPP ALLE TVERRSTENGER
PL - DOKRĘCIĆ WSZYSTKIE POPRZECZKI
CS - VŠECHNY PŘÍČNÉ TYČE SEŠROUJTE


28

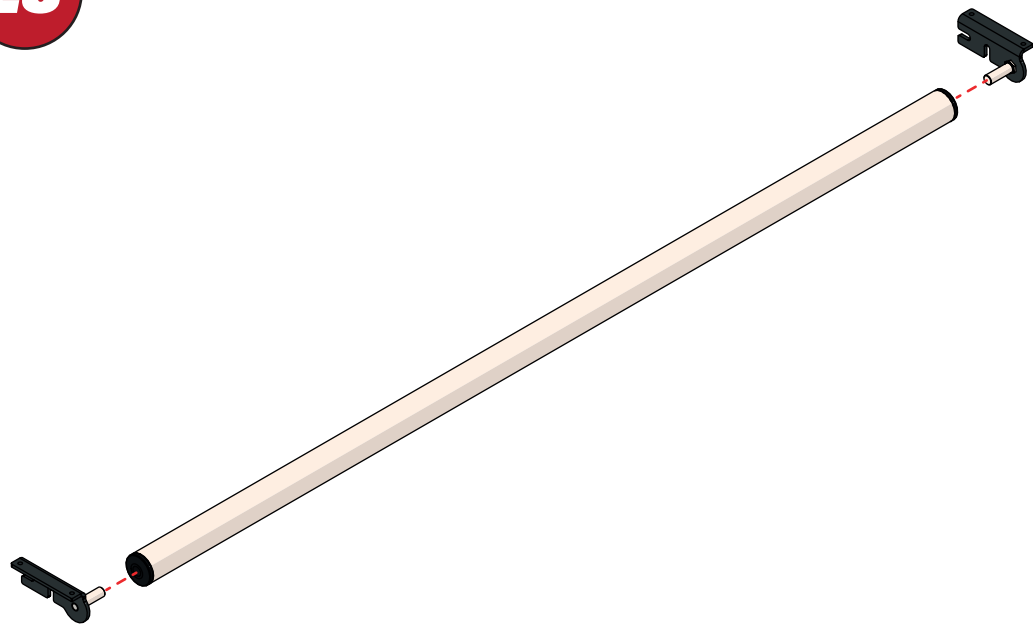


29

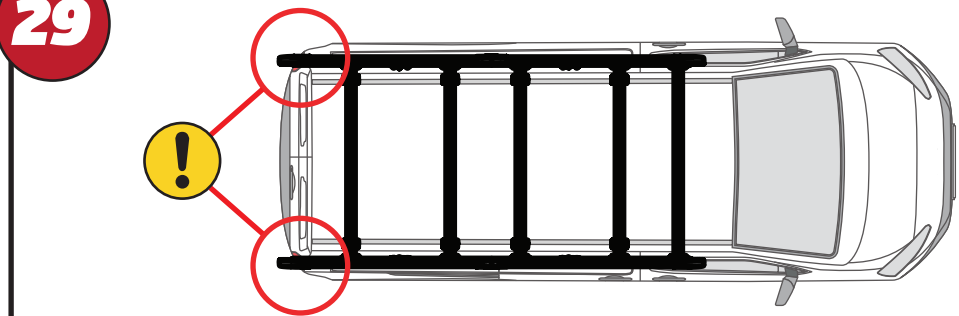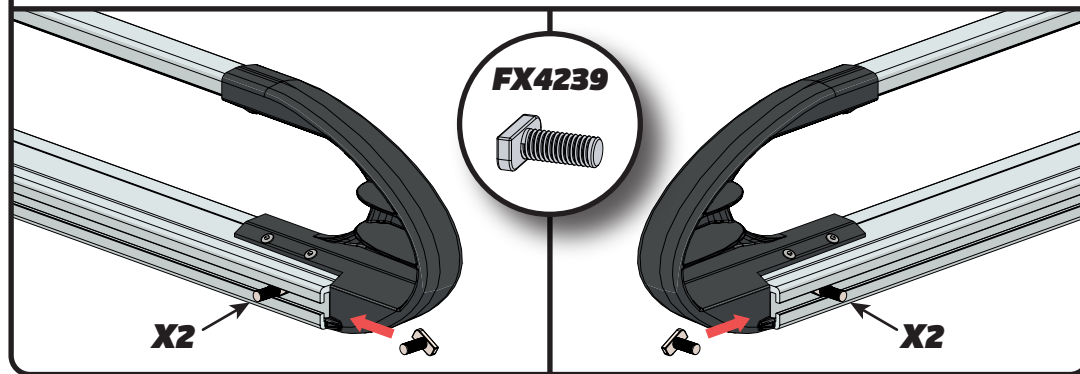


30

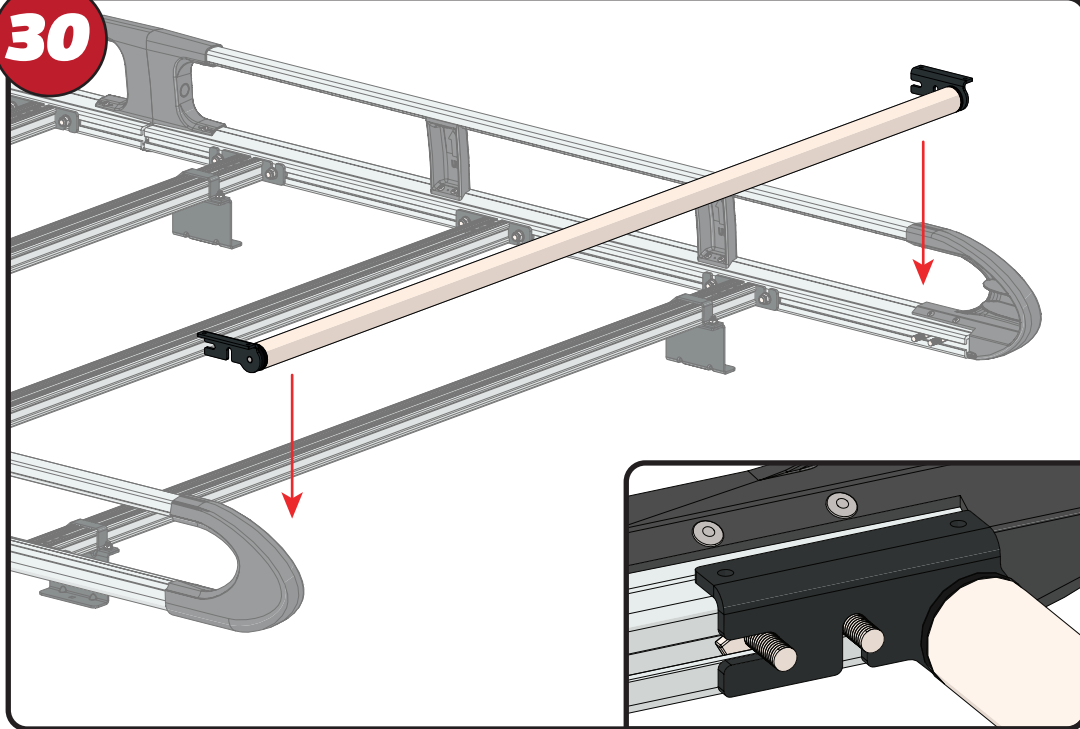


31

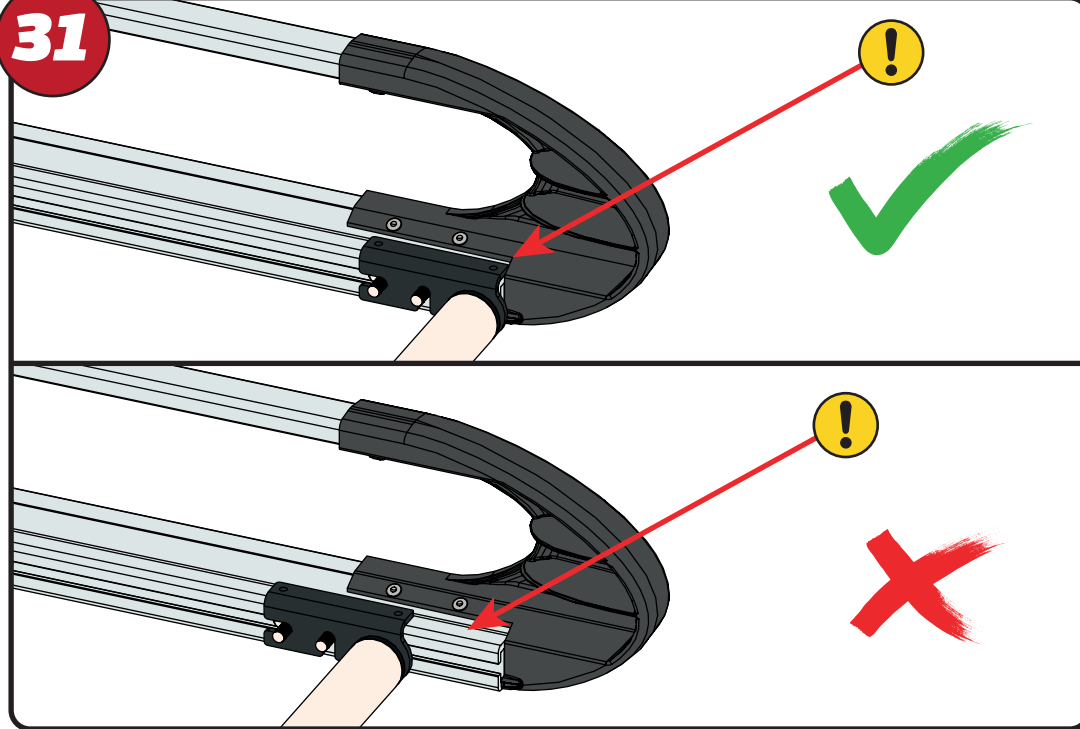


32

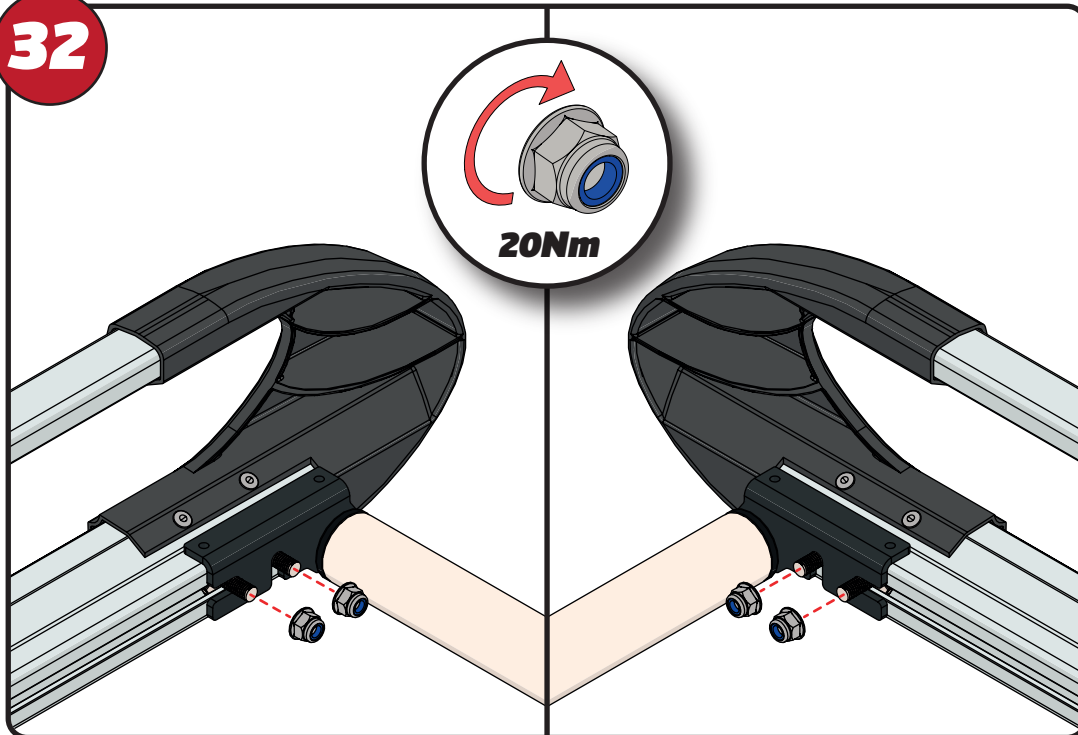


33

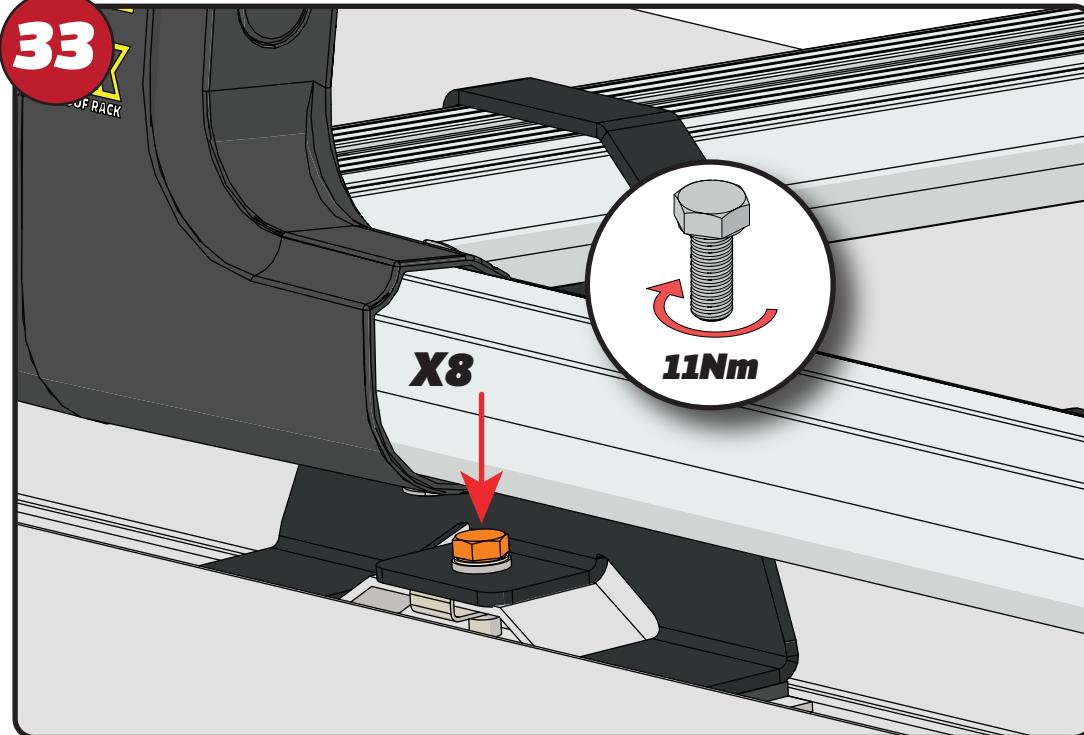

34

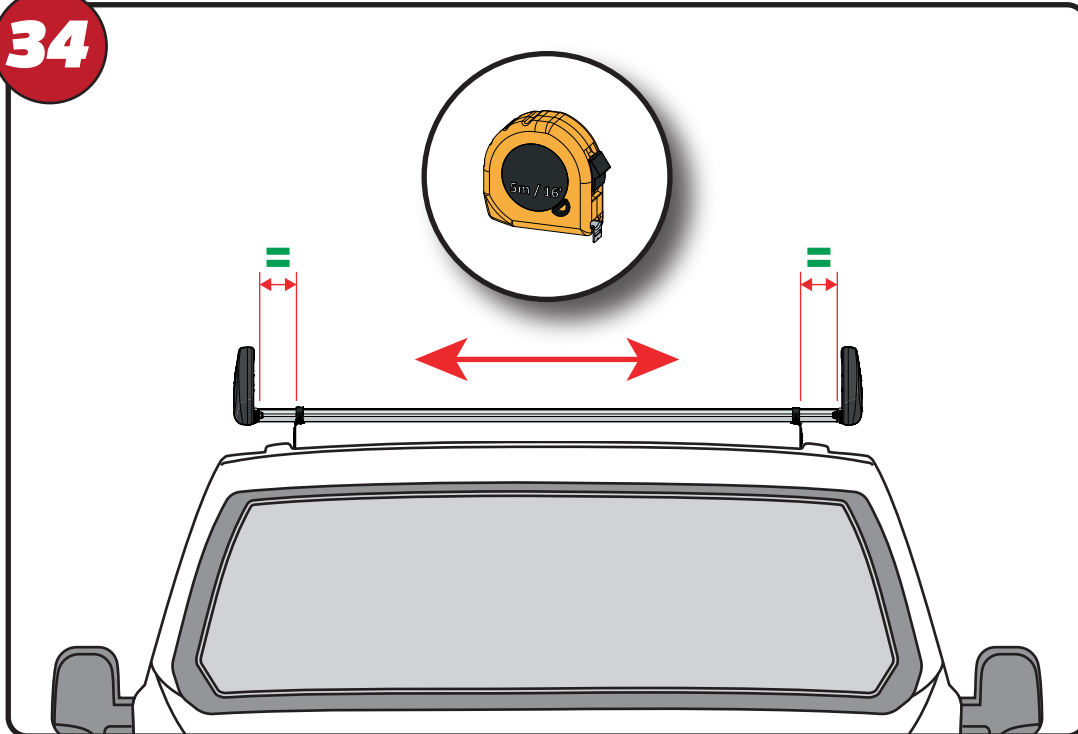


35

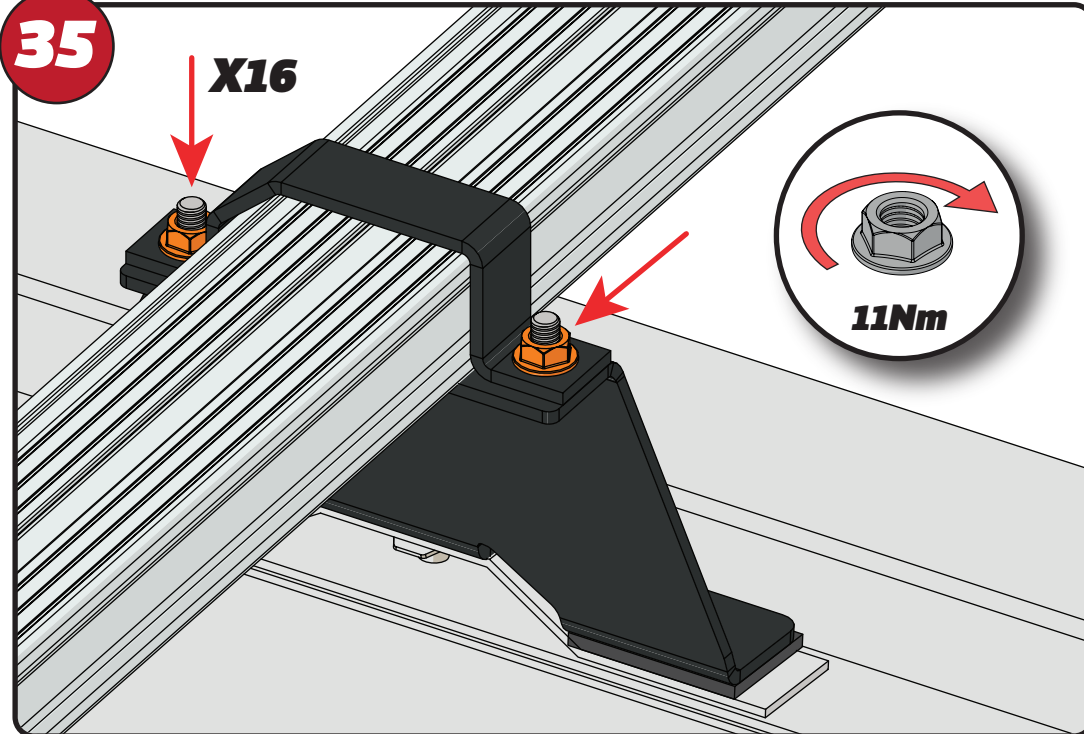

36




X24

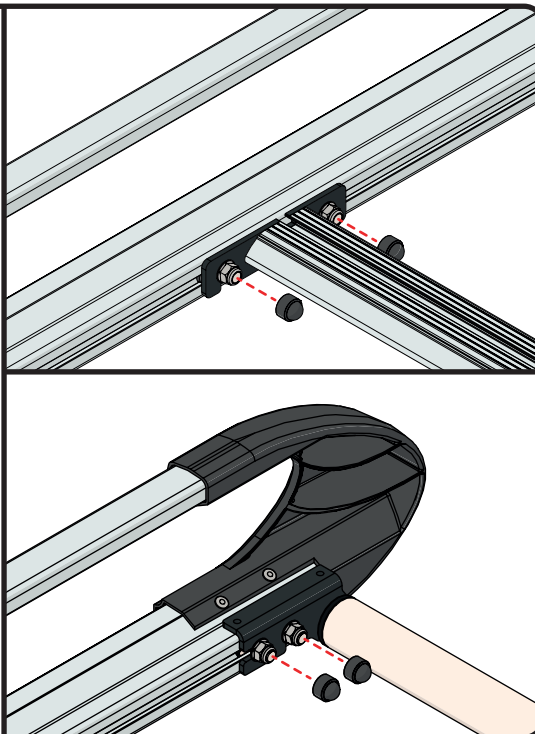


37



X8

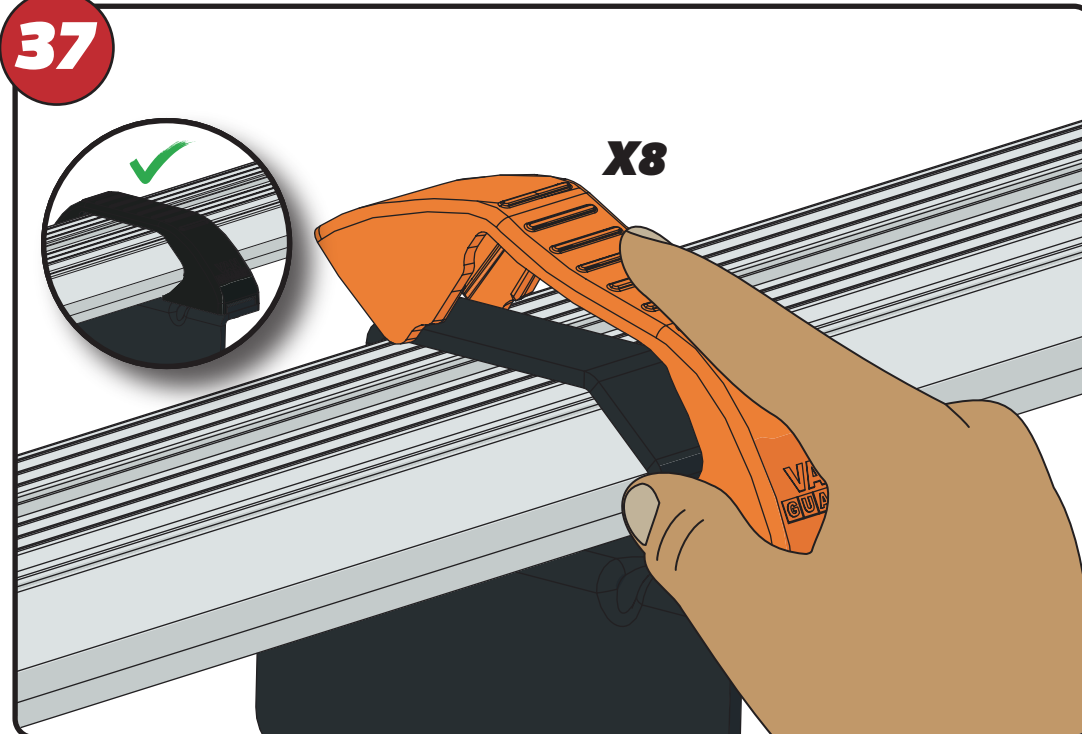

38

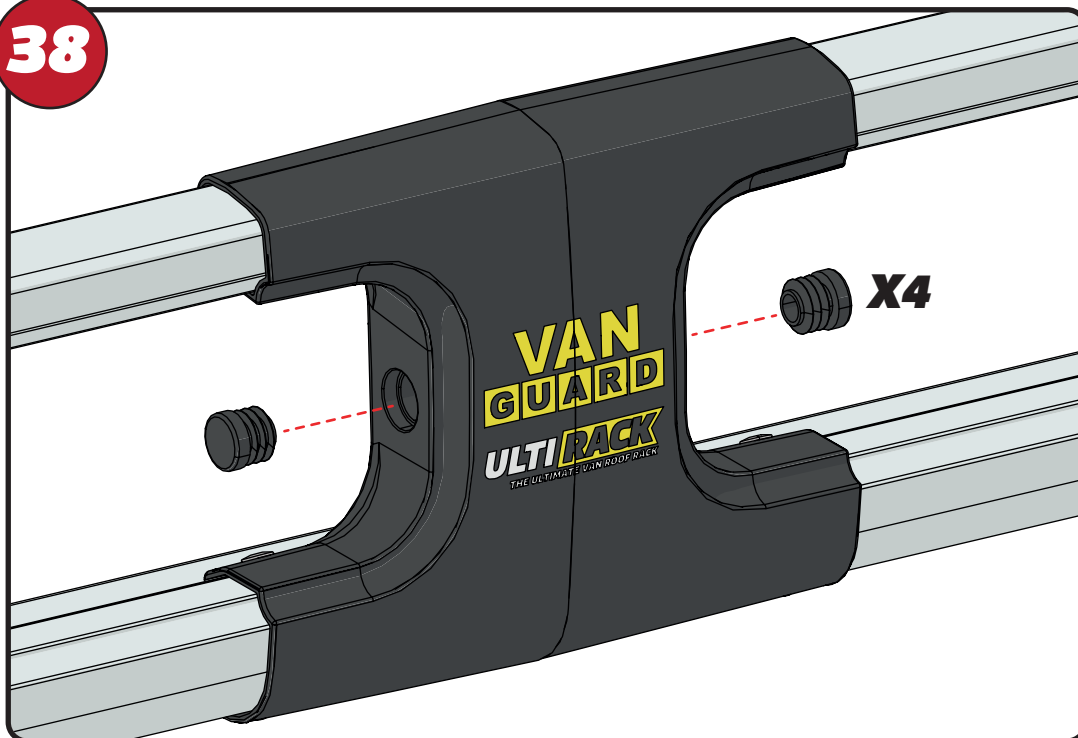

39

