
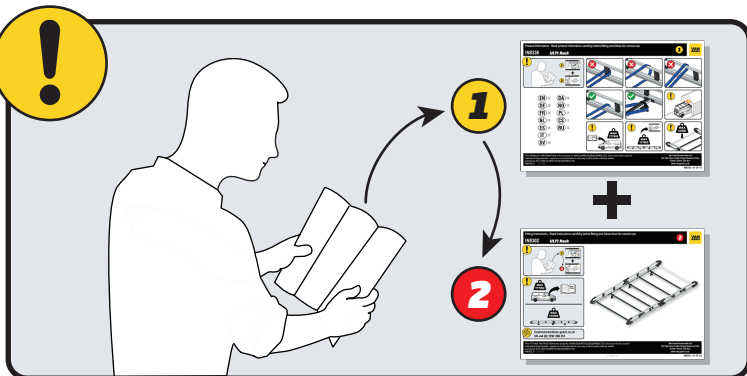
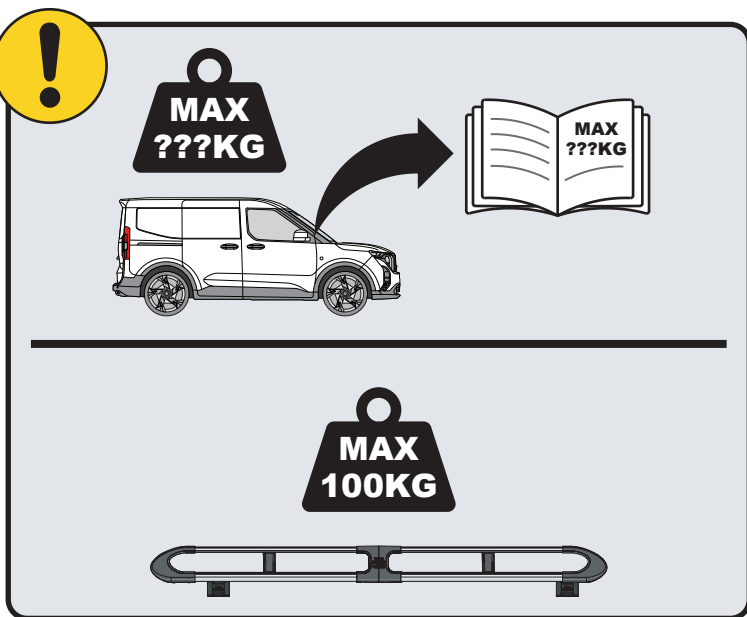


IN8433

ULTI Rack+



2

**VAN
GUARD**

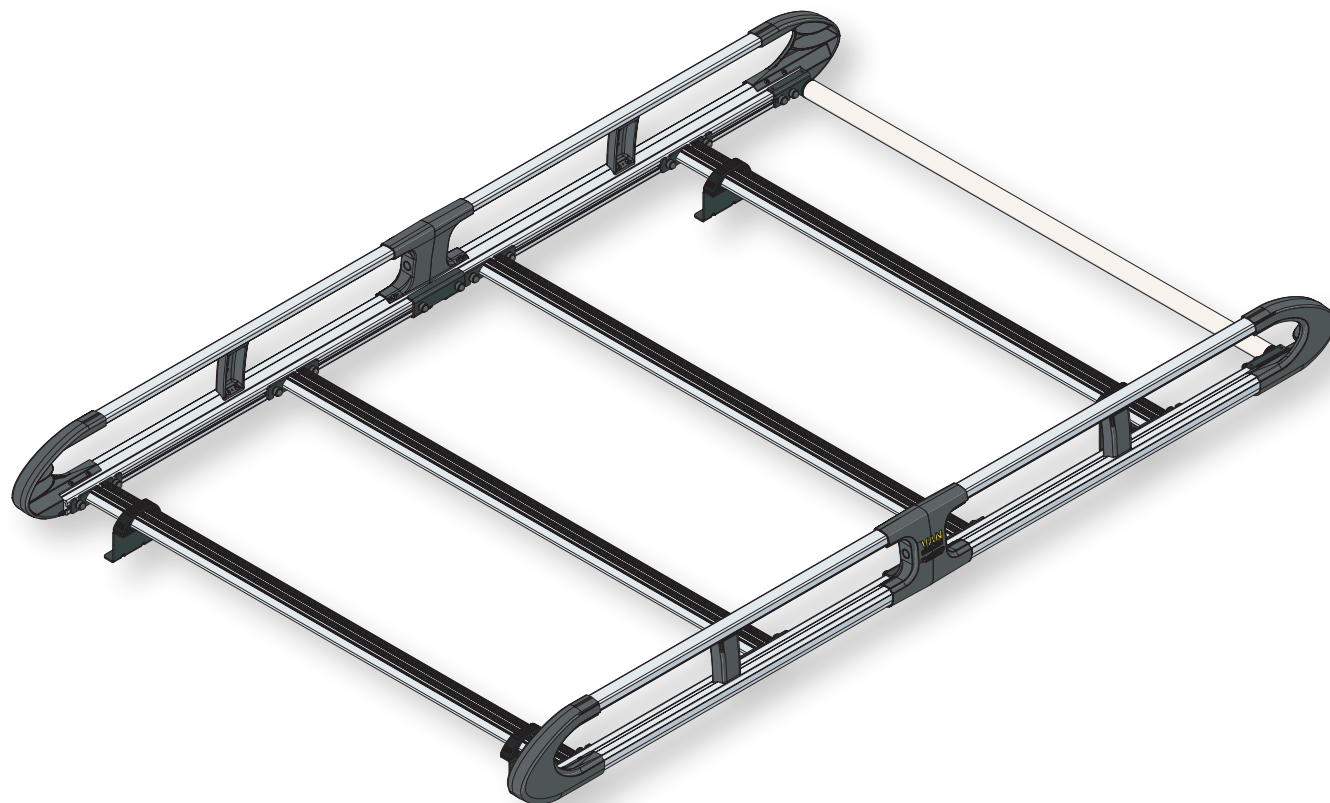

VGUR-294


Ford Transit Courier: 2024 on
L1H1
Twin Rear Doors

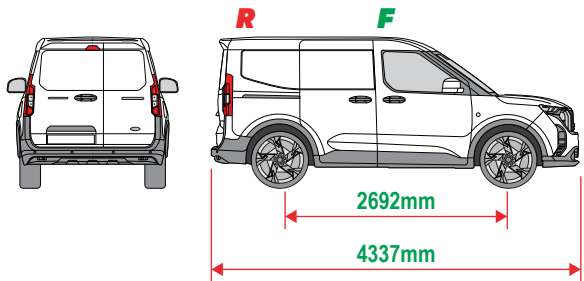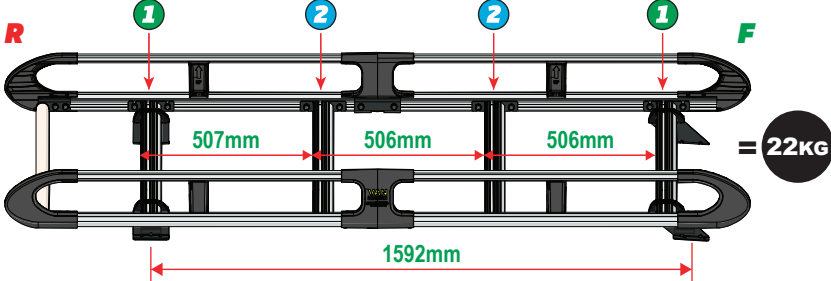



SUPPLIED COMPONENTS - CHECK ALL PARTS ARE PRESENT AND CORRECT BEFORE PROCEEDING (1 OF 2)

TOOLS REQUIRED


10MM X1

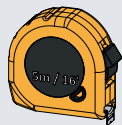


13MM X1

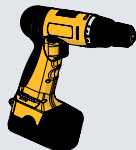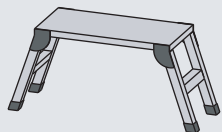


AS3531 X2
(2000 / A)

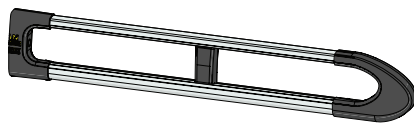


MA6118 X10




FX4241 X24



ME1622 X2




AS3530 X2
(2000 / B)

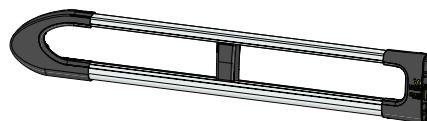


FX4008 X1




MA6145 X1



ME1623 X2



ME1626 X4
(1264mm)




FX4001 X2
(M8X40)




FX4235 X16
(M5X25)




ME0203 X4




AS3158 X1
(1250mm)




MA6007 X4




FX4248 X1
(T25)




MA6065 X4

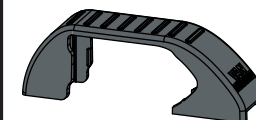


AS3590 X1

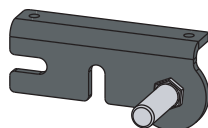


MA6093 X8



FX4239 X24
(M8X20)




ME1620 X2




FX4016 X8
(M6)



AS3591 X1




ME0316 X8




FX4240 X24
(M8)




ME1621 X2



FX4042 X8
(M6X16)




ME2198 X2




FX4013 X8

(M6)




ME2199 X1



FX4014 X8



ME2210 X1



FX4021 X8


(M6X25)




ME2451 X1



MA6188 X4



ME1635 X2




FX4010 X8

(M6)




01

1L



X2

1R



X2




2L





X2

2R



X2

02

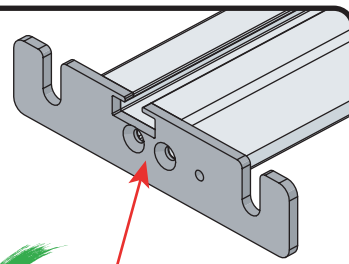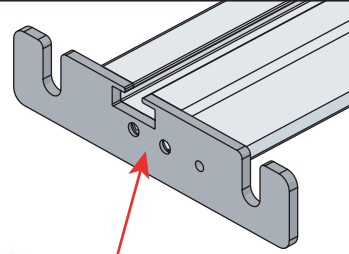


03

01


FX4248




+

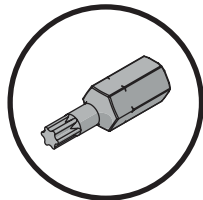

02

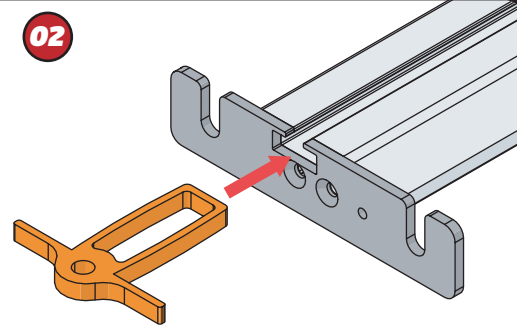


04

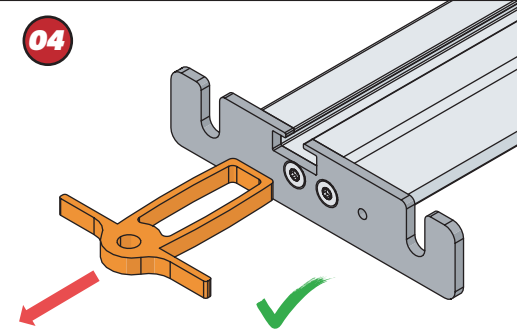

04




1

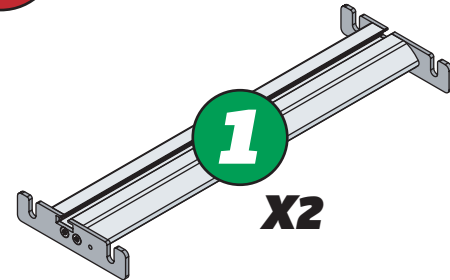


X2

2



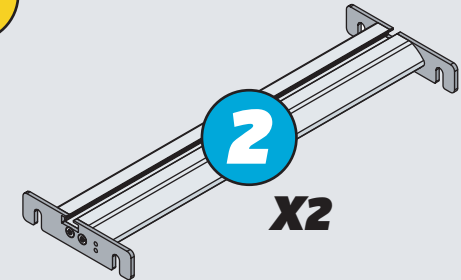


X2


03




11Nm

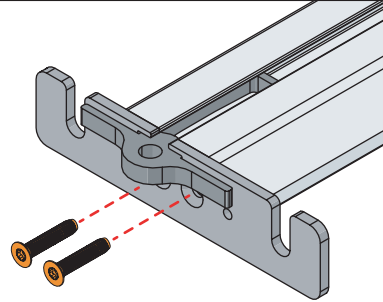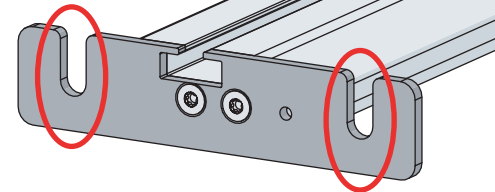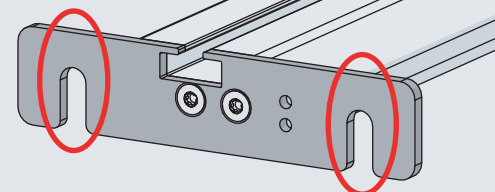


05

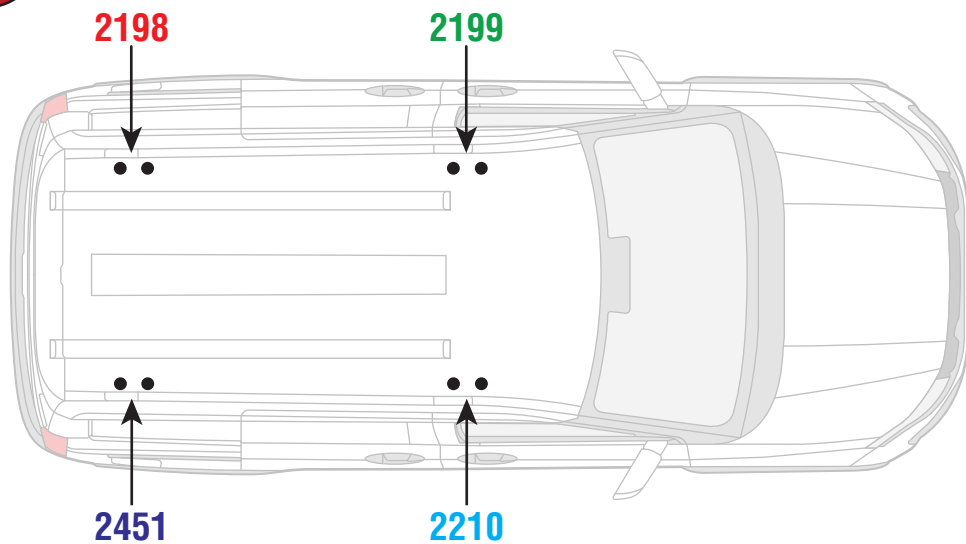


2198

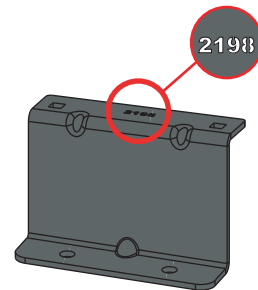


2199

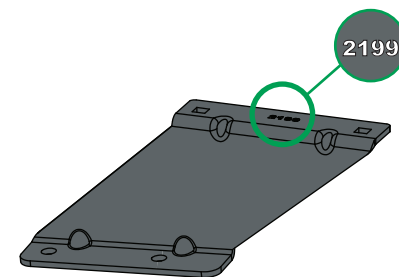


2210

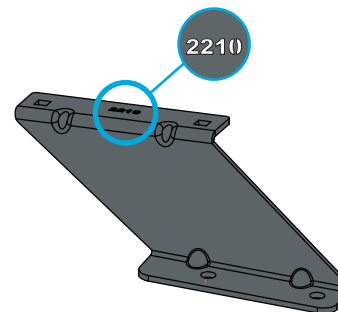


2451

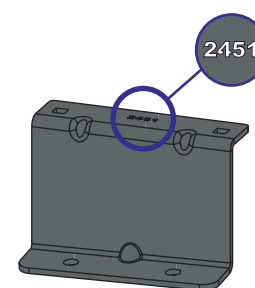

06

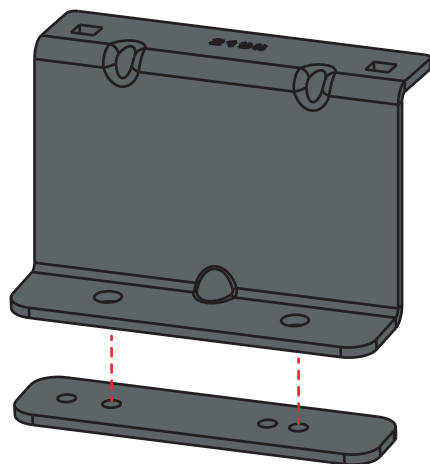


07

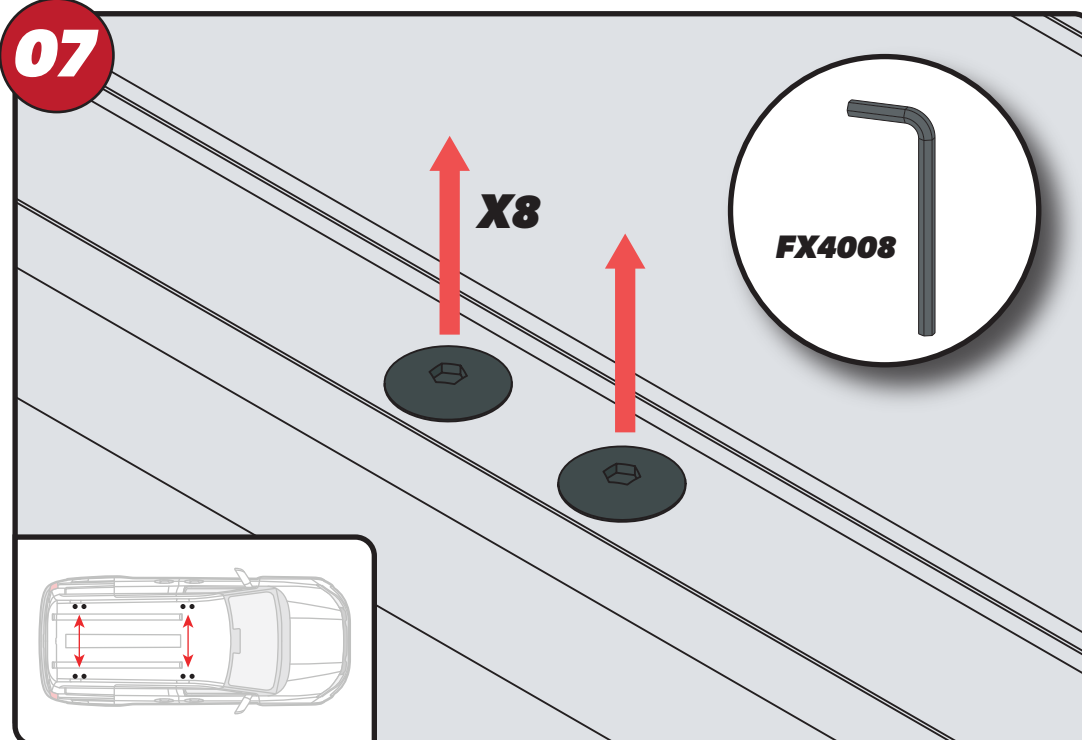


EN - STICK GASKETS TO ALL BRACKETS
 DE - KLEBEN SIE DIE DICHTUNG AN ALLEN HALTERUNGEN
 FR - COUSSINETS ADHÉSIFS À TOUS LES SUPPORTS
 NL - PLAK PAKKING OP ALLE BEUGELS
 ES - PEGA LAS ALMOHADILLAS A TODOS LOS SOPORTES
 IT - ADESIVI GUARNIZIONI A TUTTE LE STAFFE

SV - FÄST GUMMI PÅ ALLA FÄSTEN
 DA - KLÆB GUMMI PÅ ALLE BESLAG
 NO - PLIST GUMMI PÅ ALLE BRACKETTER
 PL - NAKLEJ USZCZELKI DO WSZYSTKICH WSPORNIKÓW
 CS - PŘILEPTE TĚSNĚNÍ NA VŠECHNY DRŽÁKY


08

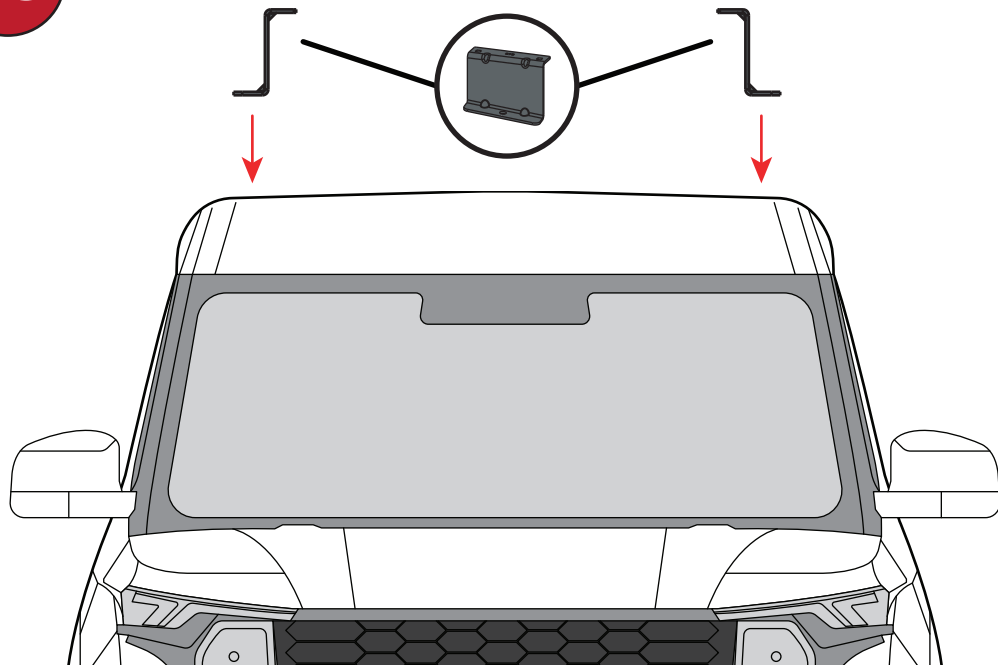


09

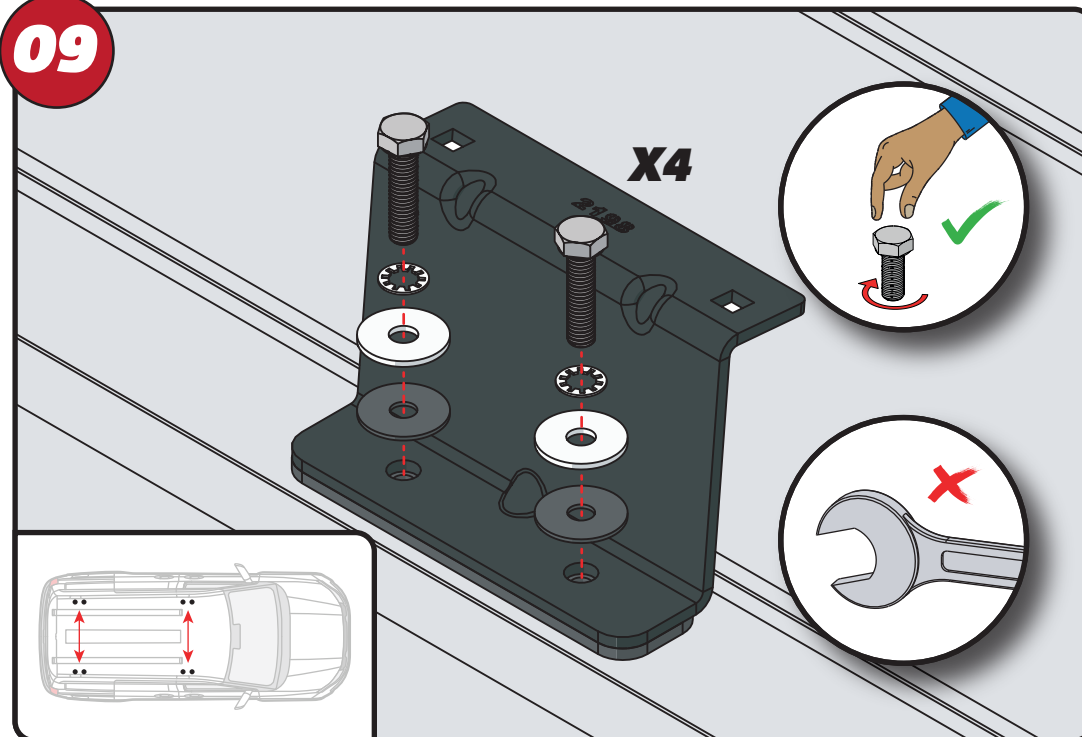

10

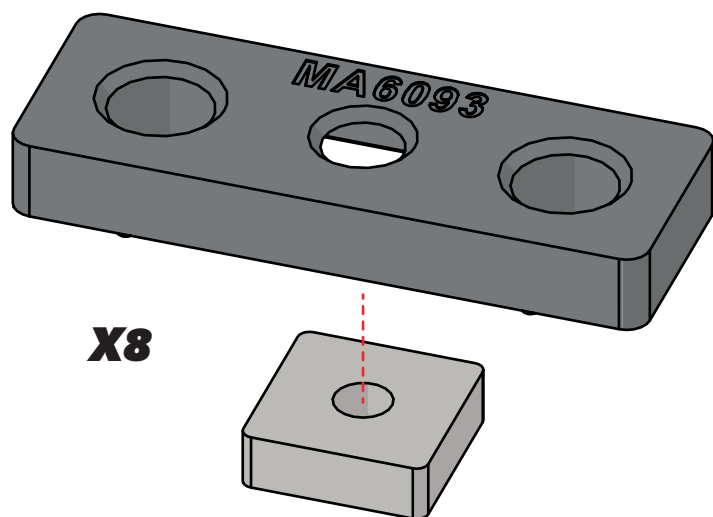


11

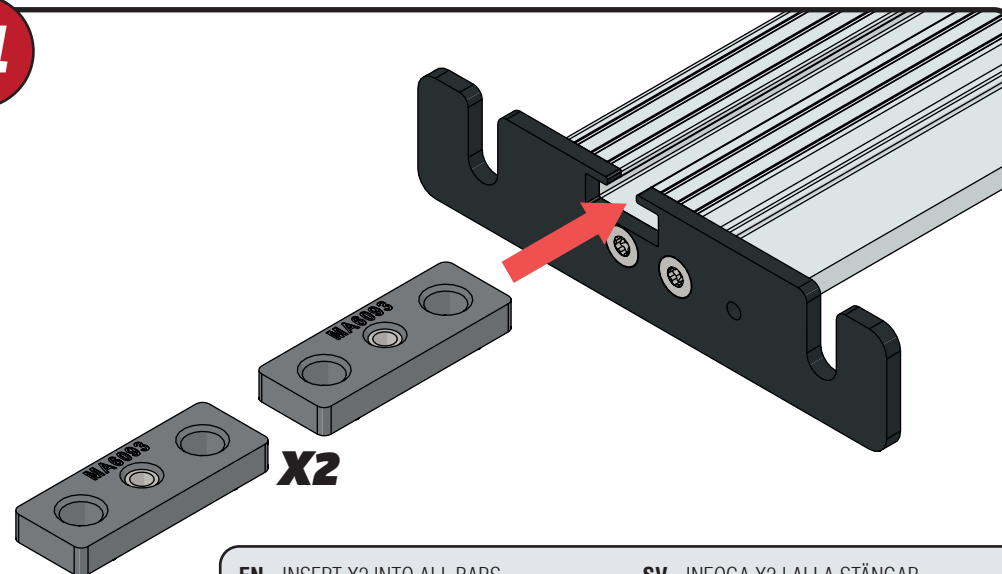



EN - INSERT X2 INTO ALL BARS
DE - X2 IN ALLE STANGEN EINFÜGEN
FR - INSÉRER X2 DANS TOUTES LES BARRES
NL - PLAATS X2 IN ALLE BARS
ES - INSERTAR X2 EN TODAS LAS BARRAS
IT - INSERIRE X2 IN TUTTE LE BARRE

SV - INFOGA X2 I ALLA STÄNGAR
DA - INDSÆT X2 I ALLE STÆNGER
NO - SETT X2 INN I ALLE TAKSTENGER
PL - WSTAW X2 DO WSZYSTKICH PRĘTÓW
CS - VLOŽTE X2 DO VŠECH TYČÍ


12

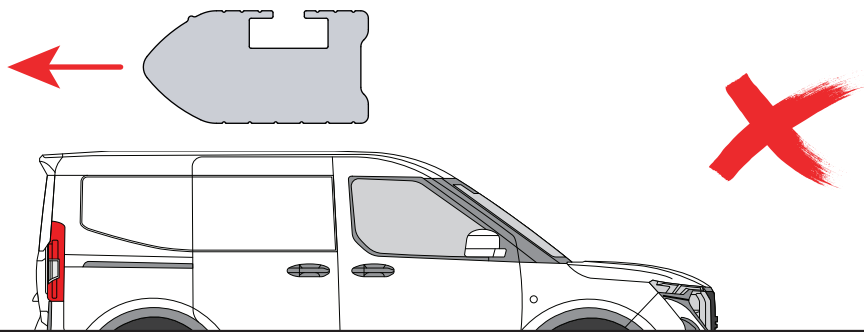


13

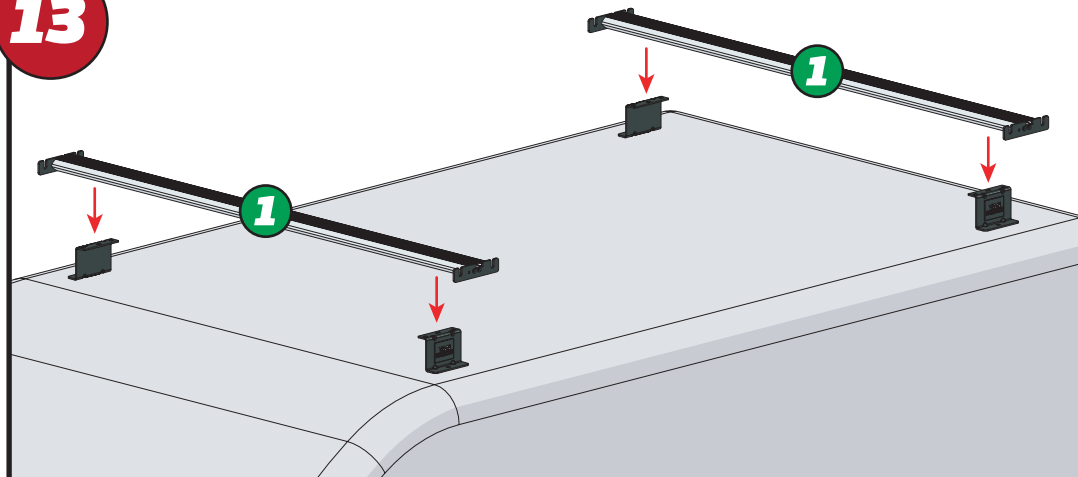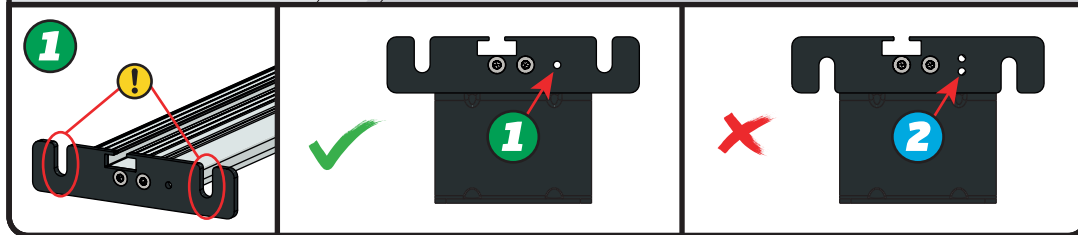


14

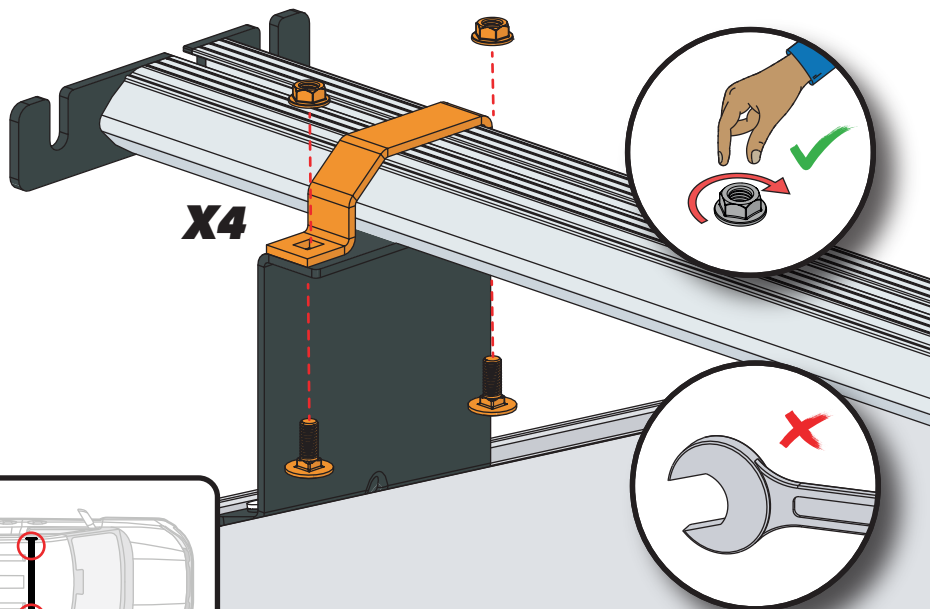


15

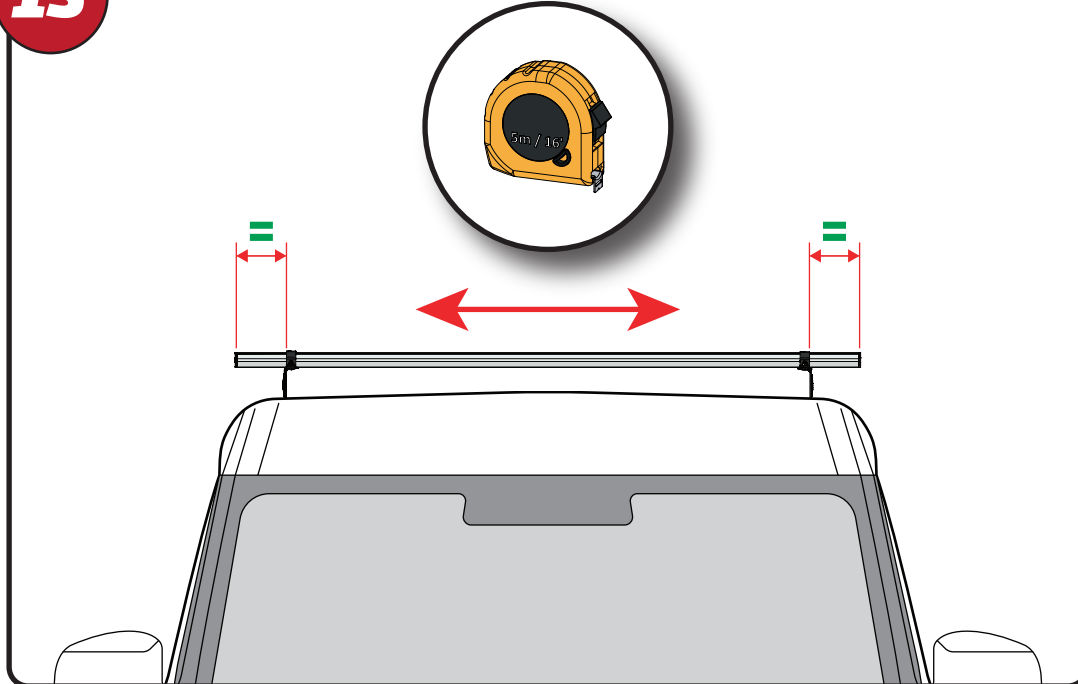


16

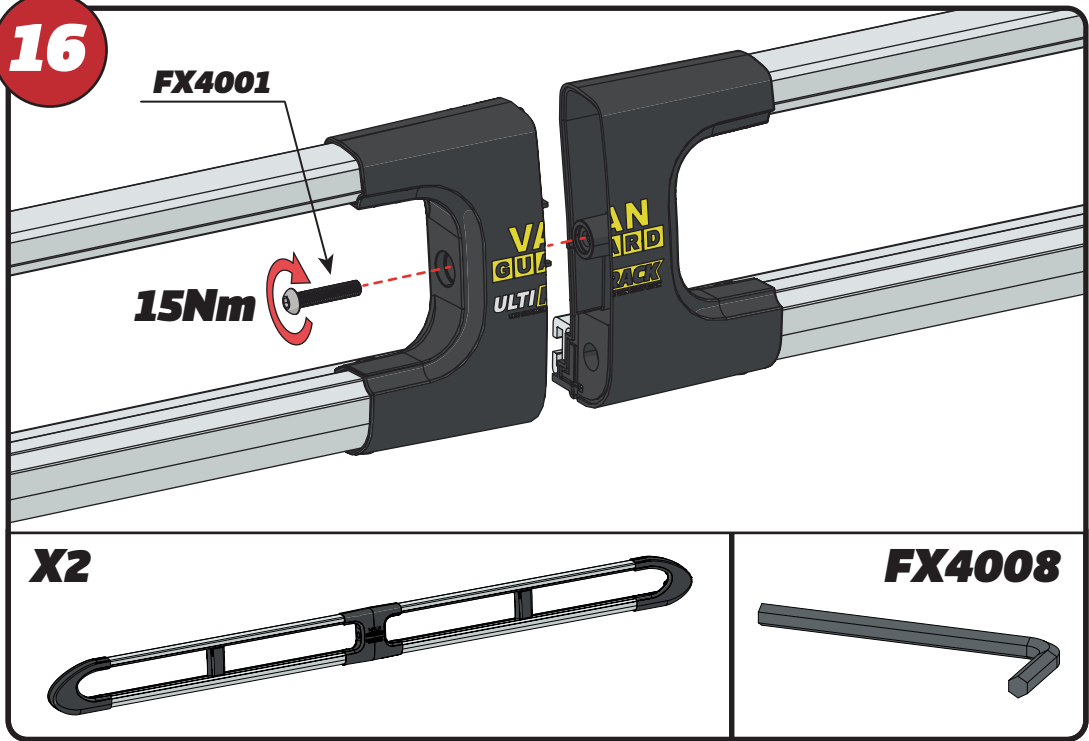


17

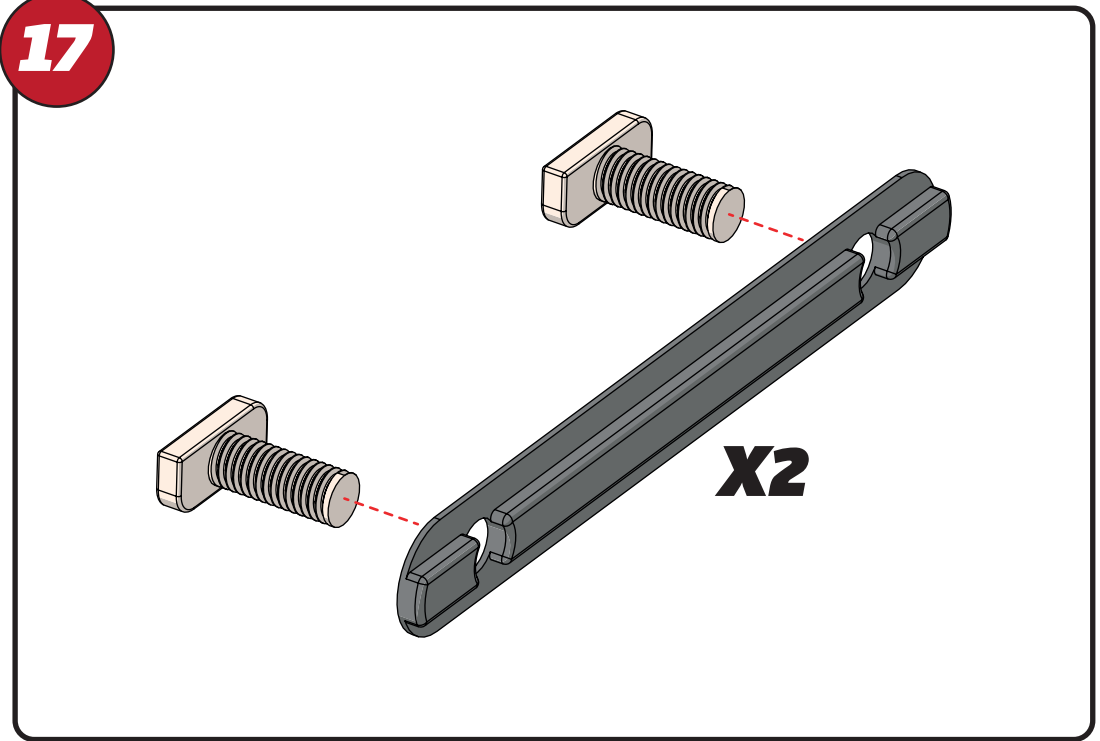


18

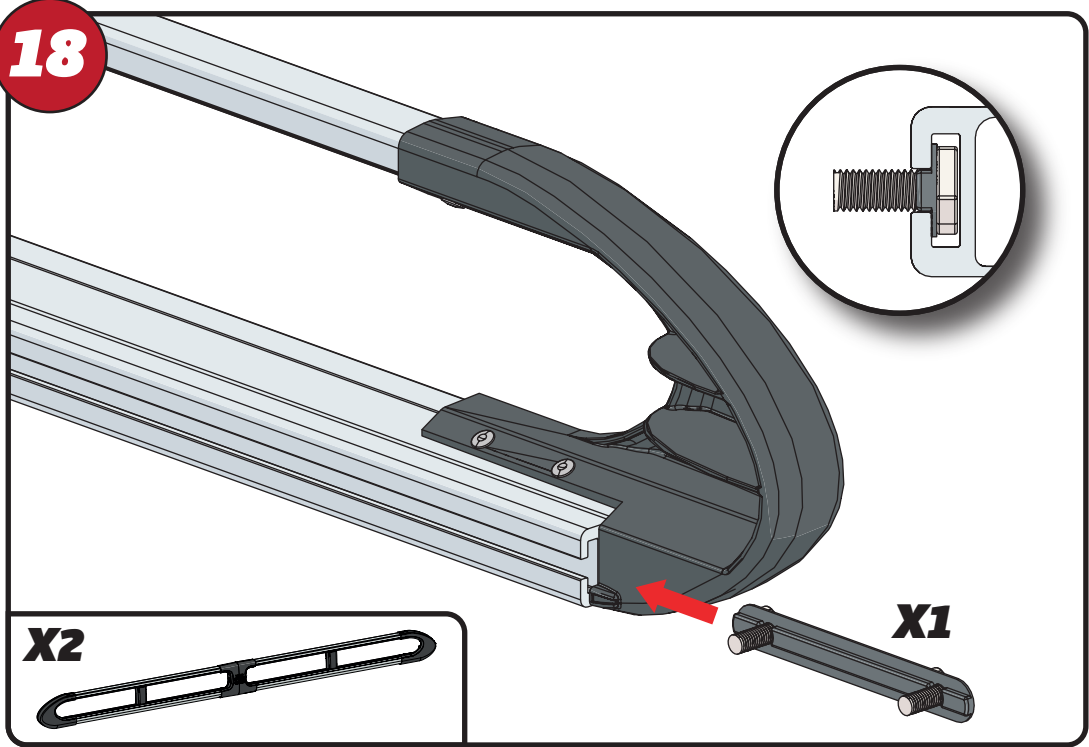


19

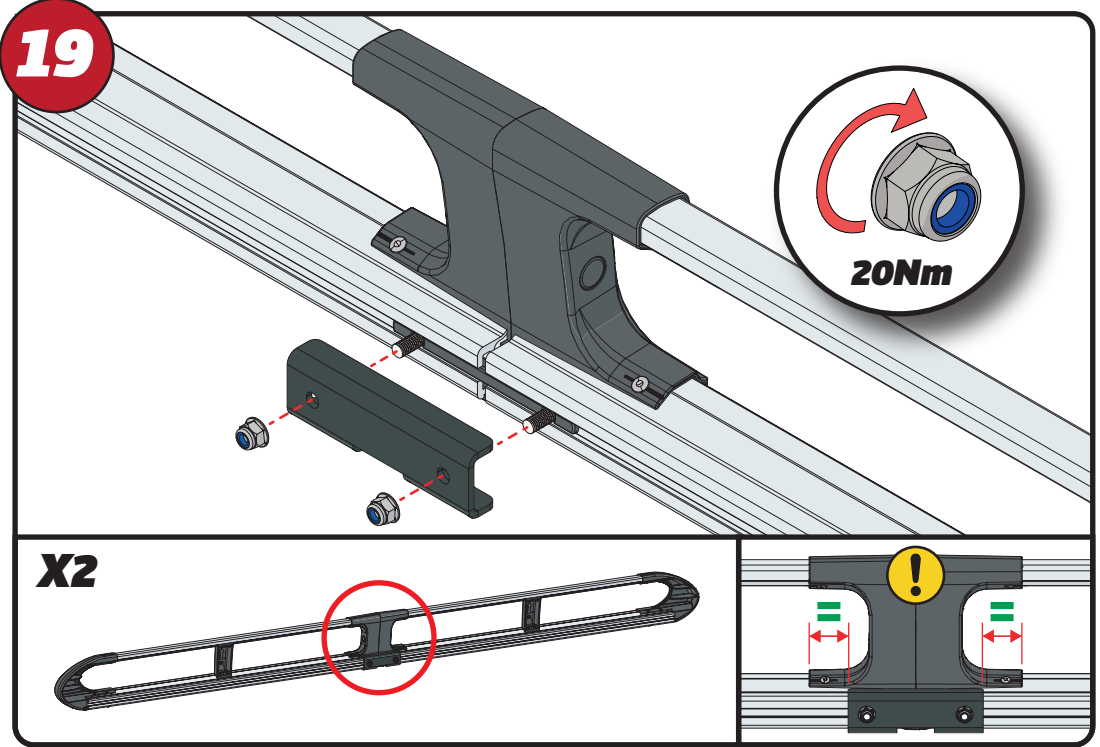


20

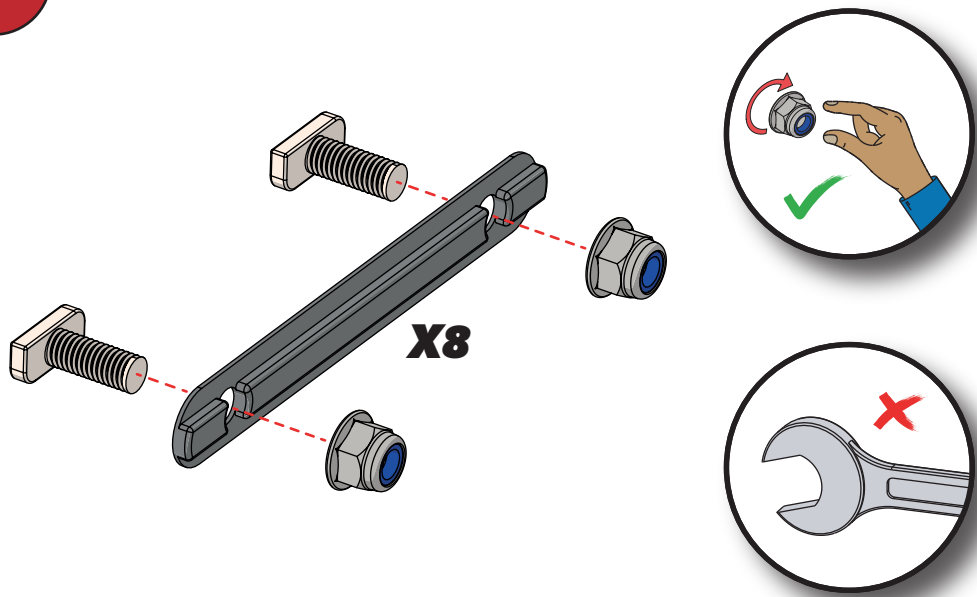


21

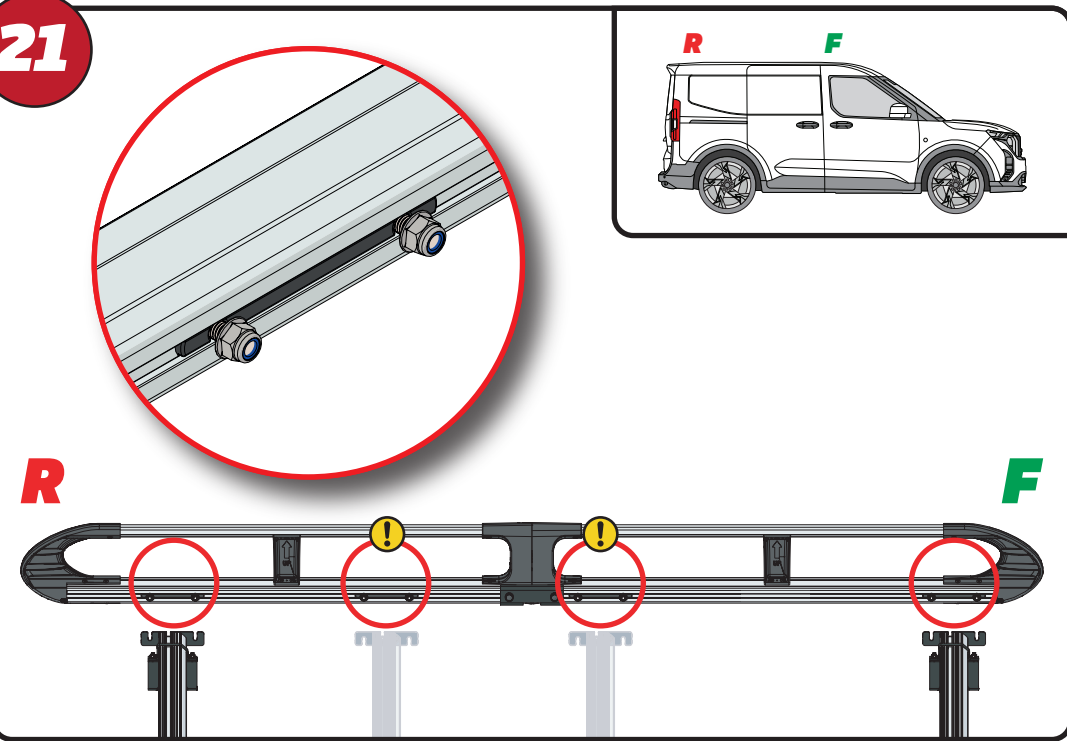


22

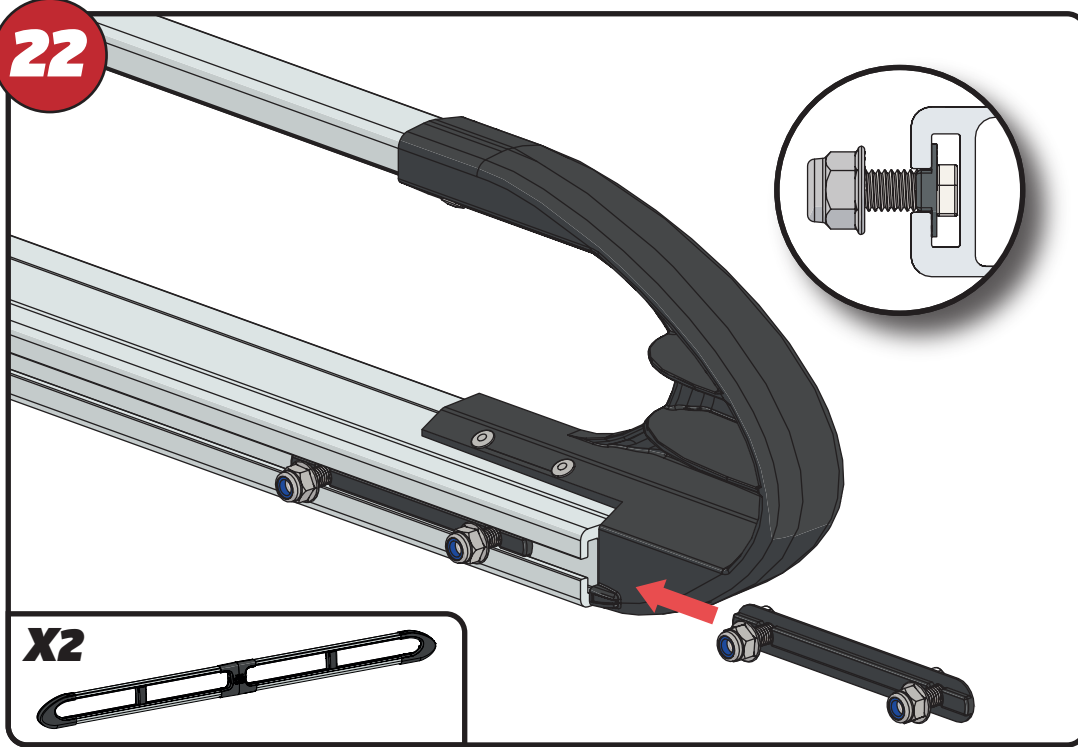


23

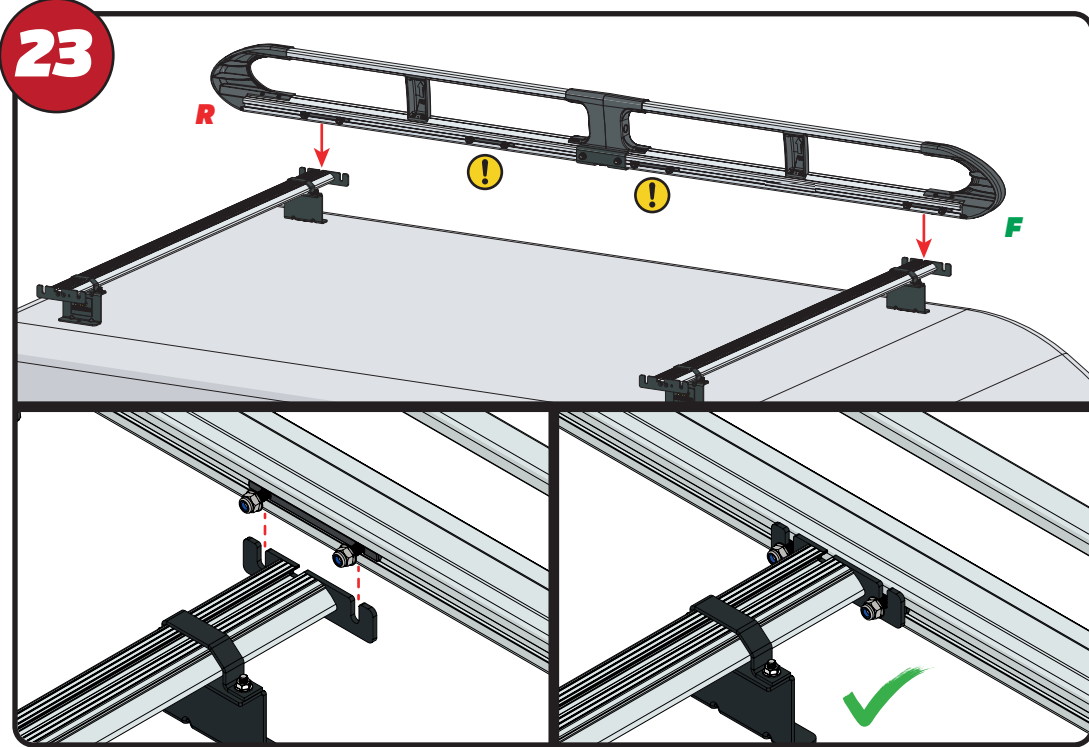


24

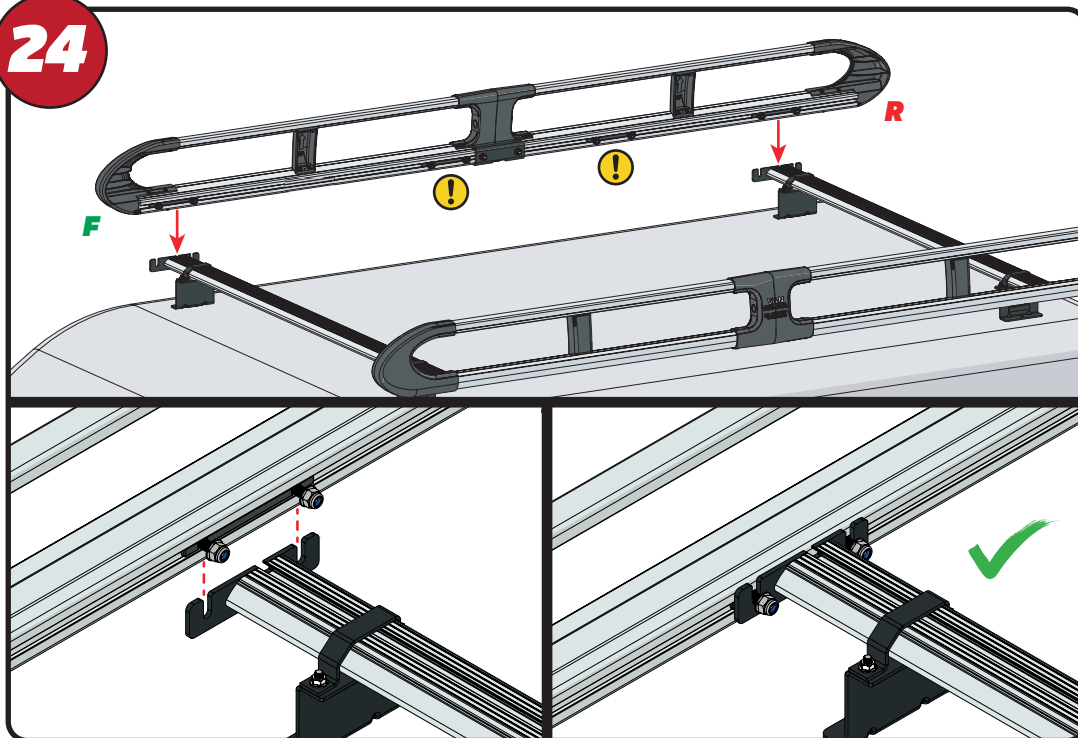


25

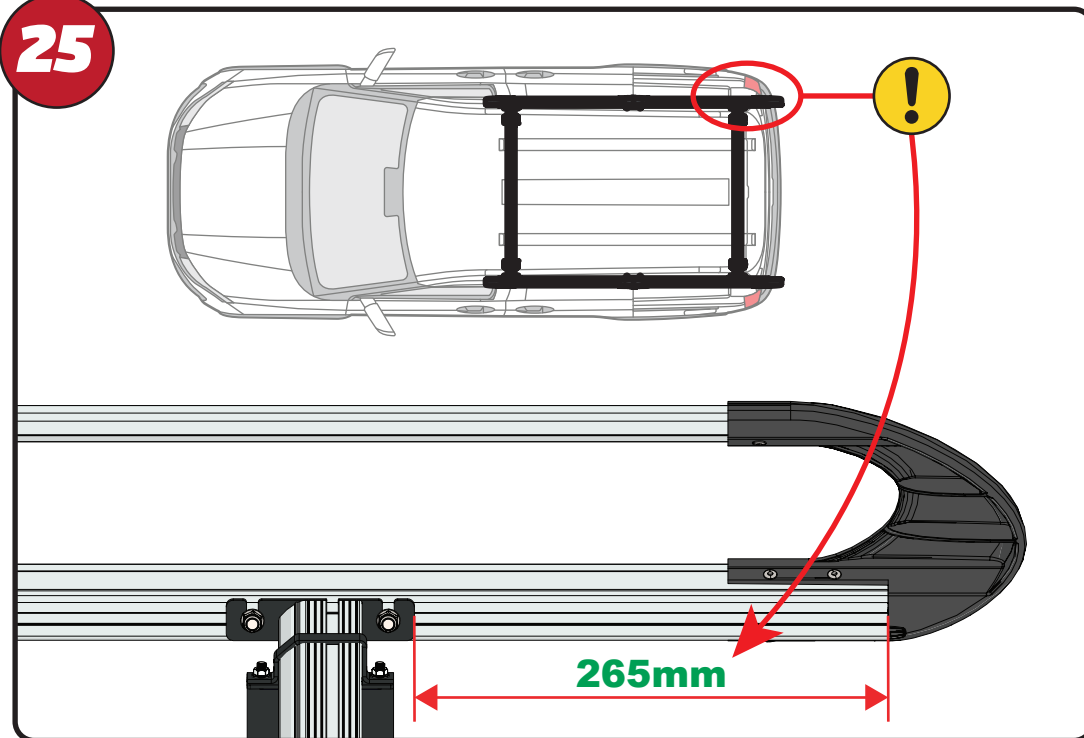

26

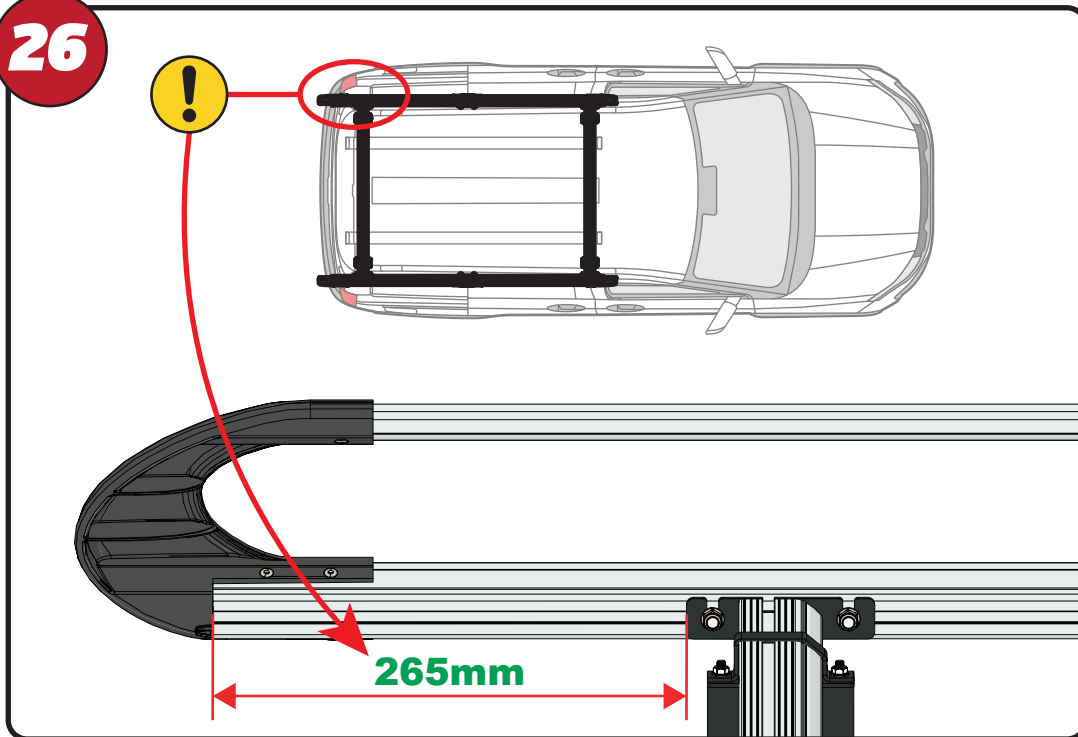


27

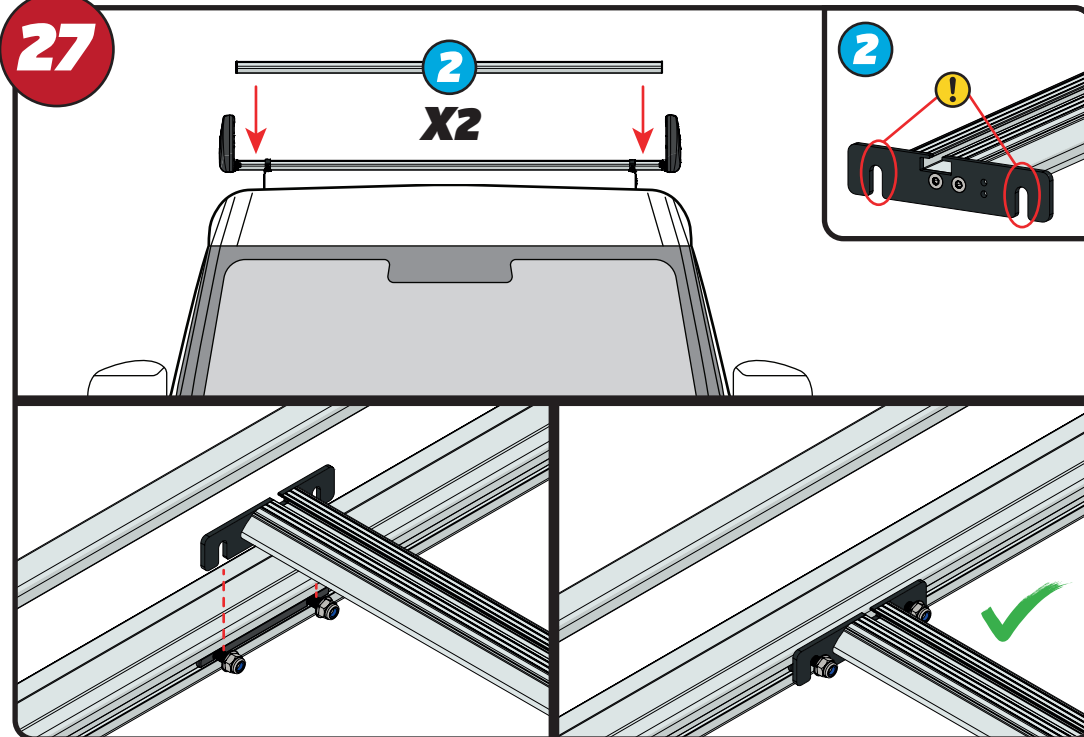

28

XXX =
PAGE 2 OF 15

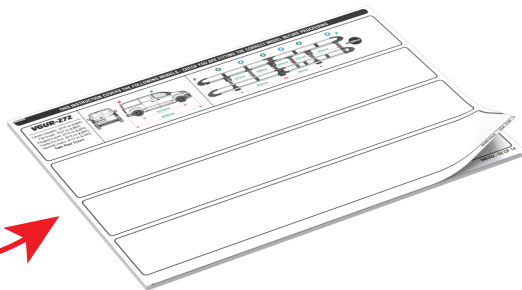

XXXmm

XXXmm

XXXmm

29


X16

20Nm


EN - TIGHTEN ALL OF THE CROSS BARS
DE - ALLE QUERSTANGEN FESTZIEHEN
FR - SERREZ TOUTES LES BARRES TRANSVERSALES
NL - DRAAI ALLE DWARSBALK VAN HET DAK AAN
ES - APRIETE TODAS LAS BARRAS TRANSVERSALES
IT - STRINGERE TUTTE LE BARRE TRASVERSALI

SV - SKRU UPP ALLA KORSSTANGAR
DA - SKRU ALLE TAGBØJLER OP
NO - SKRU OPP ALLE TVERRSTENGER
PL - DOKRĘCIĆ WSZYSTKIE POPRZECZKI
CS - VŠECHNY PŘÍČNÉ TYČE SEŠROUJTE

30

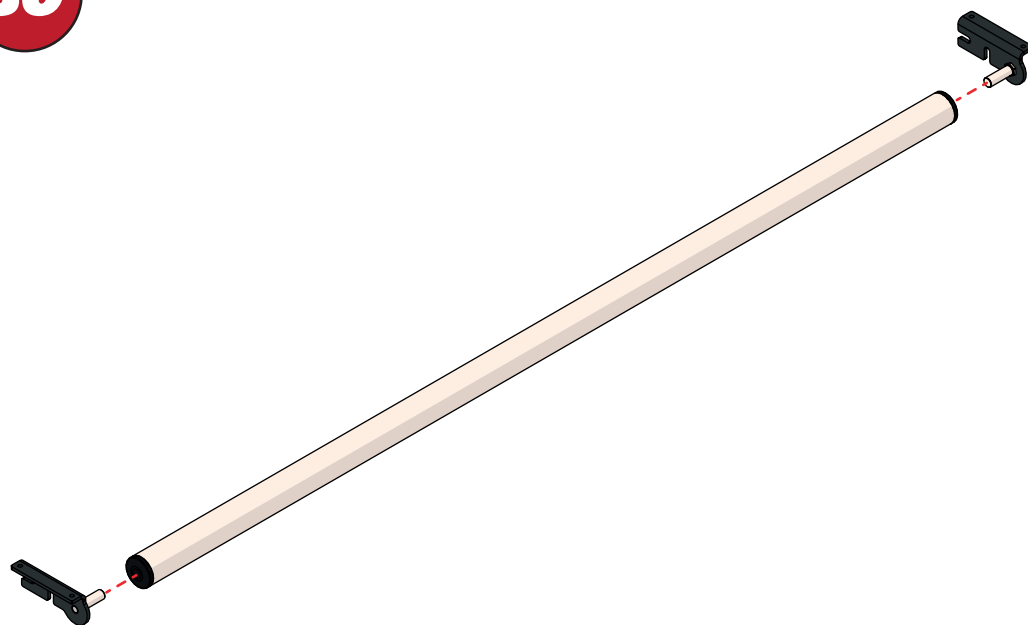

31

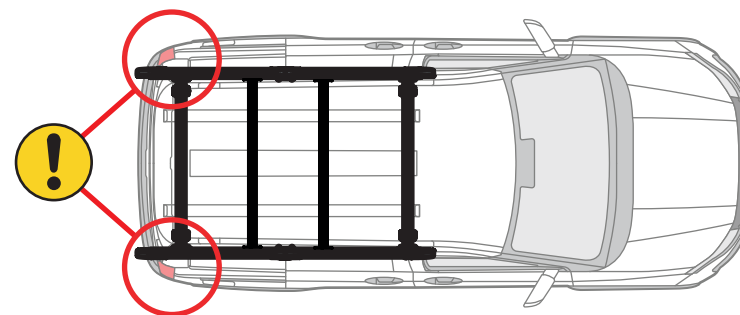


FX4239


X2

X2


32

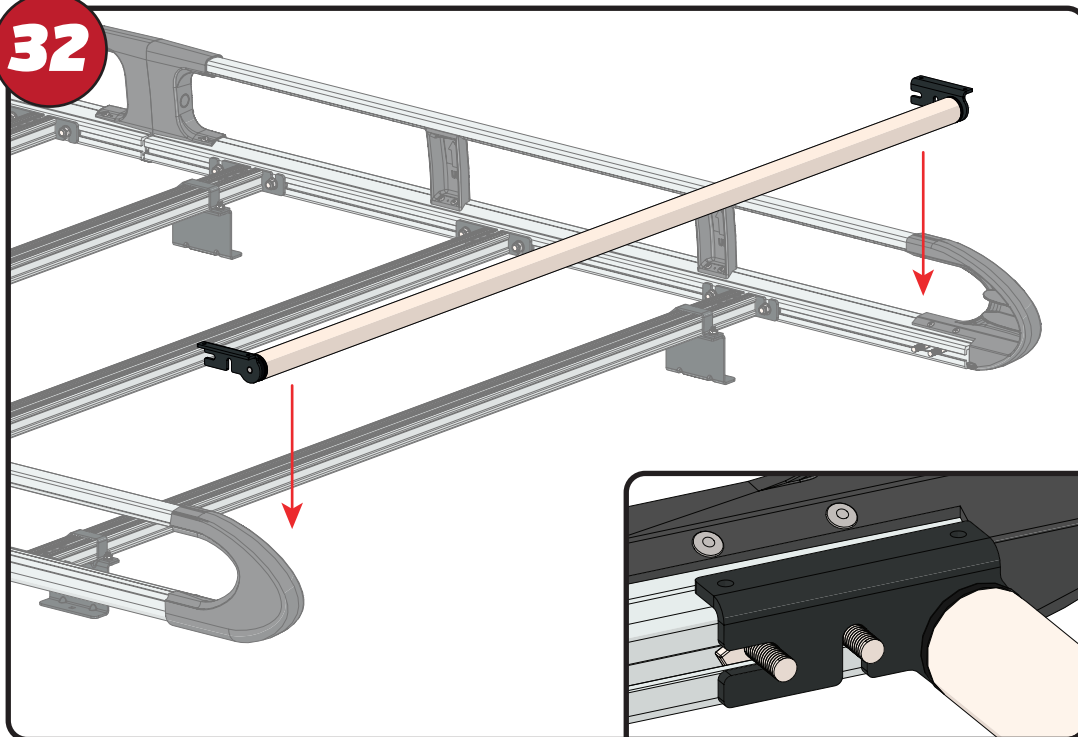


33

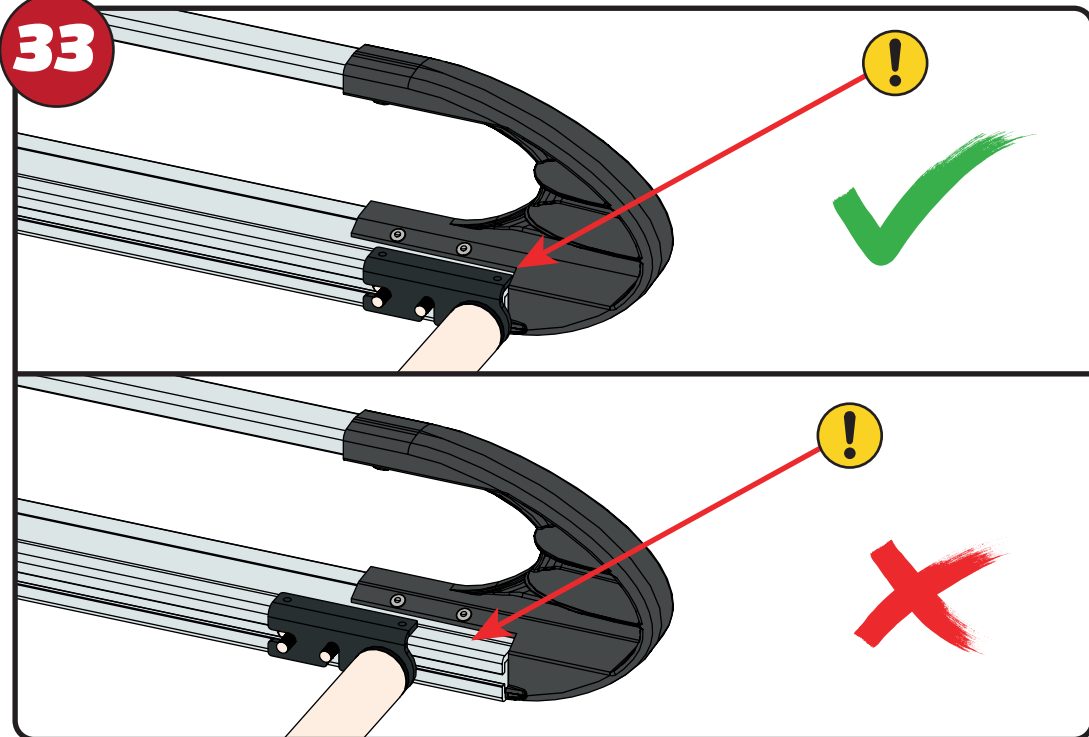


34

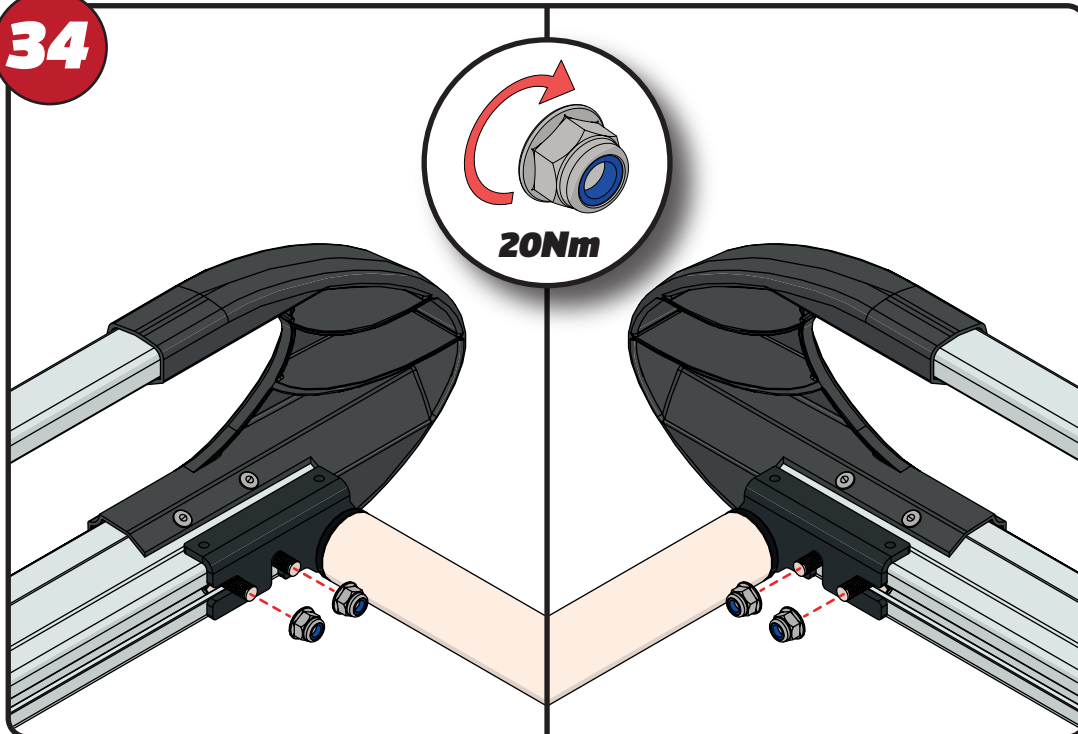


35

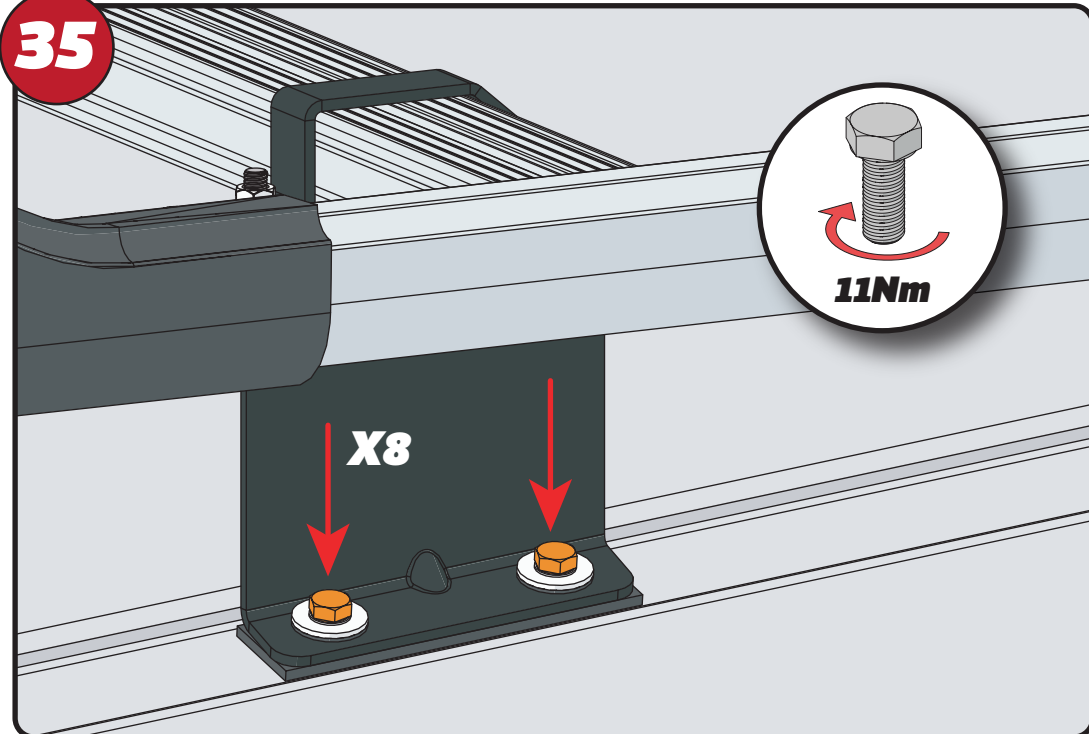


36

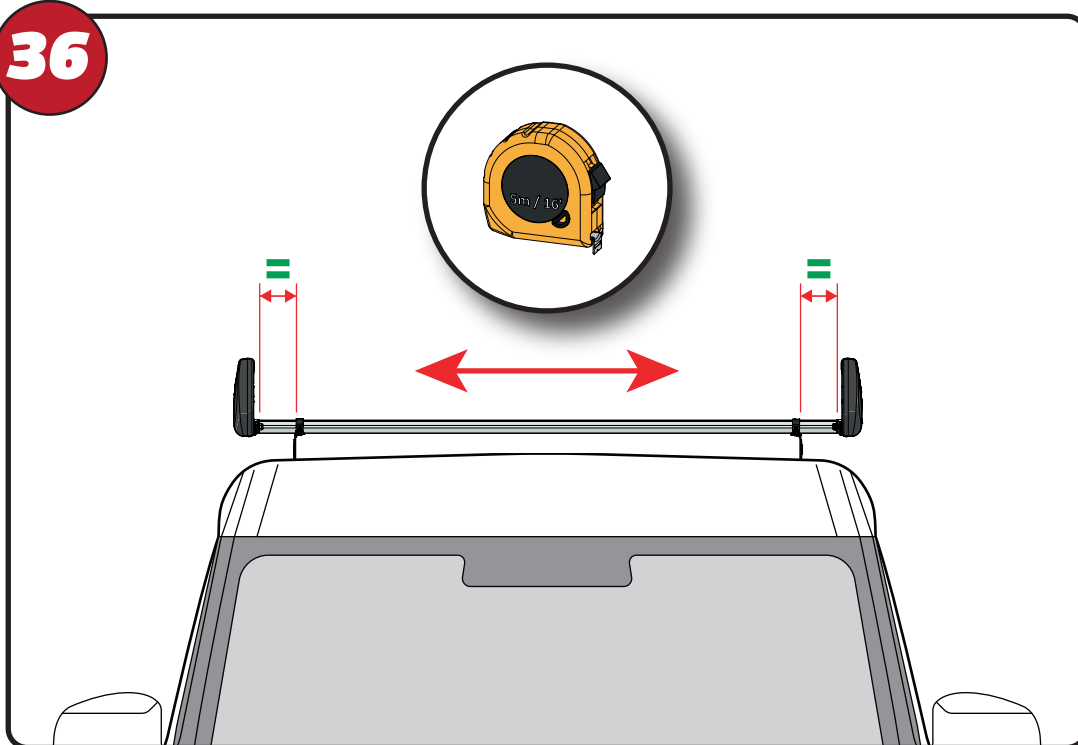


37

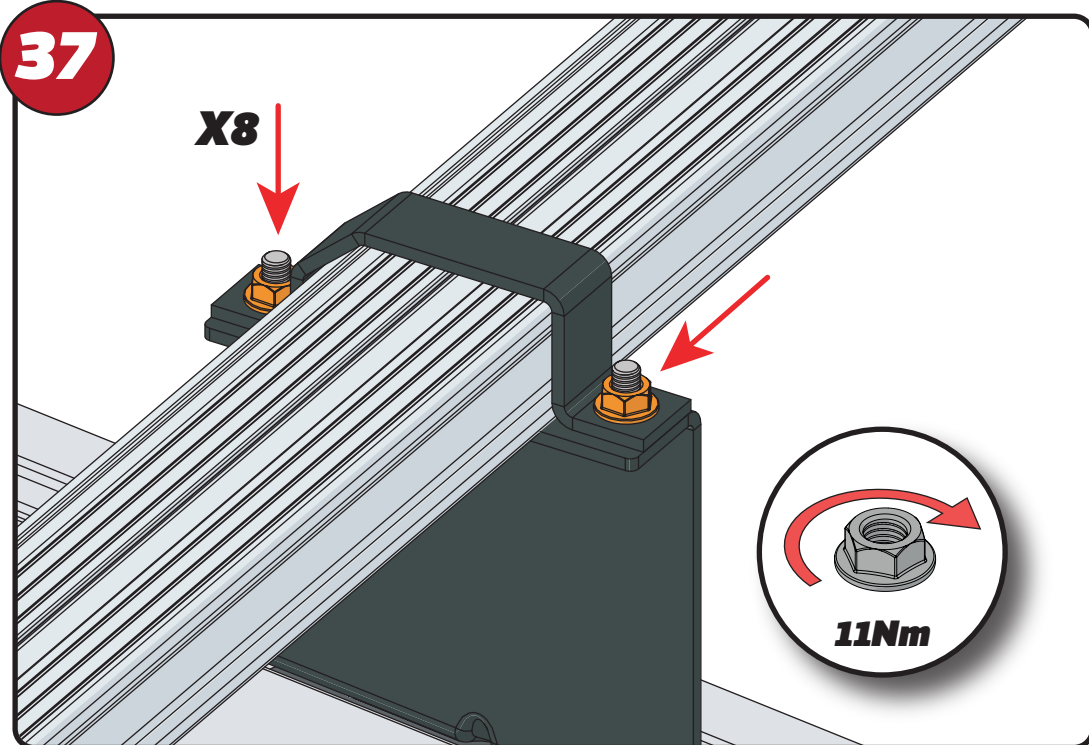


38

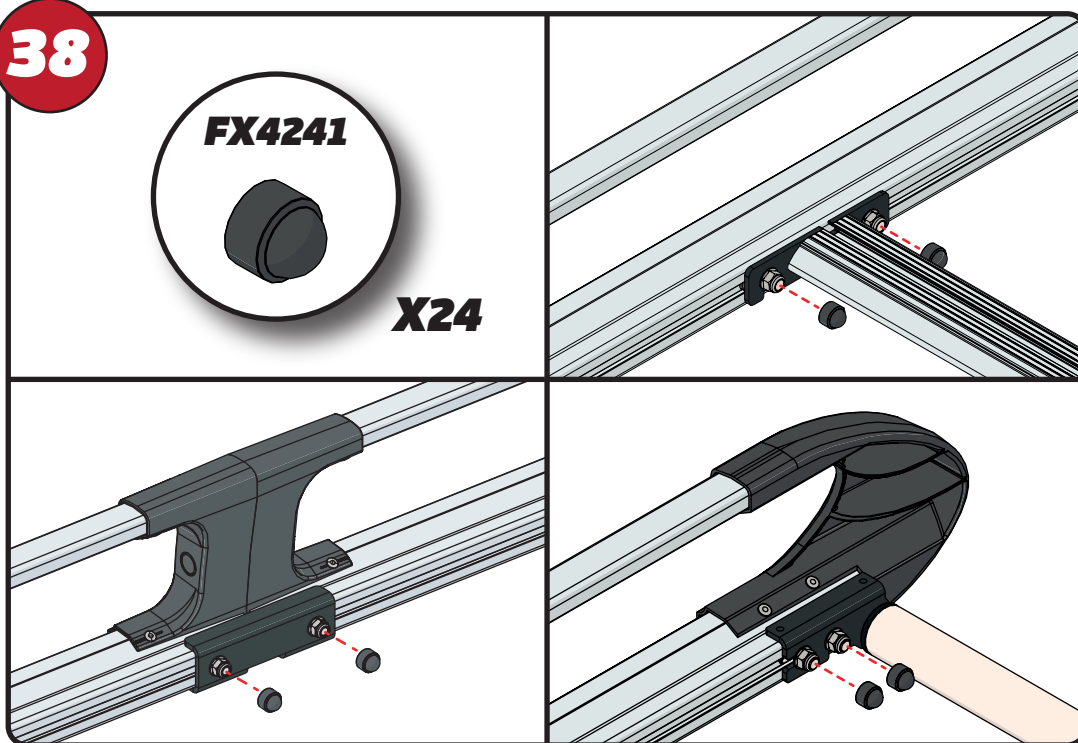

39

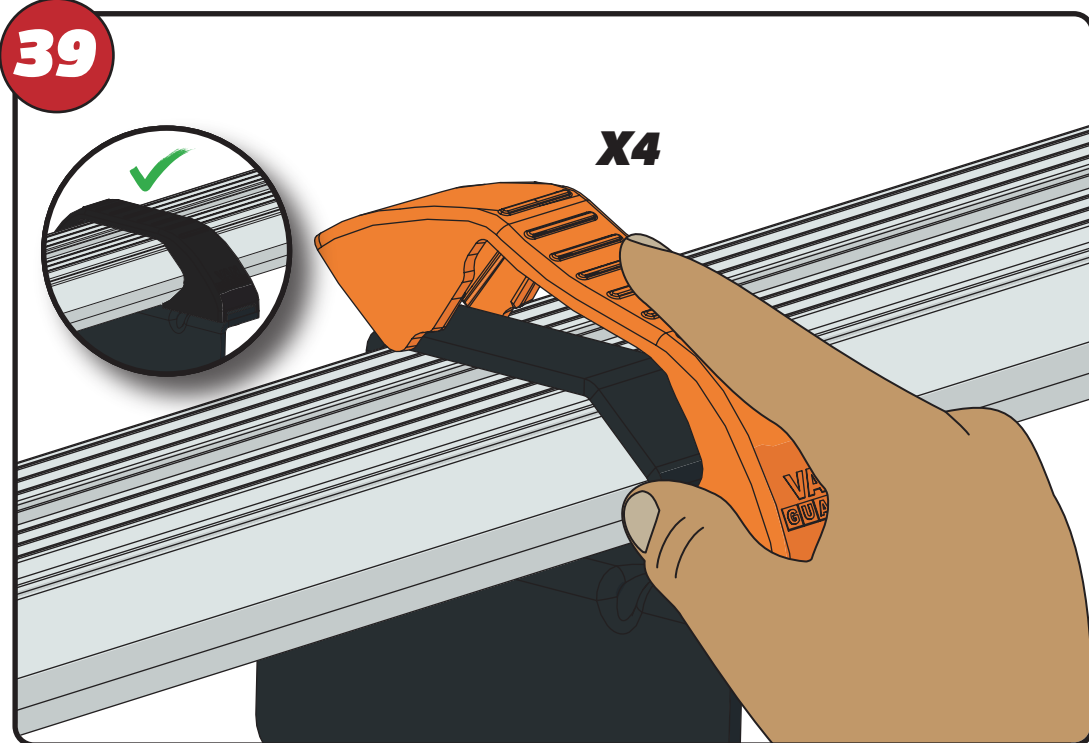

40

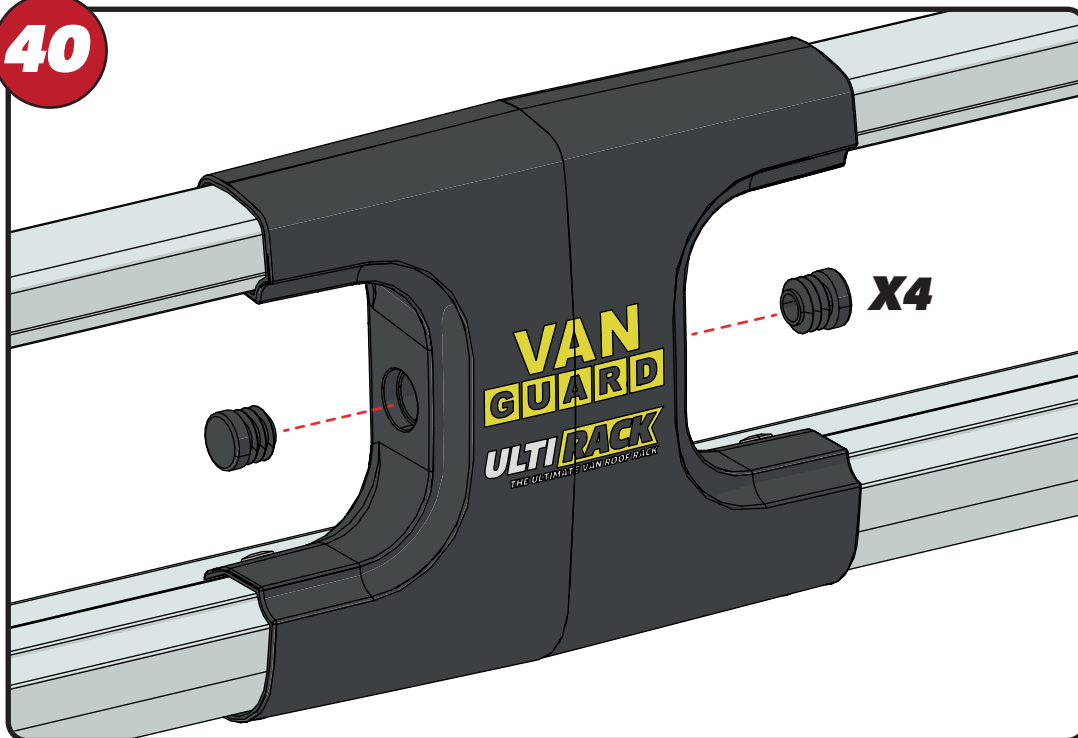

41

