
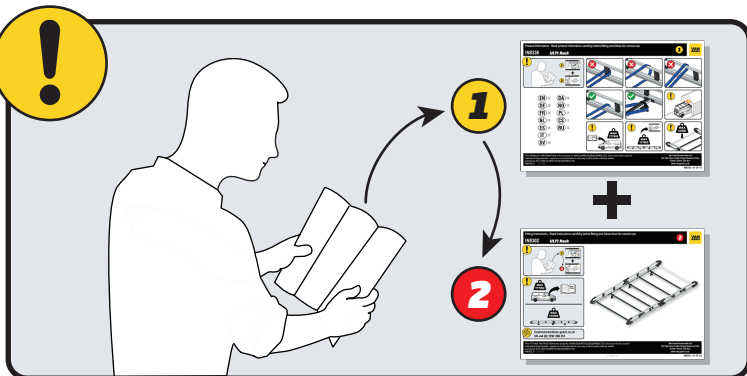


IN8439

ULTI Rack+

2

**VAN
GUARD**

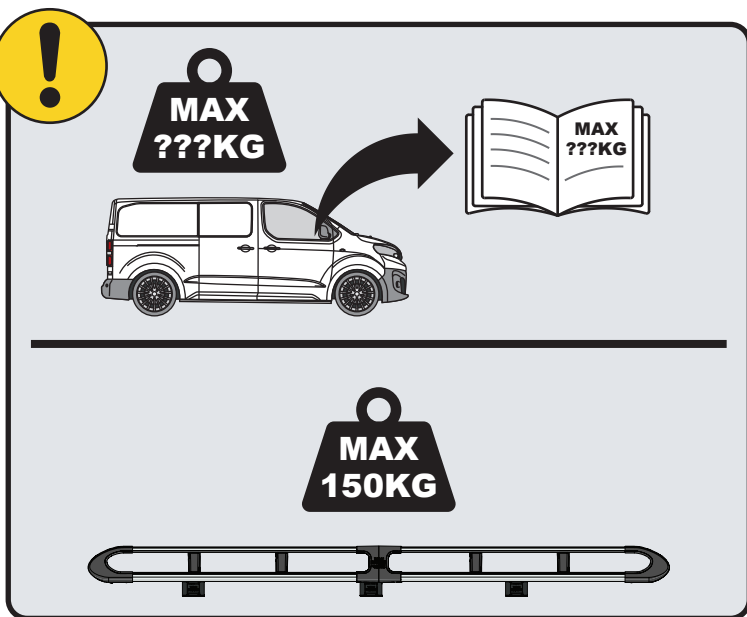

Customercare@van-guard.co.uk
UK +44 (0) 1392 368 351





This FITTING INSTRUCTION is the property of VAN GUARD ACCESSORIES LTD. and must not be used for manufacturing purposes, copied nor communicated in any way to third parties without written permission from VAN GUARD ACCESSORIES LTD.
IN8439_A-01 (CN:01421)

Van Guard Accessories Ltd
Fair Oak Close, Exeter Airport Business Park,
Exeter, Devon, EX5 2UL
www.van-guard.co.uk

VGUR-301

Citroen Dispatch: 2016 on (L2H1)
 Fiat Scudo: 2022 on (L1H1)
 Iveco eJolly: 2026 on (L1H1)
 Peugeot Expert: 2016 on (L2H1)
 Toyota Pro-Ace: 2016 on (L2H1)
 Vauxhall Vivaro: 2019 on (L1H1)


Tailgate

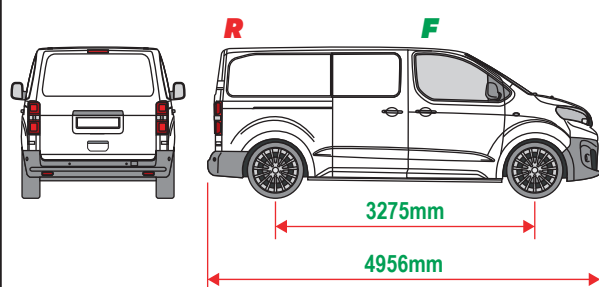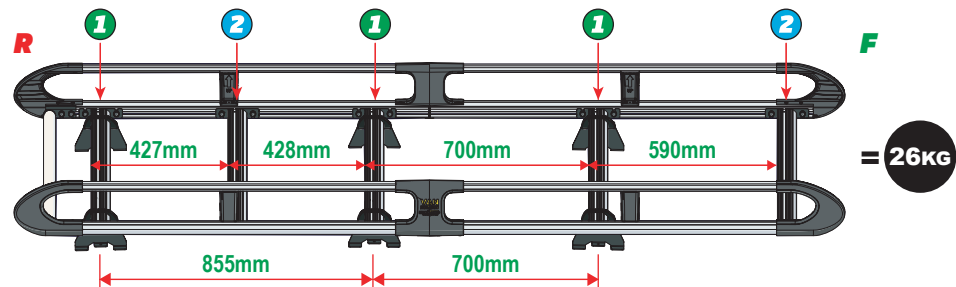



SUPPLIED COMPONENTS - CHECK ALL PARTS ARE PRESENT AND CORRECT BEFORE PROCEEDING (1 OF 2)

TOOLS REQUIRED


10MM X1

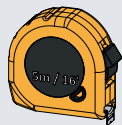

13MM X1

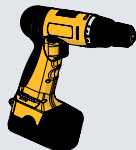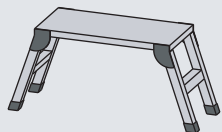


AS3535 X2
(2400 / A)

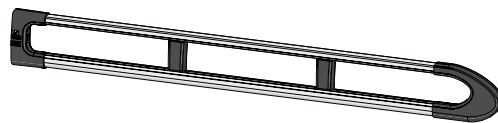


MA6118 X10




FX4241 X24



ME1622 X2




AS3534 X2
(2400 / B)




FX4008 X1




MA6145 X1



ME1623 X2



ME1627 X5
(1354mm)




FX4001 X2
(M8X40)




FX4235 X20
(M5X25)




ME0203 X6




AS3159 X1
(1340mm)




MA6007 X4




FX4248 X1
(T25)




MA6065 X6

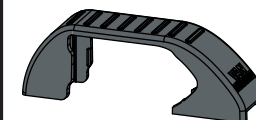


AS3590 X1

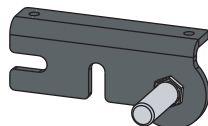


MA6093 X10



FX4239 X24
(M8X20)




ME1620 X3




FX4016 X12
(M6)



AS3591 X1




ME0316 X10




FX4240 X24
(M8)




ME1621 X3



FX4042 X12
(M6X16)




ME0823 X1

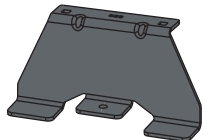


FX4012 X6

(M6X16)



ME0824 X1

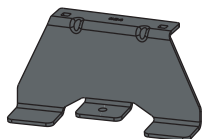


FX4017 X6


(M6)




ME0825 X2

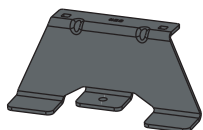


FX4126 X6




ME0826 X1

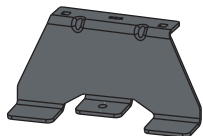

MA6081 X12



ME0827 X1

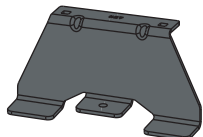

FX4010 X6

(M6)




01

1L



X3

1R



X3



2L





X2

2R



X2

02

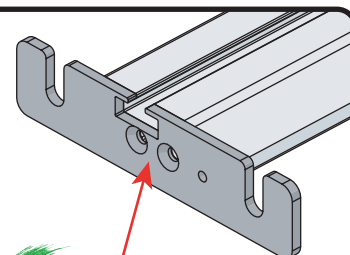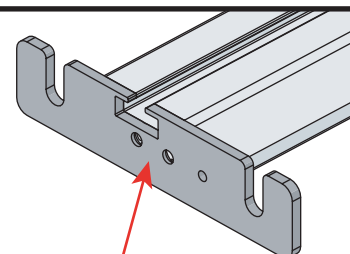


03

01


FX4248




+

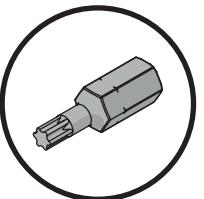

02

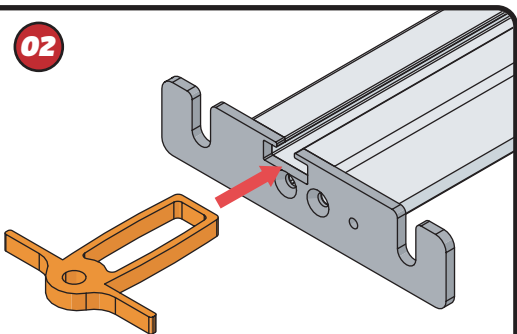


04

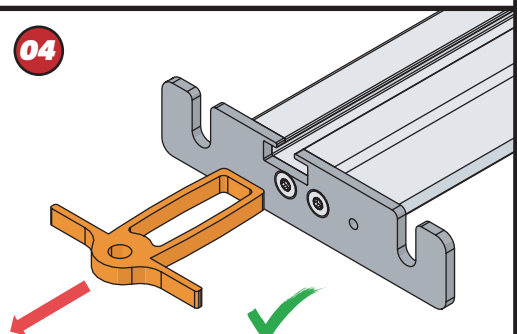

03



11Nm

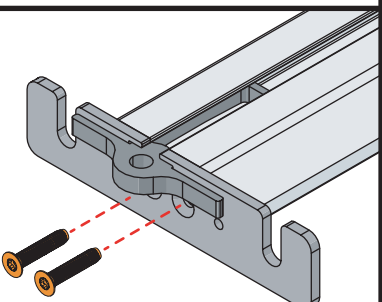


04






1

X3

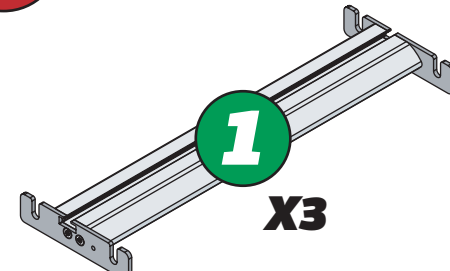


2


X2

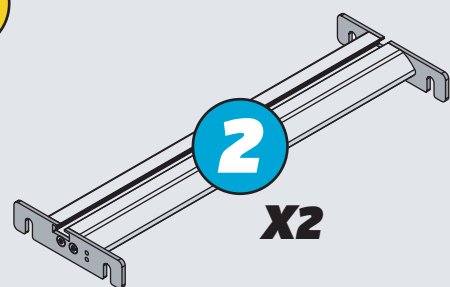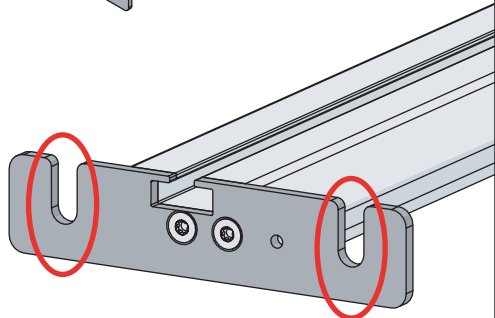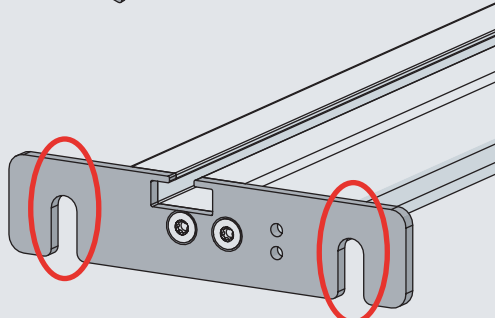


05

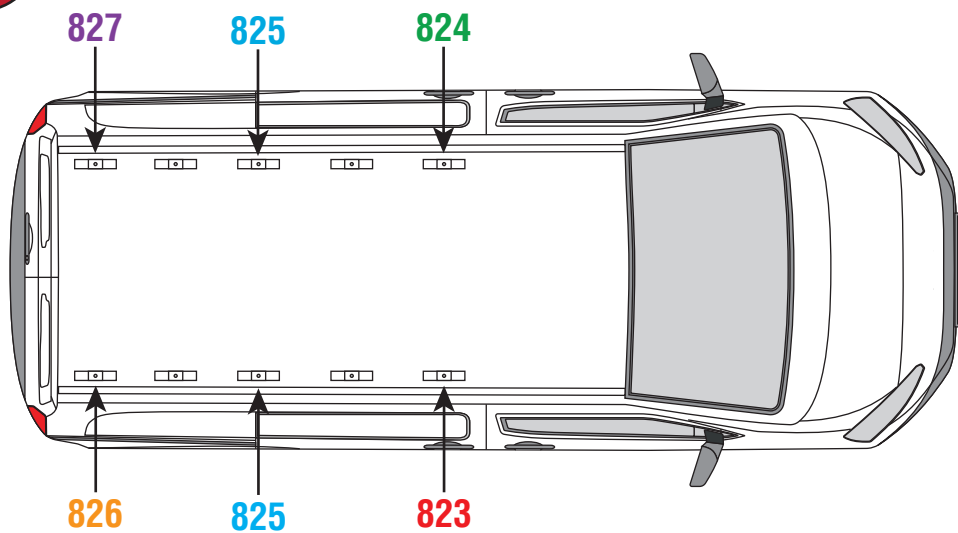


823

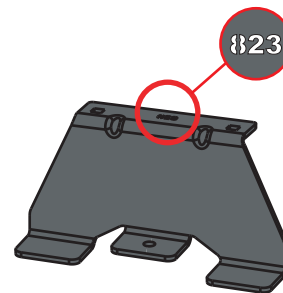


824

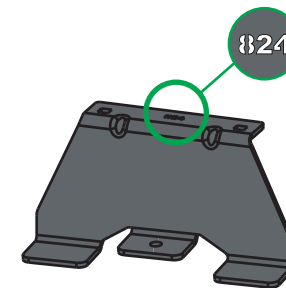


825

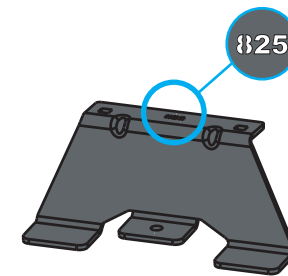


826

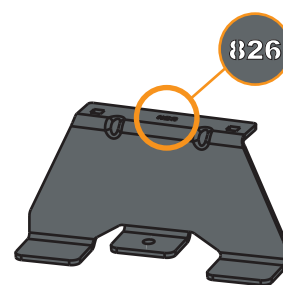

827

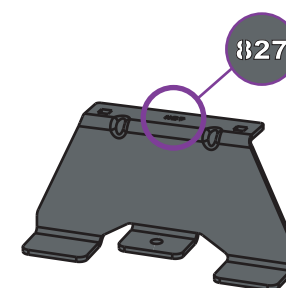


06

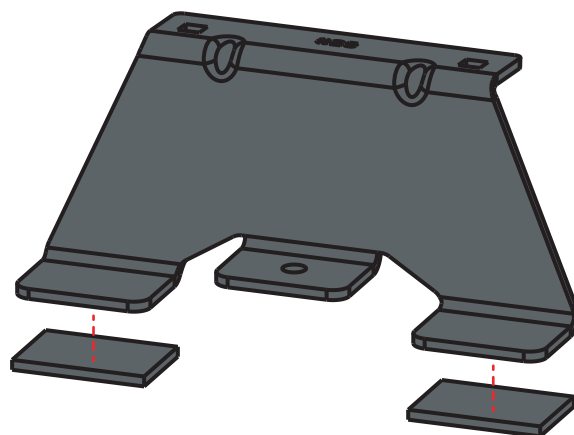

EN - STICK GASKETS TO ALL BRACKETS
 DE - KLEBEN SIE DIE DICHTUNG AN ALLEN HALTERUNGEN
 FR - COUSSINETS ADHÉSIFS À TOUS LES SUPPORTS
 NL - PLAK PAKKING OP ALLE BEUGELS
 ES - PEGA LAS ALMOHADILLAS A TODOS LOS SOPORTES
 IT - ADESIVI GUARNIZIONI A TUTTE LE STAFFE


SV - FÄST GUMMI PÅ ALLA FÄSTEN
 DA - KLÆB GUMMI PÅ ALLE BESLAG
 NO - PLIST GUMMI PÅ ALLE BRAKKETTER
 PL - NAKLEJ USZCZELKI DO WSZYSTKICH WSPORNIKÓW
 CS - PŘILEPTE TĚSNĚNÍ NA VŠECHNY DRŽÁKY

07

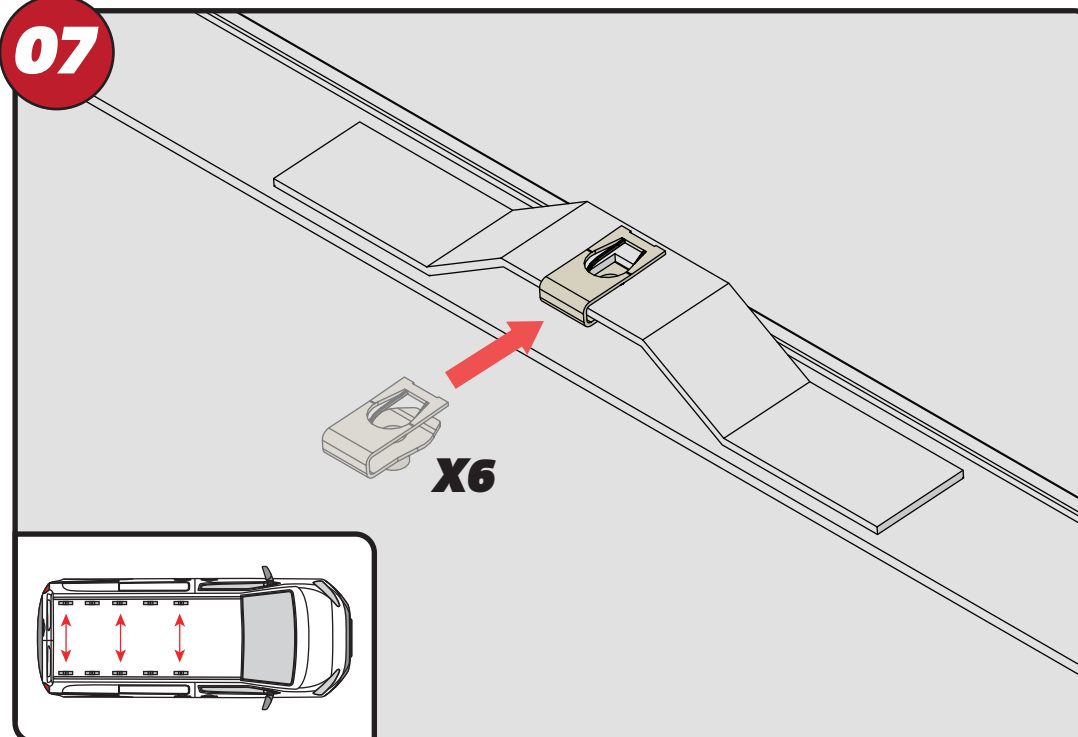


X6


08

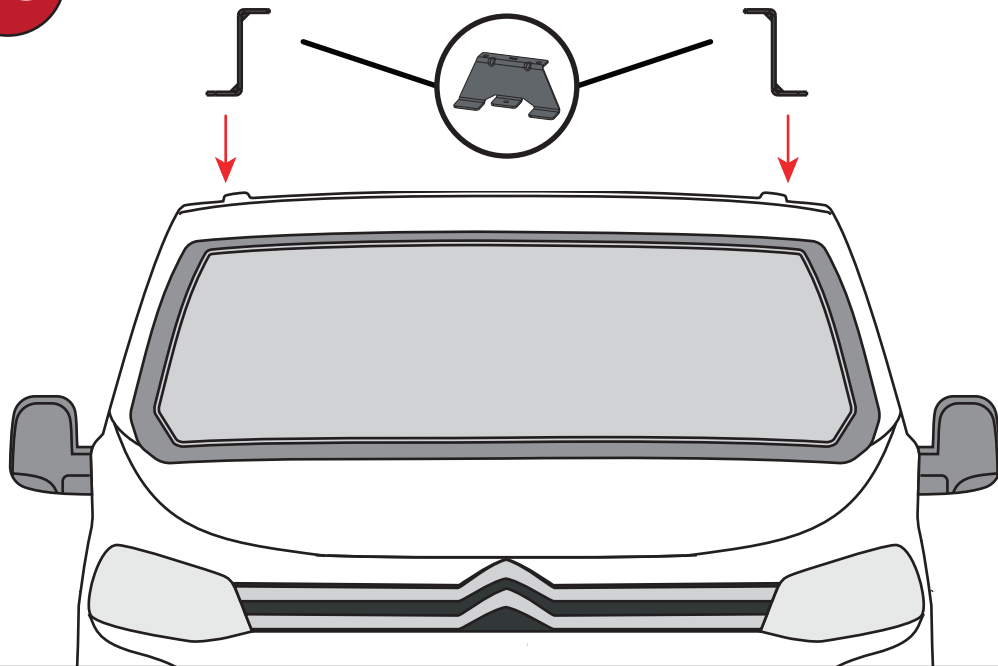


09

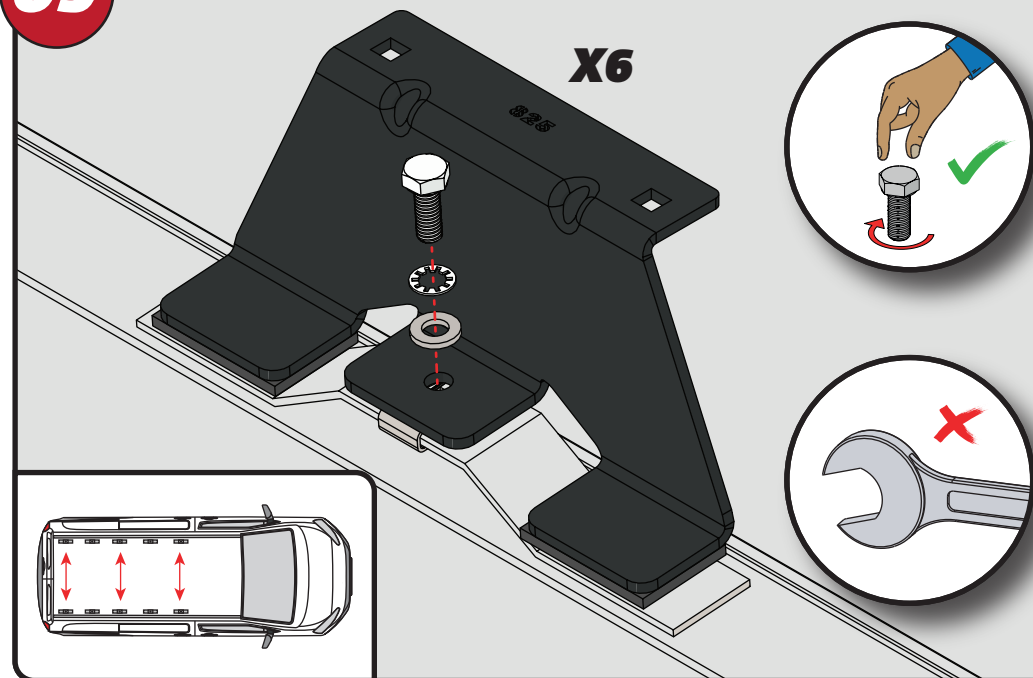

10

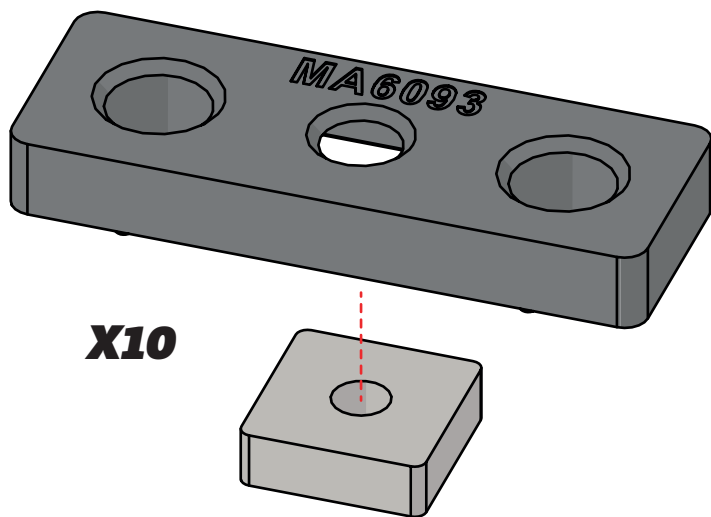


11

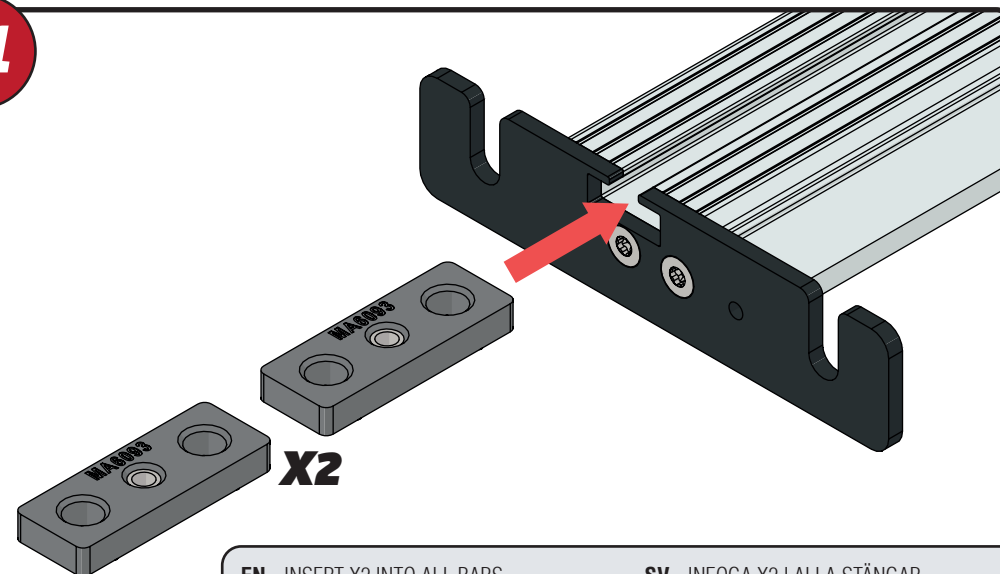


EN - INSERT X2 INTO ALL BARS
DE - X2 IN ALLE STANGEN EINFÜGEN
FR - INSÉRER X2 DANS TOUTES LES BARRES
NL - PLAATS X2 IN ALLE BARS
ES - INSERTAR X2 EN TODAS LAS BARRAS
IT - INSERIRE X2 IN TUTTE LE BARRE

SV - INFOGA X2 I ALLA STÄNGAR
DA - INDSÆT X2 I ALLE STÆNGER
NO - SETT X2 INN I ALLE TAKSTENGER
PL - WSTAW X2 DO WSZYSTKICH PRĘTÓW
CS - VLOŽTE X2 DO VŠECH TYČÍ


12

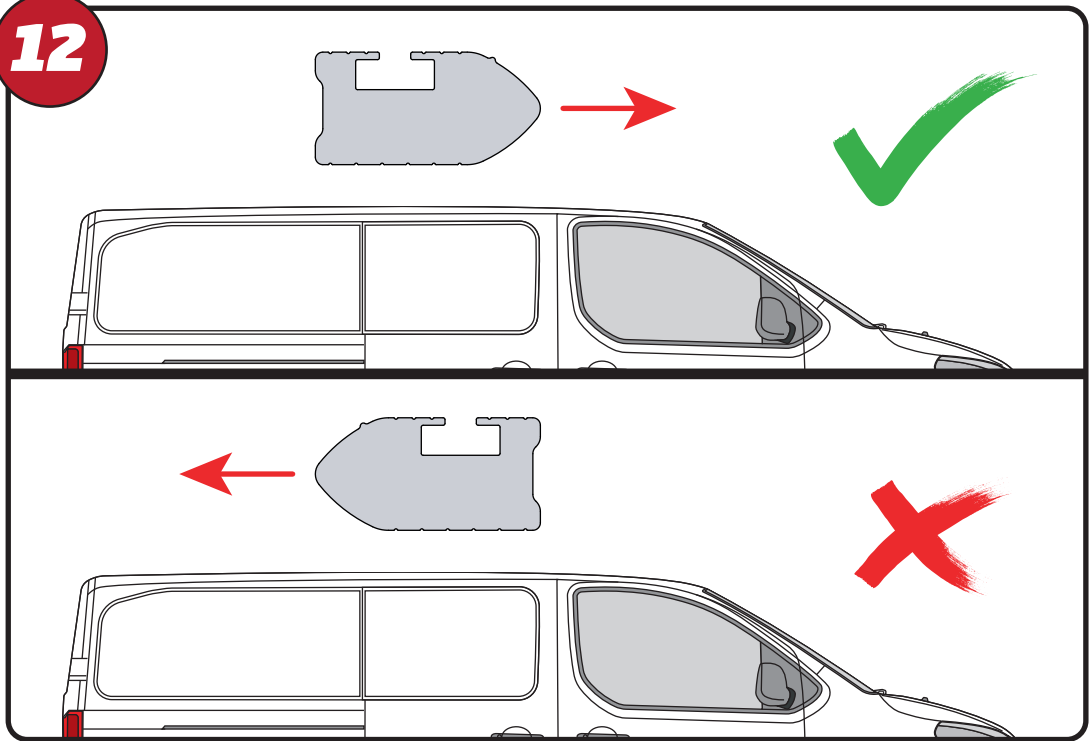


13

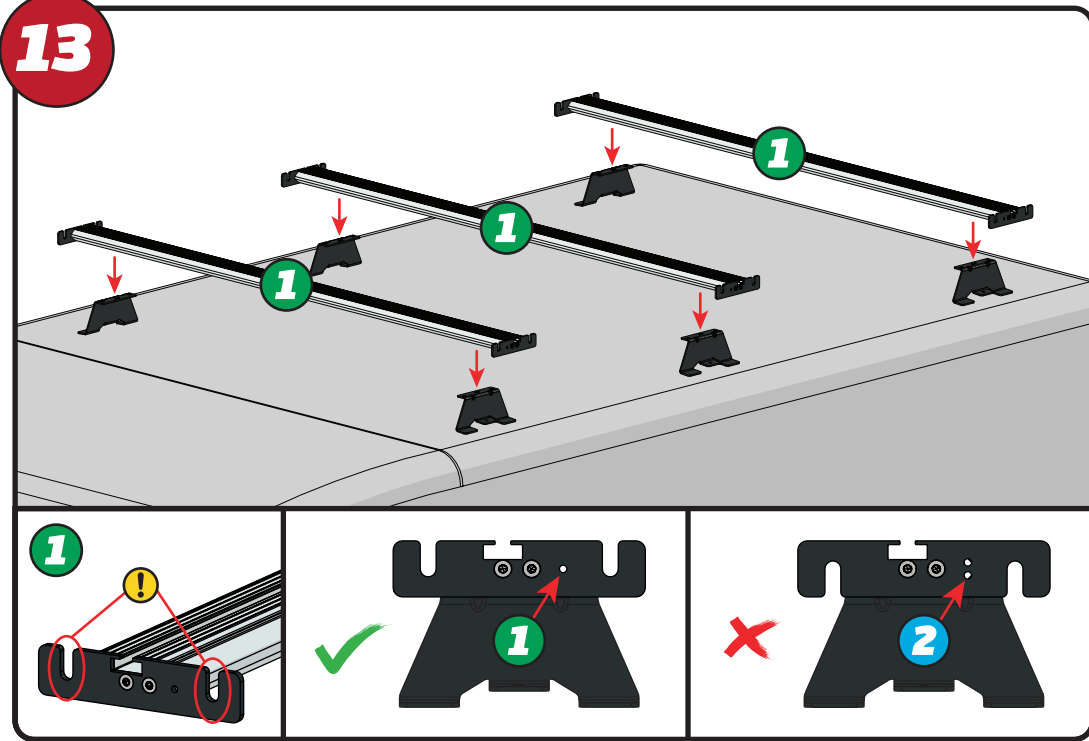




14

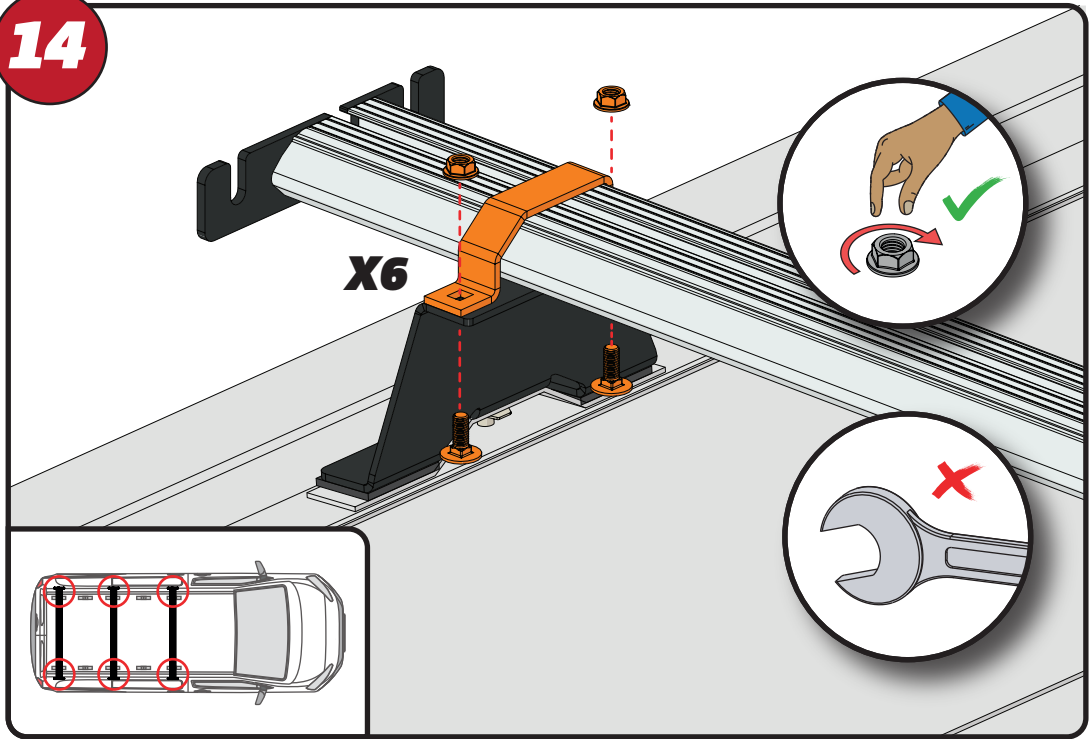


15

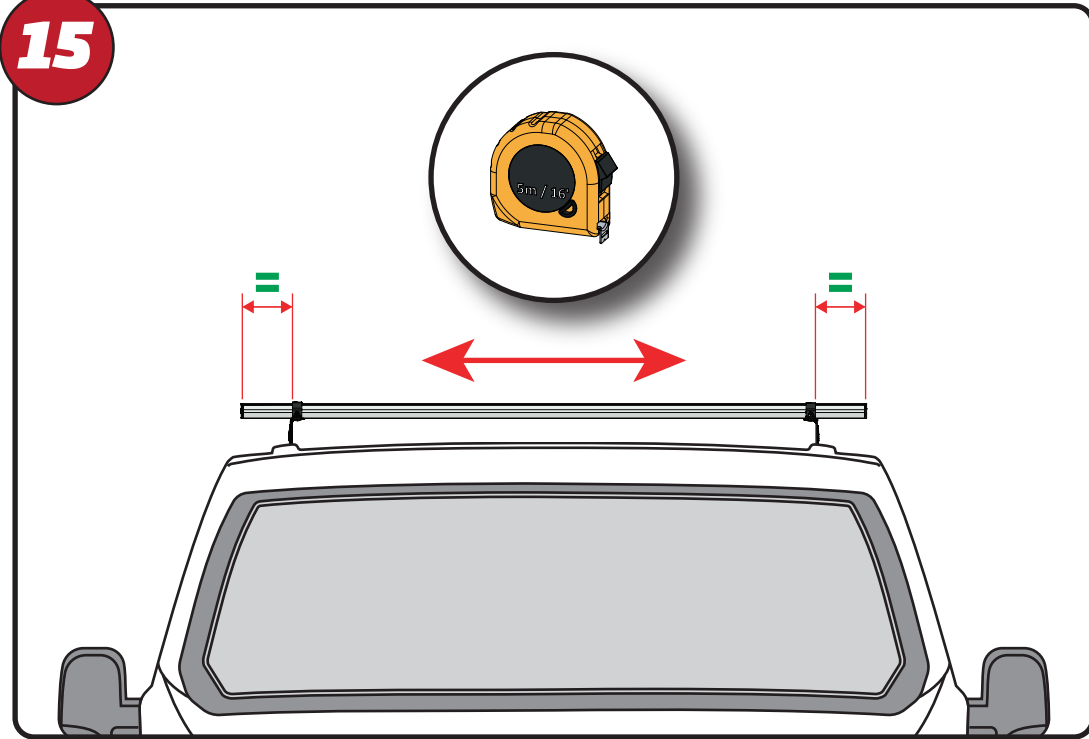


16

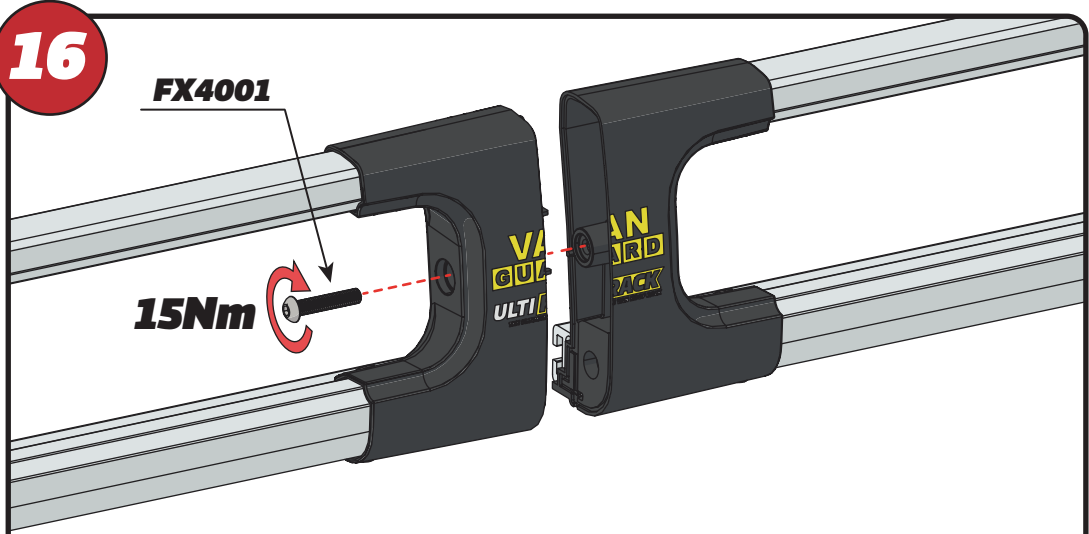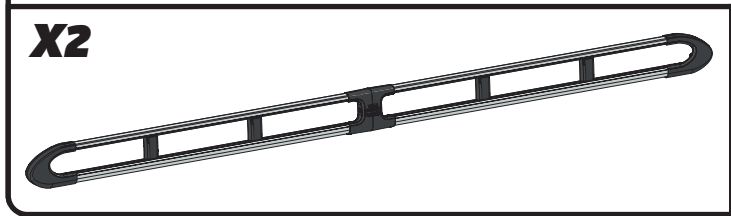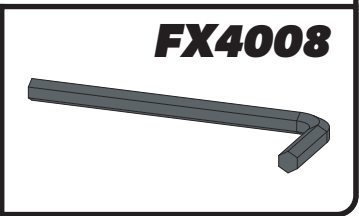


17

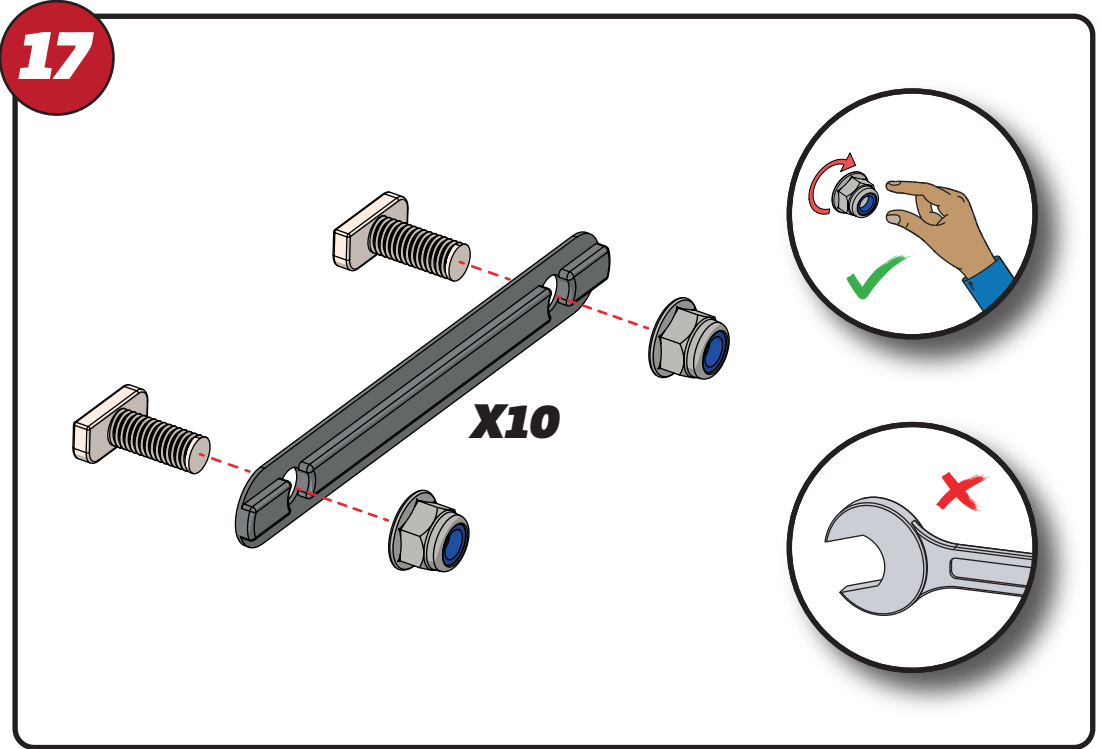




18

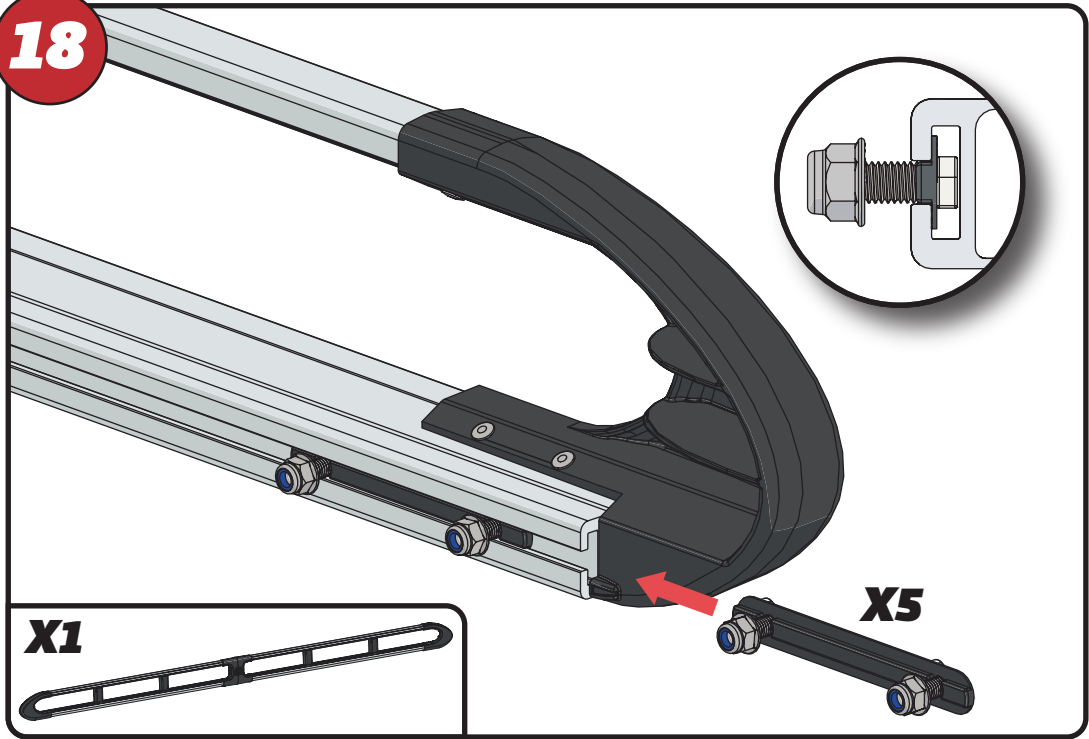



19

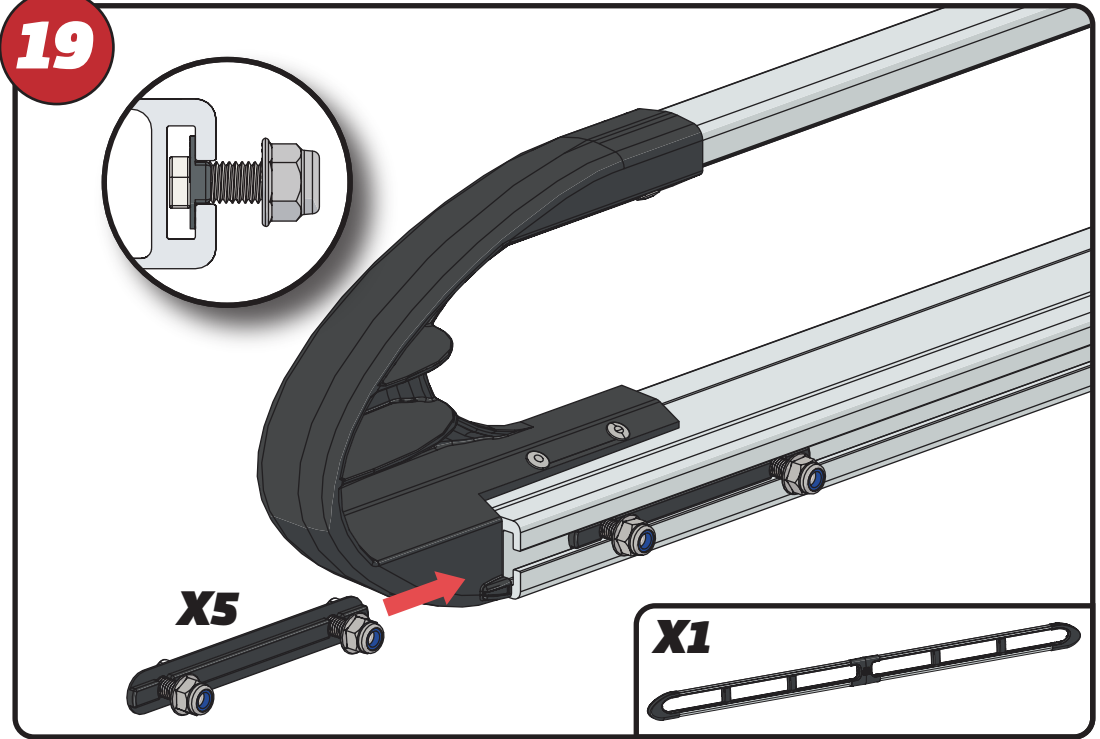



20

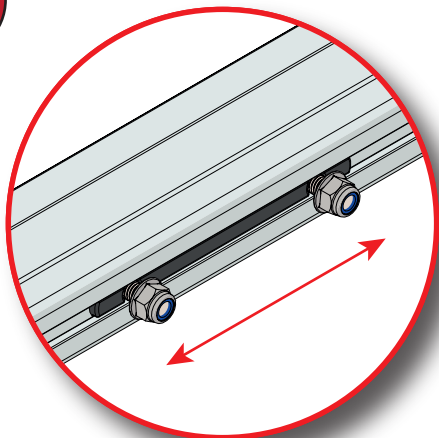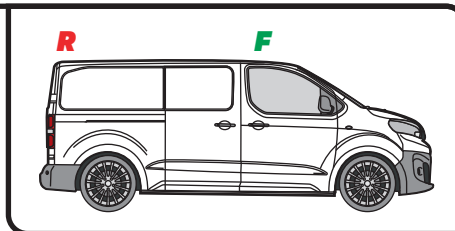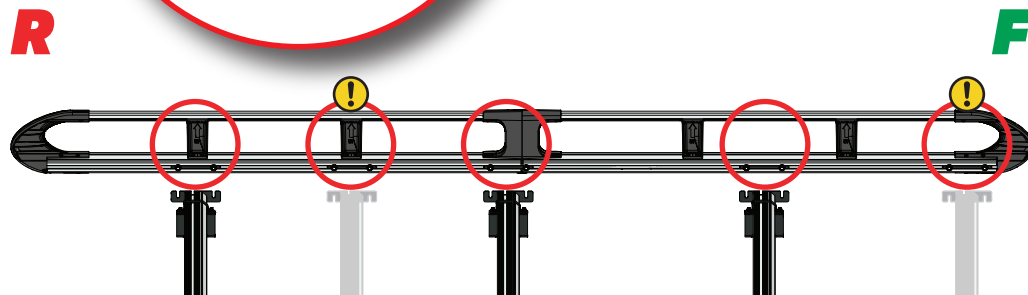



21

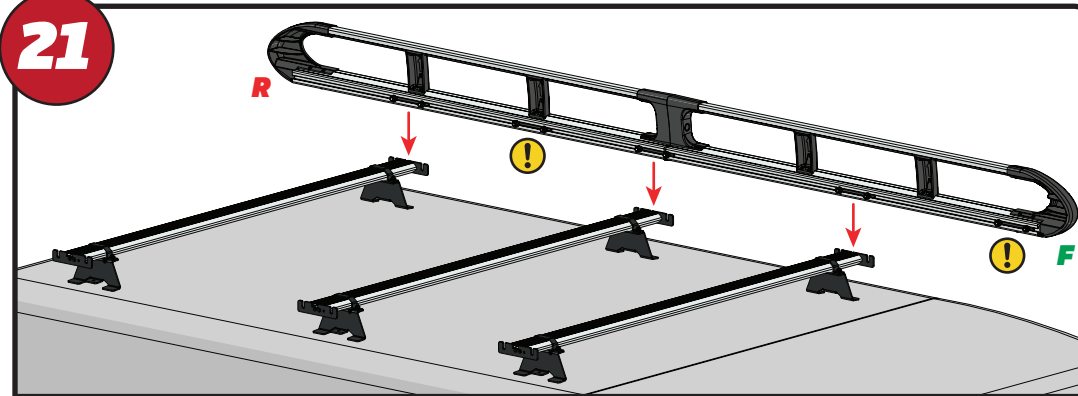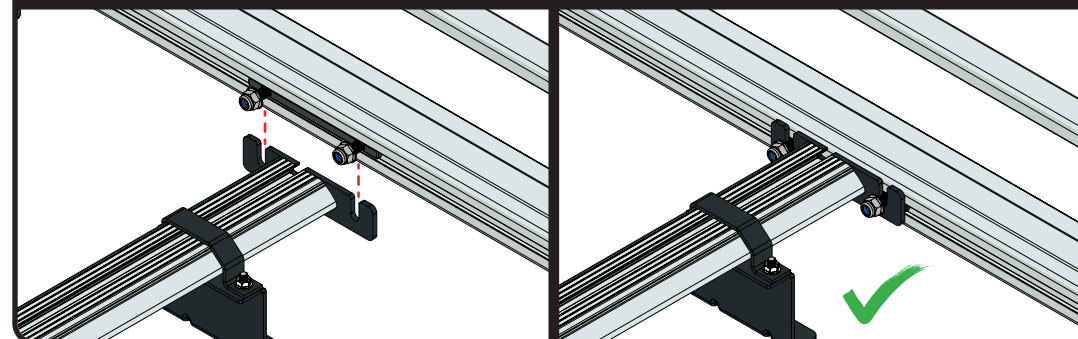

22

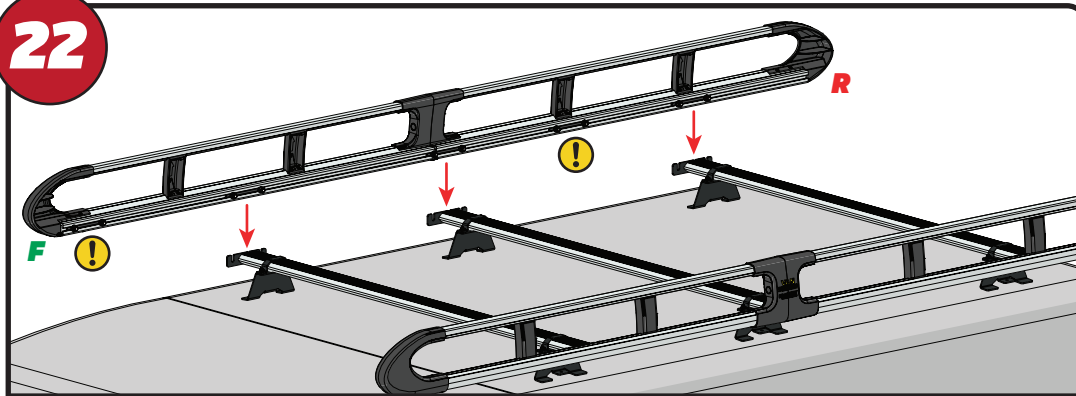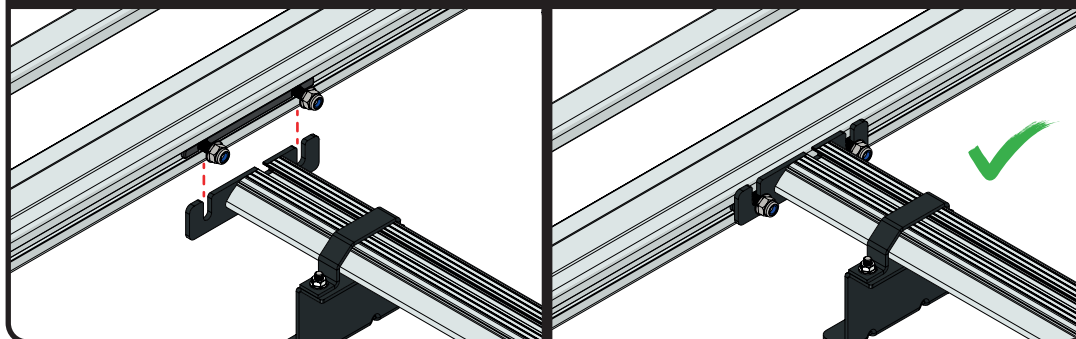

23

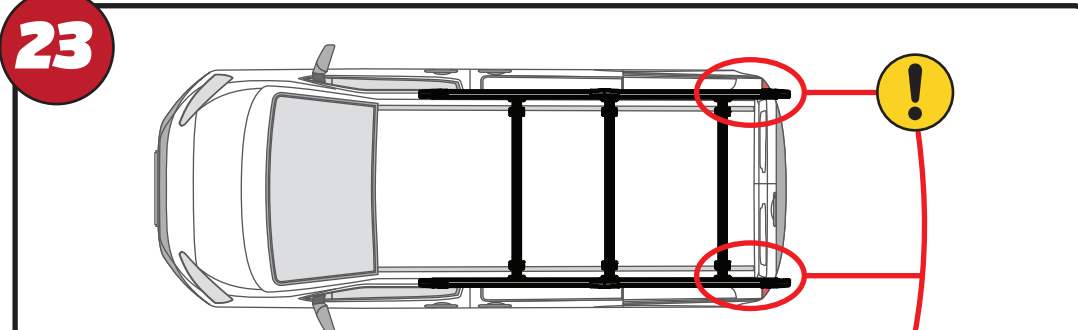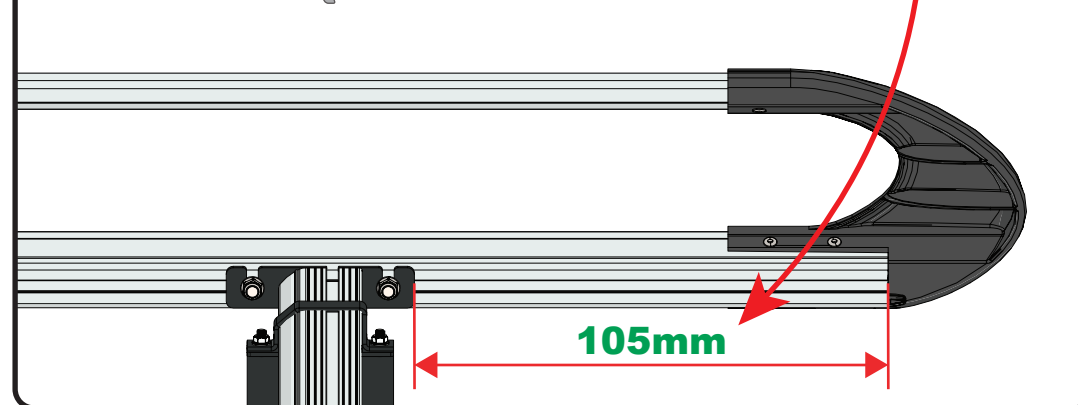


24



EN - CHECK TO ENSURE CLEARANCE FROM TAILGATE
 DE - ÜBERPRÜFEN SIE DEN ABSTAND ZUR HECKKLAPPE
 FR - VÉRIFIEZ LE DÉGAGEMENT PAR RAPPORT AU HAYON
 NL - CONTROLEER OP VRIJHEID VAN DE ACHTERKLEP
 ES - VERIFIQUE EL ESPACIO LIBRE CON LA PUERTA TRASERA
 IT - CONTROLLARE LA DISTANZA DALLA PORTELLONE



SV - KONTROLLERA AVSTÅND TILL BAKLUCKAN
 DA - KONTROLLER AFSTAND TIL BAGKLAPPEN
 NO - KONTROLLER KLARERING FRA BAKLUKE
 PL - SPRAWDŹ PRZEŚWIT OD TYLNEJ KLAPY
 CS - ZKONTROLUJTE VZDÁLENOST OD ZADNÍCH DVEŘÍ

25

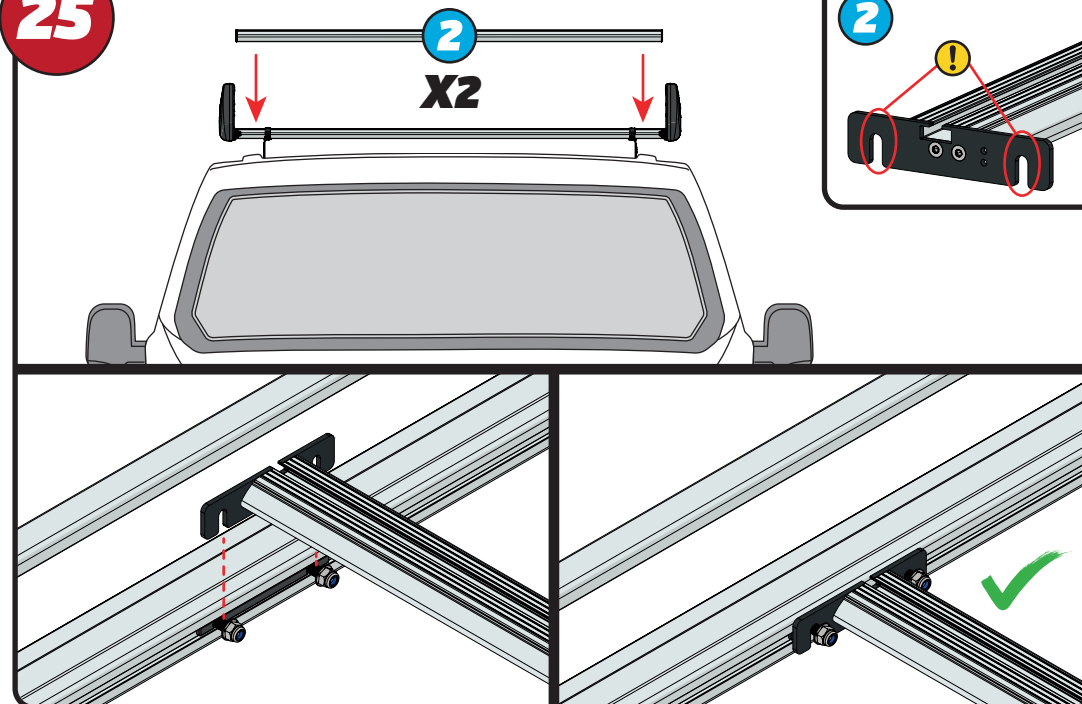


26

XXX =
 PAGE 2 OF 14

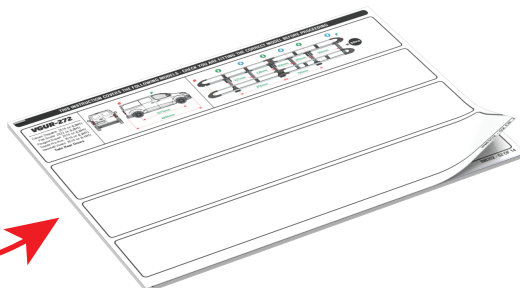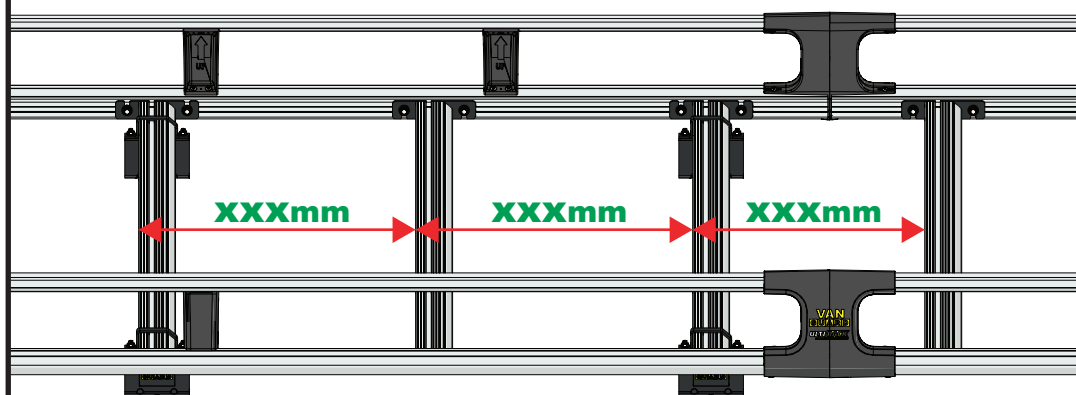


27

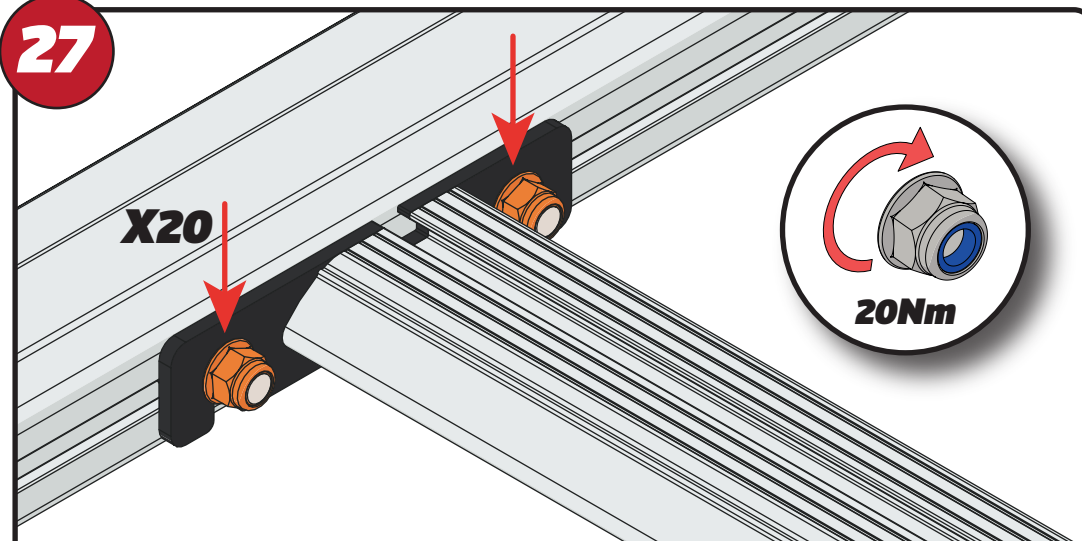



EN - TIGHTEN ALL OF THE CROSS BARS
 DE - ALLE QUERSTANGEN FESTZIEHEN
 FR - SERREZ TOUTES LES BARRES TRANSVERSALES
 NL - DRAAI ALLE DWARSBALK VAN HET DAK AAN
 ES - APIRIETE TODAS LAS BARRAS TRANSVERSALES
 IT - STRINGERE TUTTE LE BARRE TRASVERSALI

SV - SKRU UPP ALLA KORSSTANGAR
 DA - SKRU ALLE TAGBØJLER OP
 NO - SKRU OPP ALLE TVERRSTENGER
 PL - DOKRĘCIĆ WSZYSTKIE POPRZECZKI
 CS - VŠECHNY PŘÍČNÉ TYČE SEŠROUJTE


28

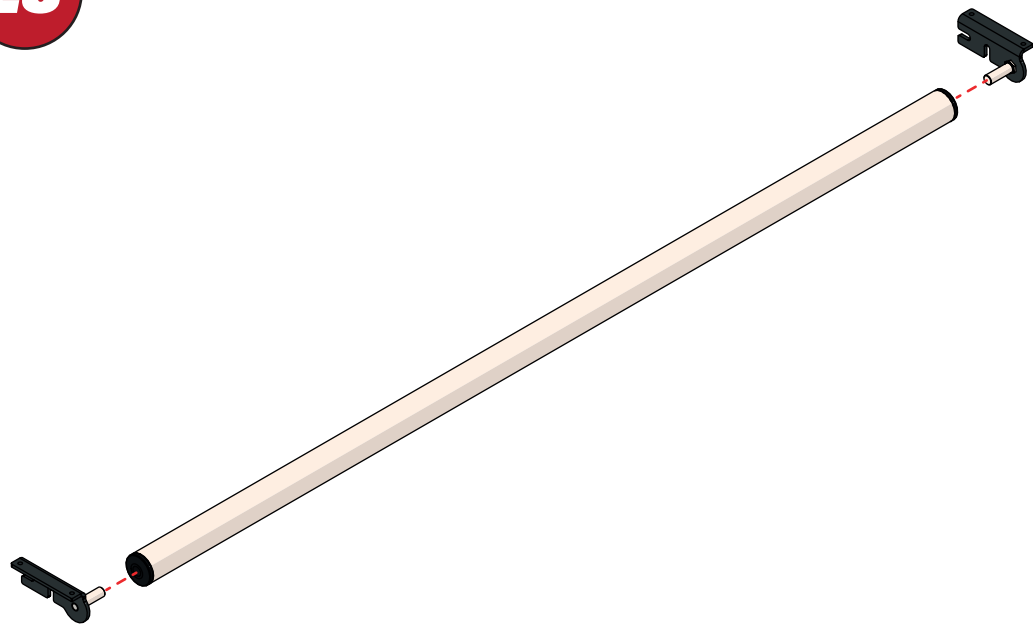


29

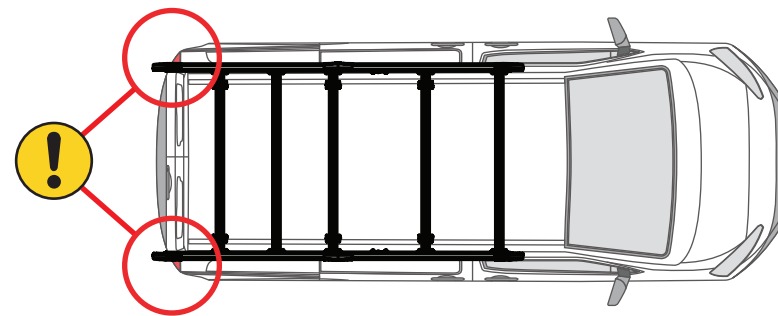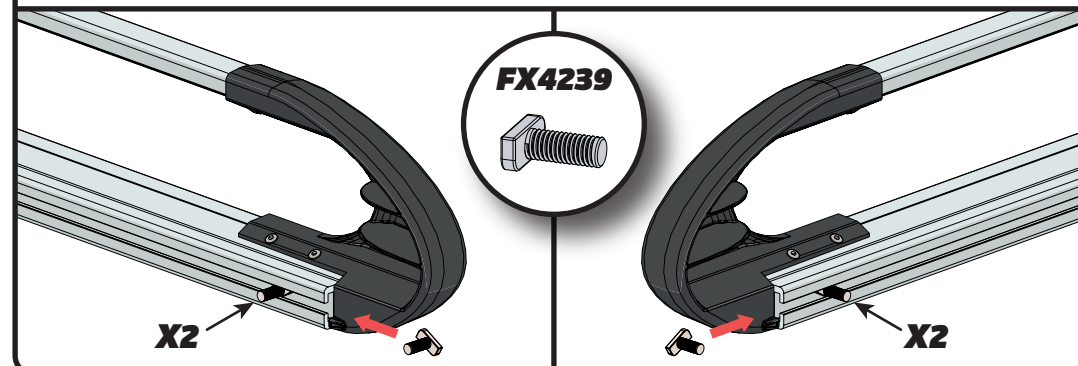


30

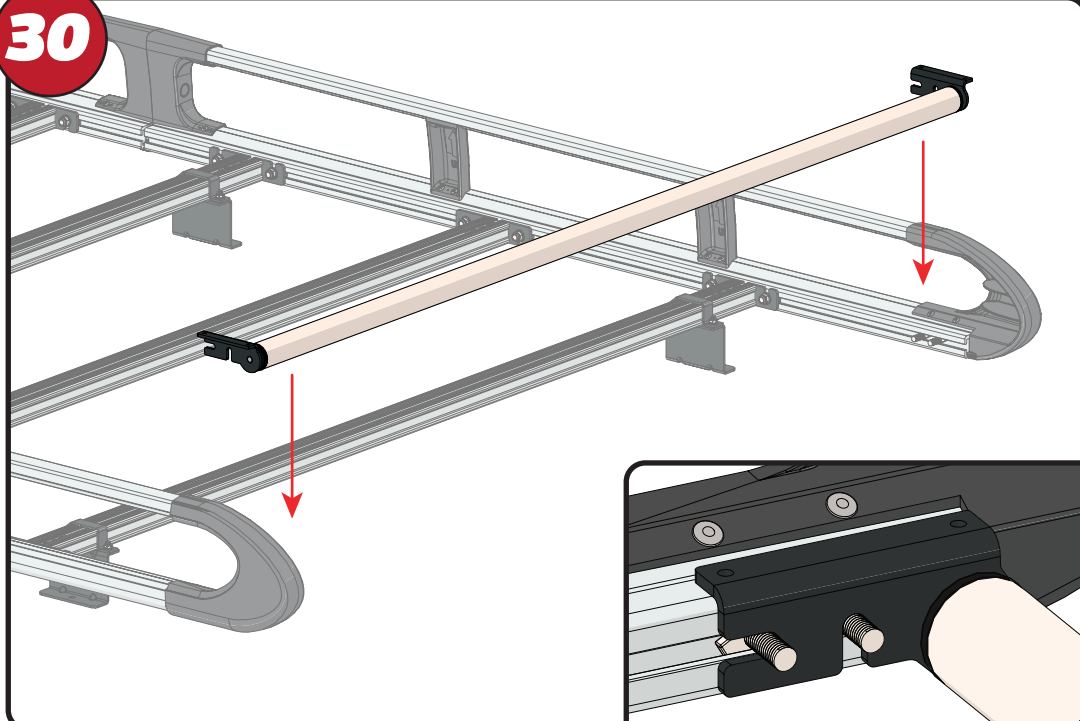


31

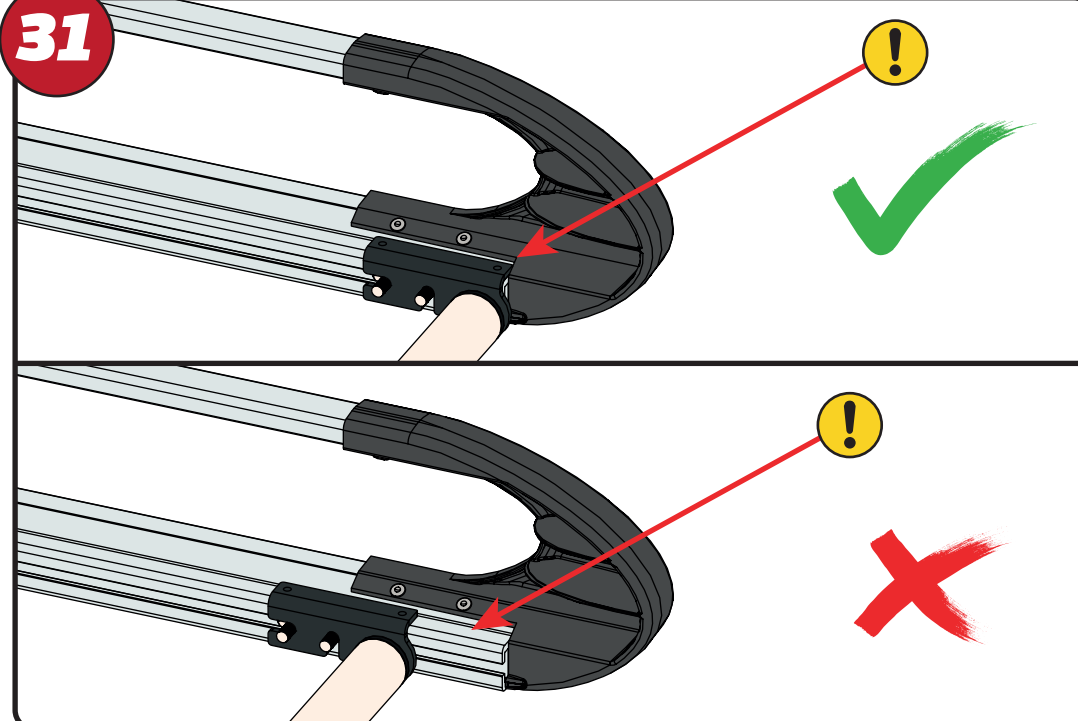


32

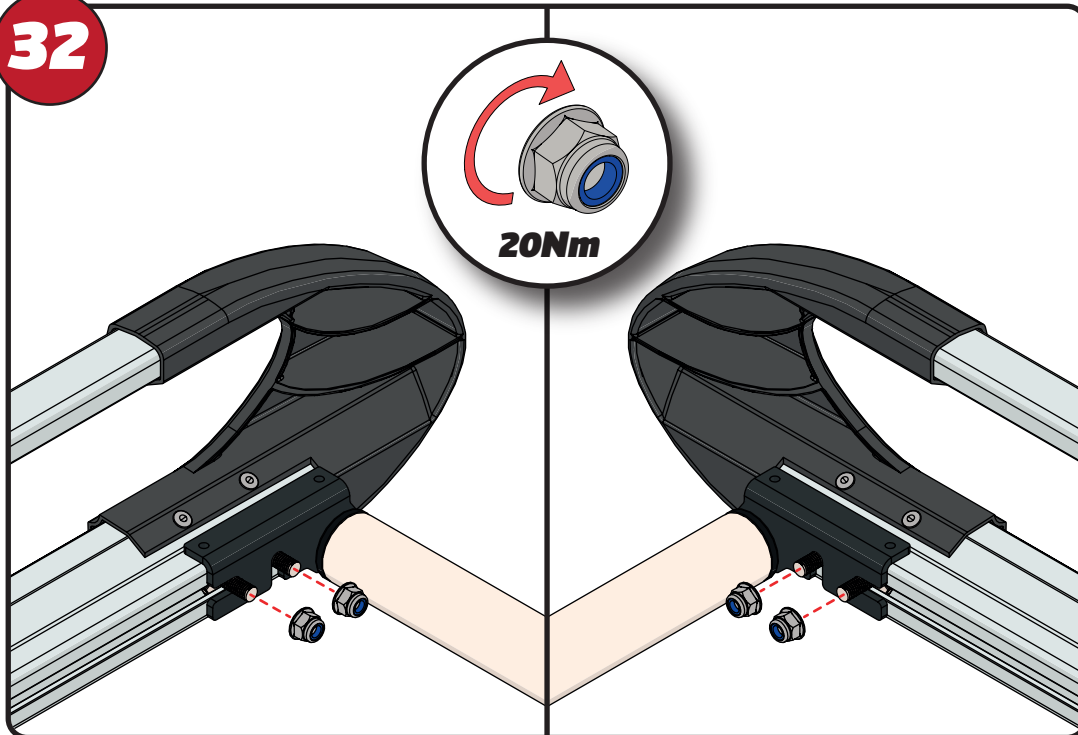


33

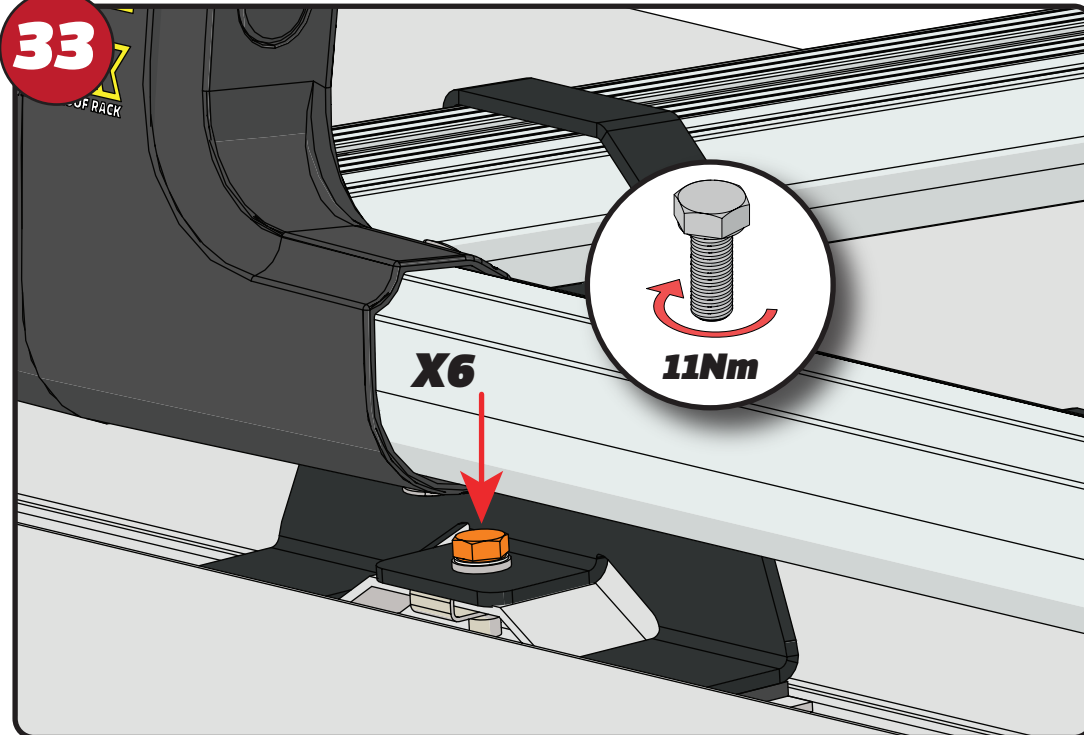

34

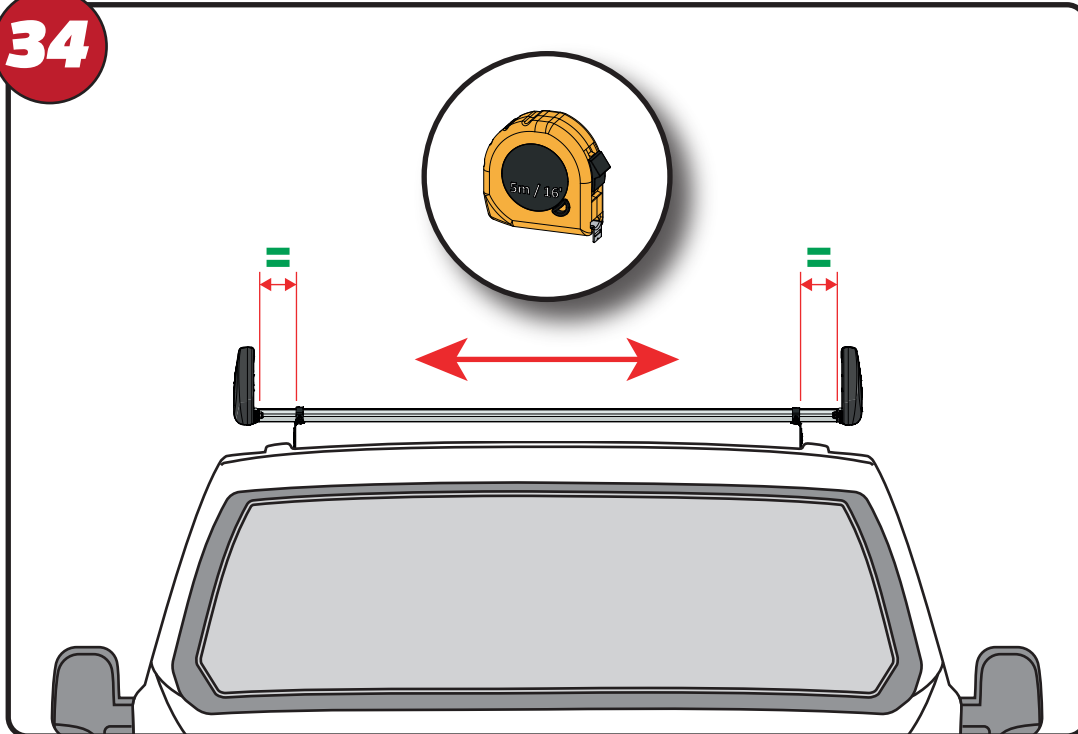


35

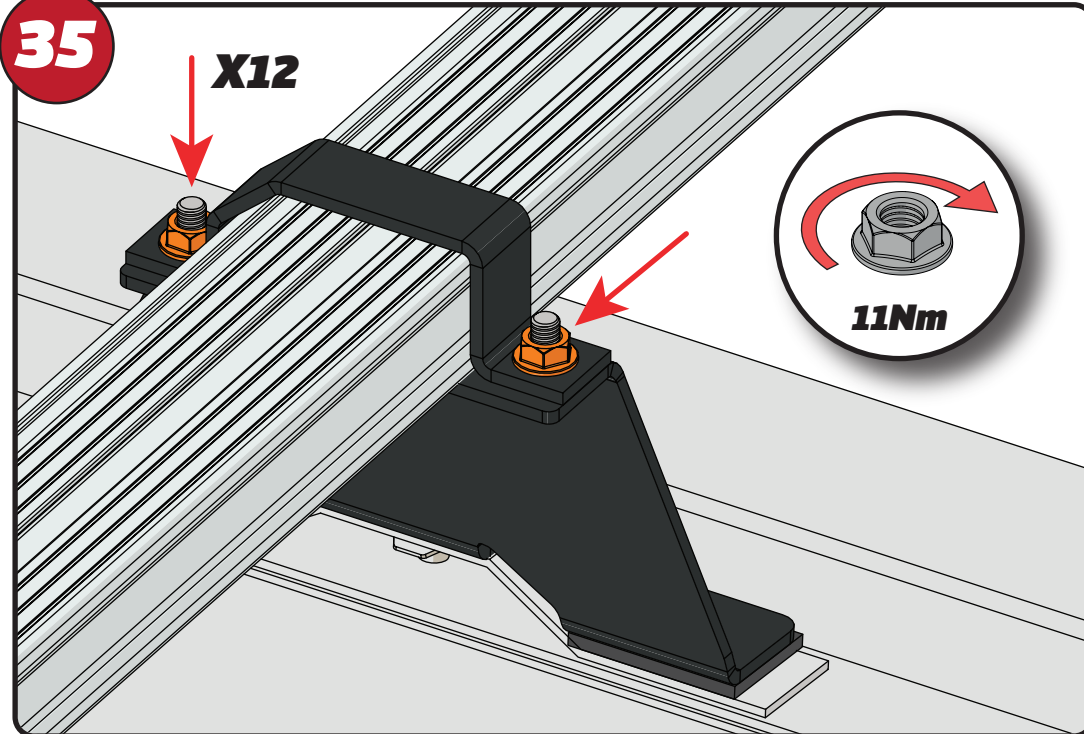

36




X24

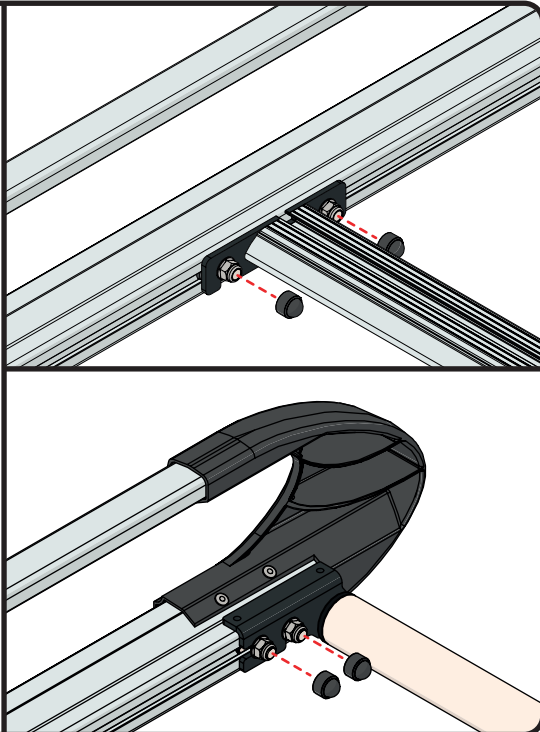


37



X6

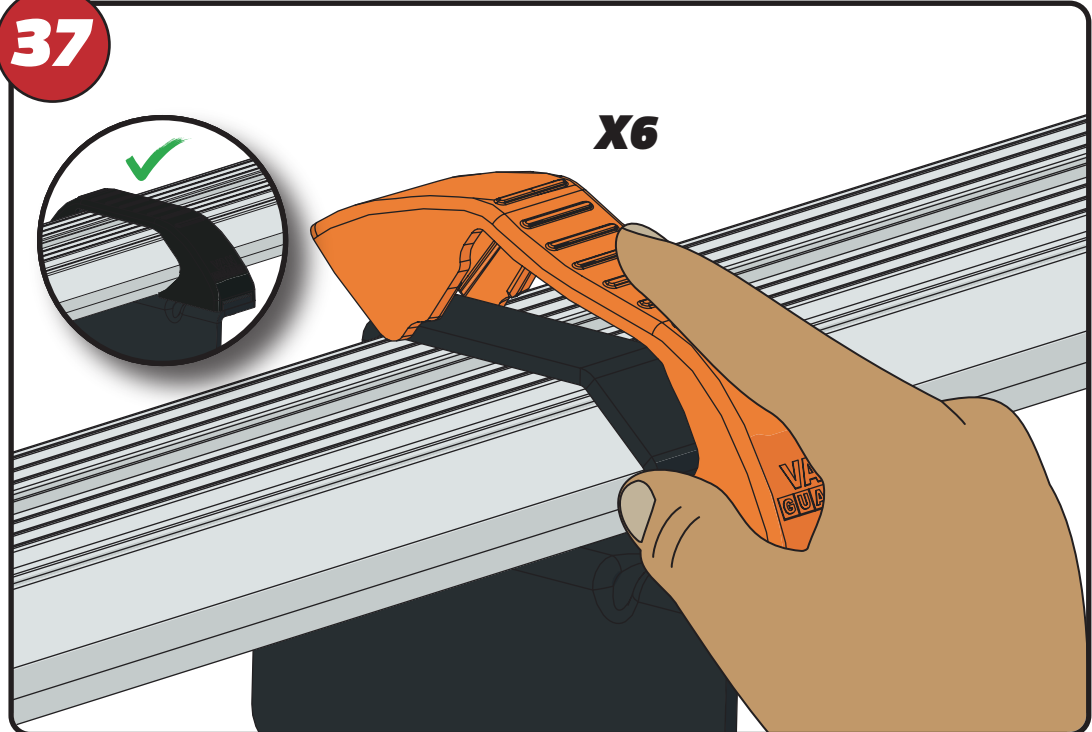

38

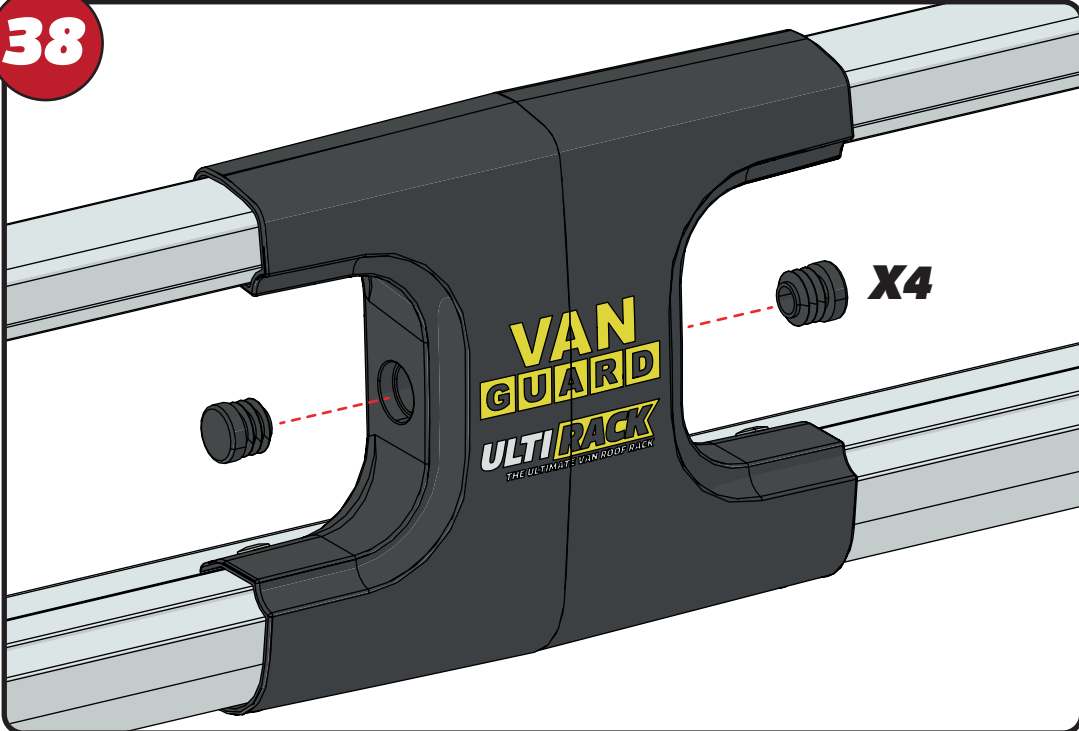

39

