

IN8450 ULTI Rack+

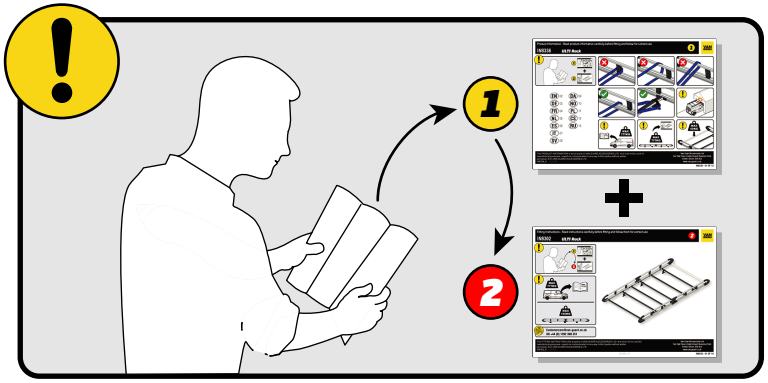

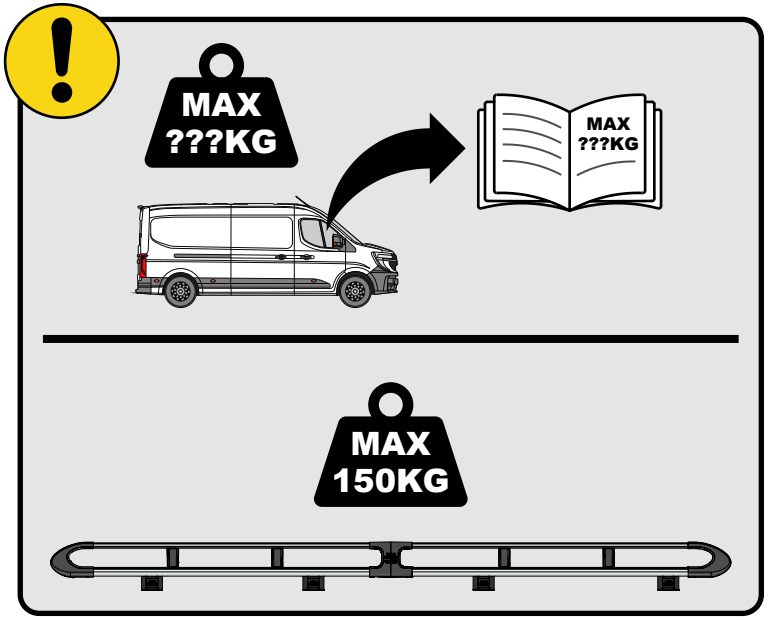

Customercare@van-guard.co.uk
UK +44 (0) 1392 368 351




This FITTING INSTRUCTION is the property of VAN GUARD ACCESSORIES LTD. and must not be used for manufacturing purposes, copied nor communicated in any way to third parties without written permission from VAN GUARD ACCESSORIES LTD.
IN8450_B (CN:01376)


Van Guard Accessories Ltd
Fair Oak Close, Exeter Airport Business Park,
Exeter, Devon, EX5 2UL
www.van-guard.co.uk

THIS INSTRUCTION COVERS THE FOLLOWING MODELS - CHECK YOU ARE FITTING THE CORRECT MODEL BEFORE PROCEEDING

VGUR-304

Nissan Interstar: 2025 on
Renault Master: 2025 on
L3H2 (MWB)
Twin Rear Doors

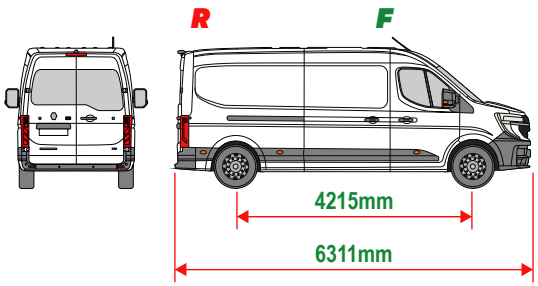

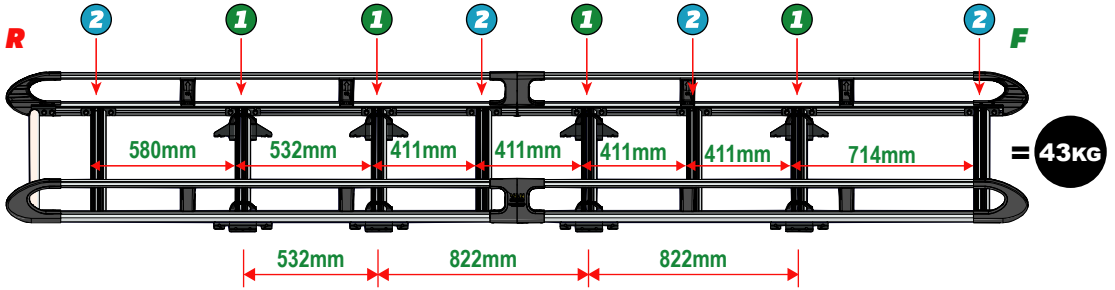

SUPPLIED COMPONENTS - CHECK ALL PARTS ARE PRESENT AND CORRECT BEFORE PROCEEDING (1 OF 2)


TOOLS REQUIRED

10MM X1






13MM X2





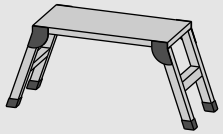


Ø4 & Ø9








AS3549 X2
(3800 / A)

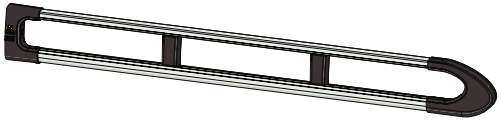


MA6118 X16




FX4241 X36



ME1622 X4




AS3548 X2
(3800 / B)

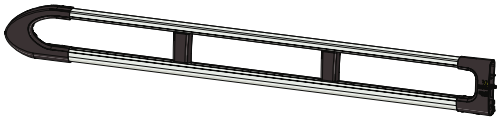


FX4008 X1




MA6145 X1




ME1623 X4



ME1628 X8
(1554mm)




FX4001 X2
(M8X40)




FX4235 X32
(M5X25)



ME0203 X10




AS3160 X1
(1540mm)




MA6007 X4




FX4248 X1
(T25)




MA6065 X10

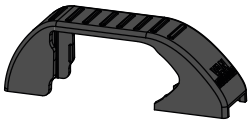


AS3590 X1

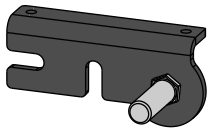


MA6093 X16



FX4239 X36
(M8X20)




ME1620 X4




FX4016 X20
(M6)



AS3591 X1




ME0316 X16




FX4240 X36
(M8)



ME1621 X4




FX4042 X20
(M6X16)




SUPPLIED COMPONENTS - CHECK ALL PARTS ARE PRESENT AND CORRECT BEFORE PROCEEDING (2 OF 2)


ME2500 X8

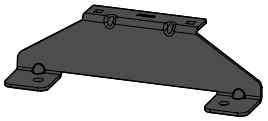


FX4318 X16
(M8)




MA6060 X2
(M8)




ME2501 X16




FX4319 X8
(M8x100)



MA6269 X16




FX4028 X16
(M8x25)




FX4014 X16
(RUBBER)




ME2545 X2

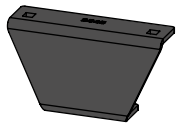

FX4040 X16
(M8)




FX4072 X4
(M8)



FX4011 X24
(M8)



FX4019 X4
(M8)



01

1L

X4

1R

X4

1R

X4

1L

2L

X4

2R

X4

2R

X4

2L

02

03

01

FX4248

02

03

11Nm

04

04


1


X4

2


X4

05

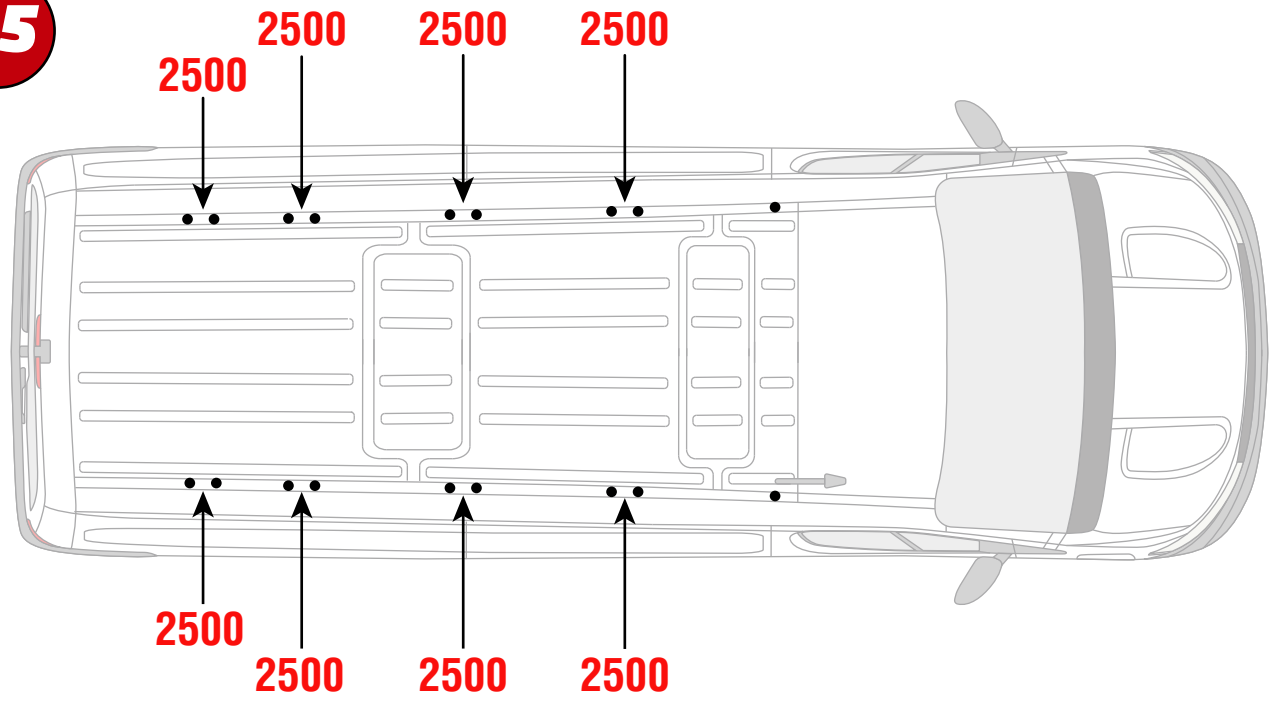
2500
2500
2500
2500
2500
2500
2500
2500

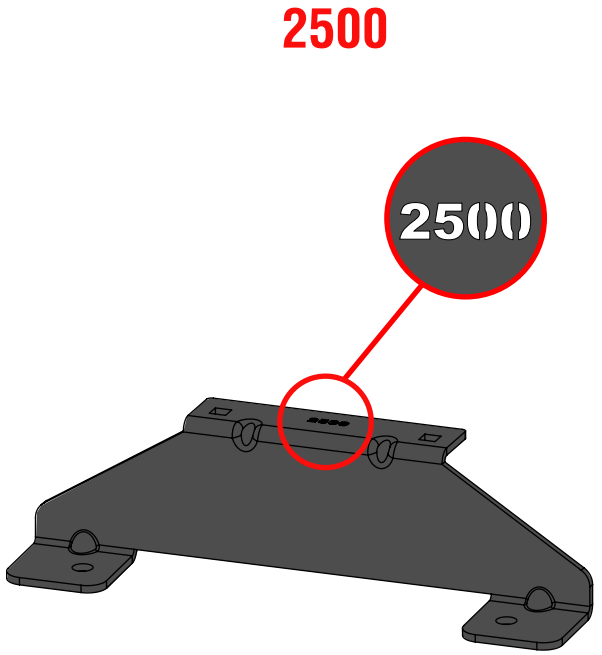
2500
2500


06

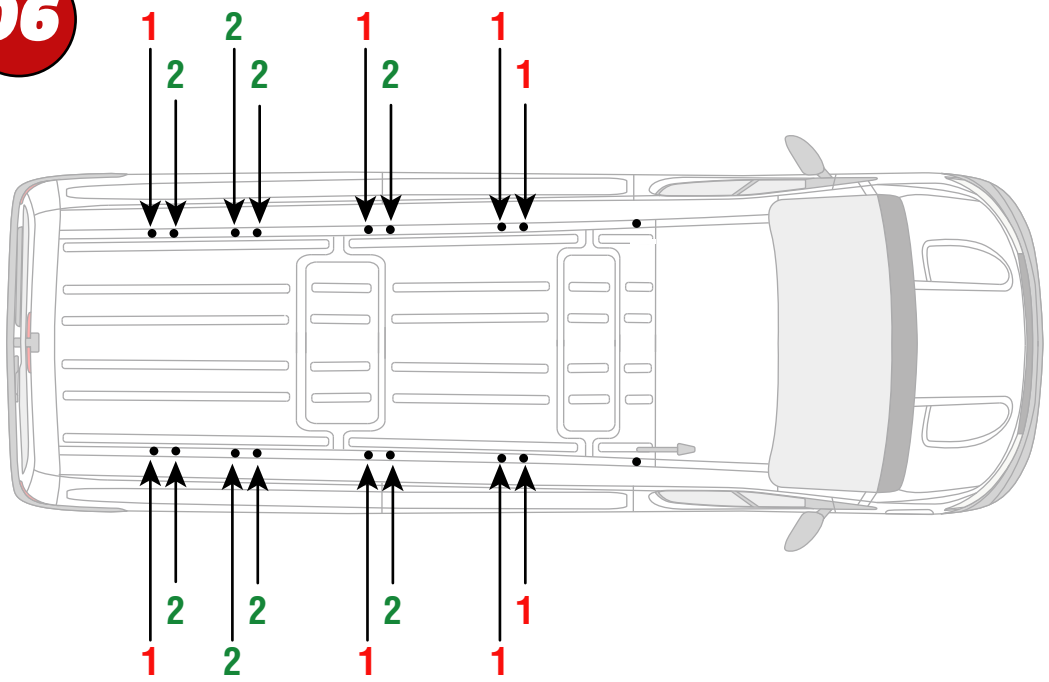
1
2
1
1
2
2
2
1
1
2
2
1
2
2
1
1


1




07

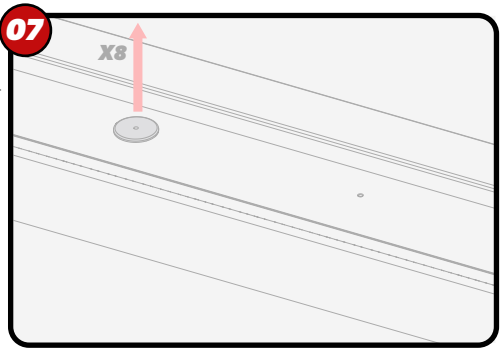
X8


2

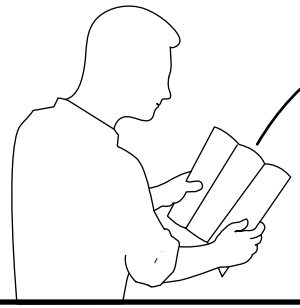


08

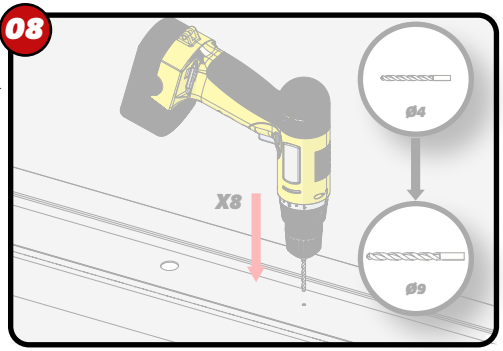
ø4
X8
ø9


07

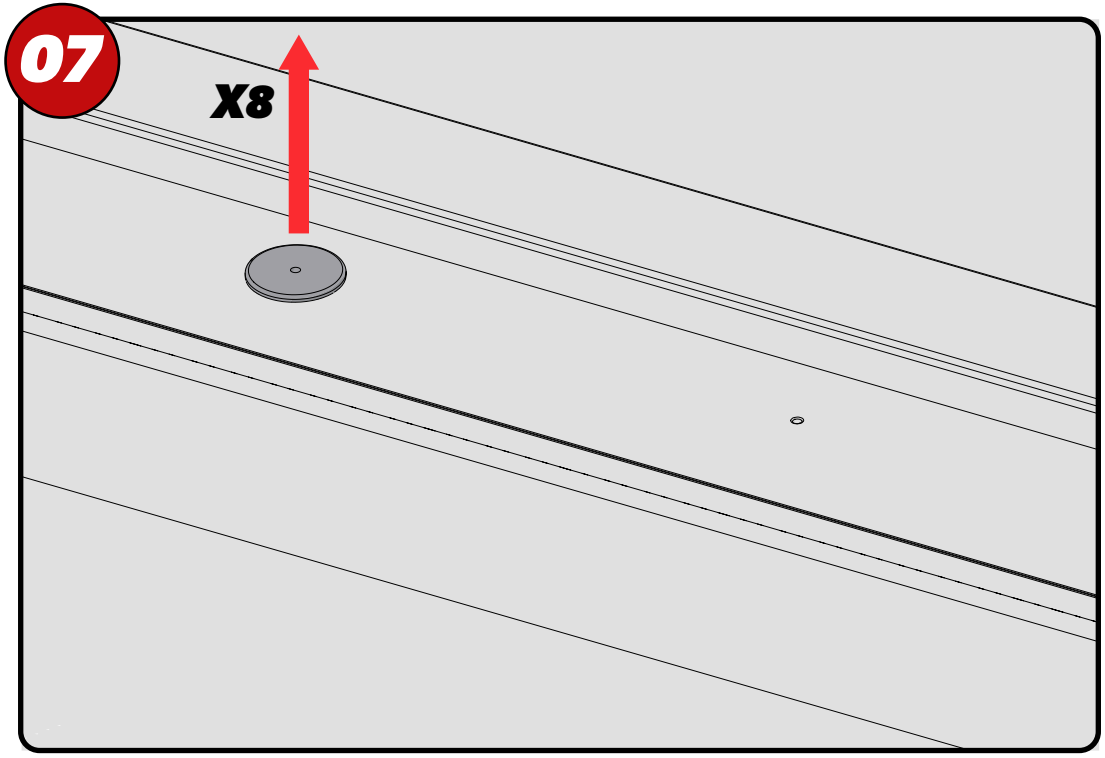


08

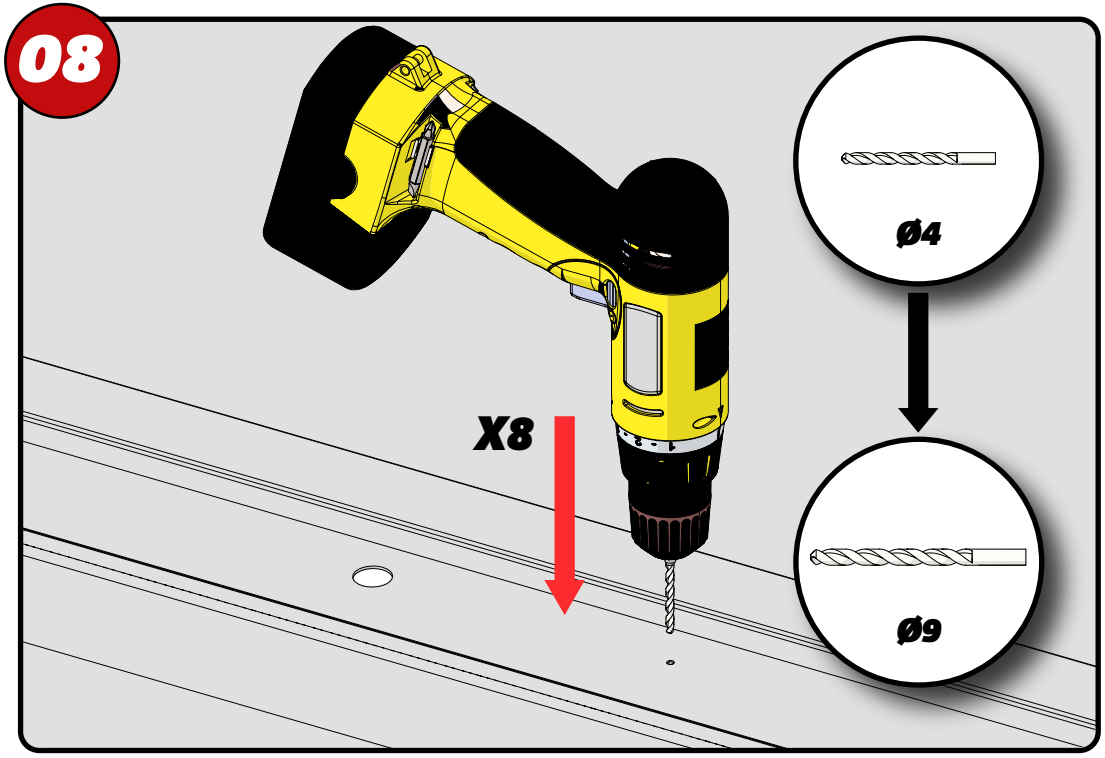


09

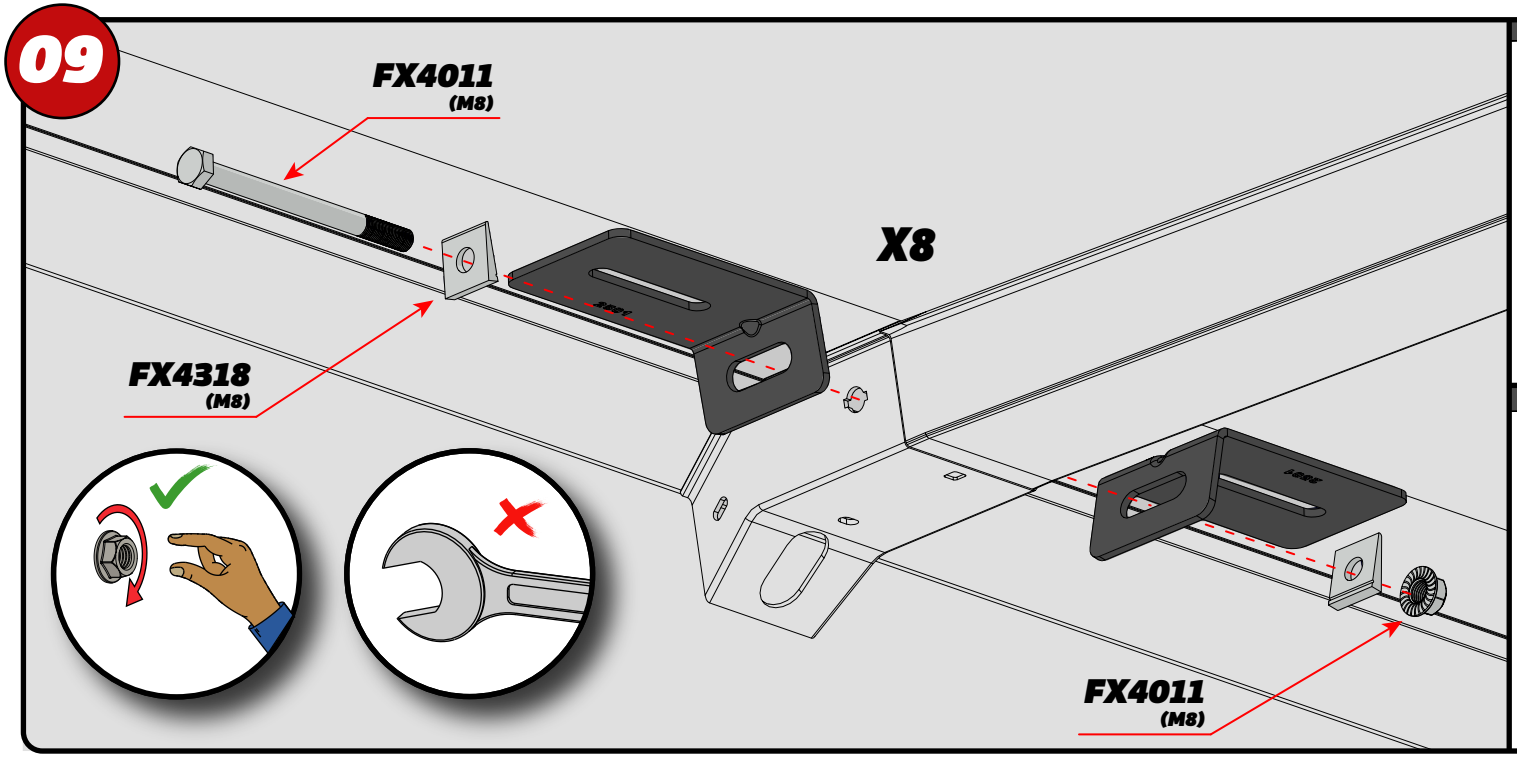

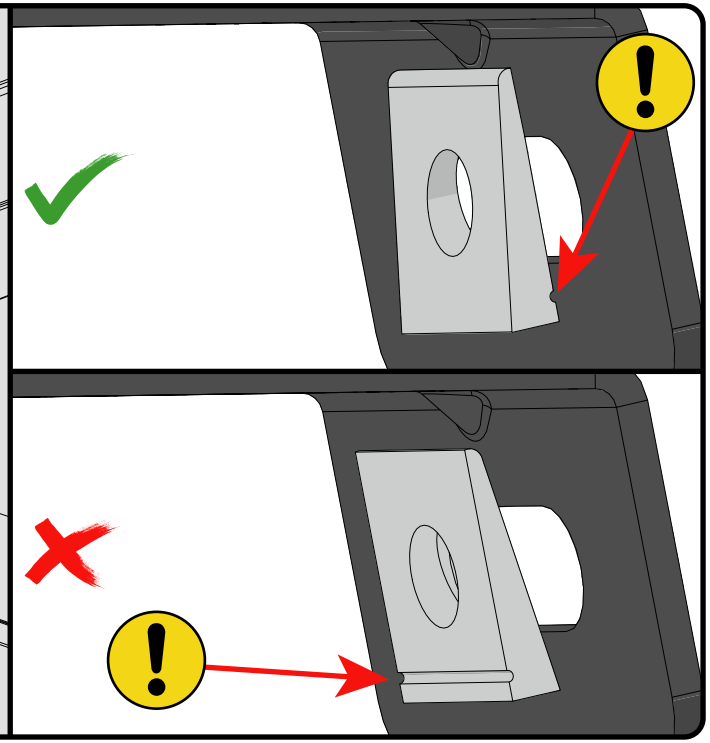


10



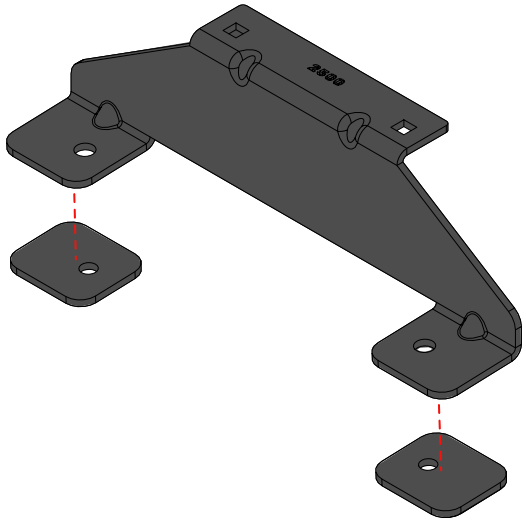



EN - STICK GASKETS TO ALL BRACKETS
DE - KLEBEN SIE DIE DICHTUNG AN ALLEN HALTERUNGEN
FR - COUSSINETS ADHÉSIFS À TOUS LES SUPPORTS
NL - PLAK PAKKING OP ALLE BEUGELS
ES - PEGA LAS ALMOHADILLAS A TODOS LOS SOPORTES
IT - ADESIVI GUARNIZIONI A TUTTE LE STAFFE
SV - FÄST GUMMI PÅ ALLA FÄSTEN
DA - KLÆB GUMMI PÅ ALLE BESLAG
NO - PLIST GUMMI PÅ ALLE BRAKKETTER
PL - NAKLEJ USZCZELKI DO WSZYSTKICH WSPORNIKÓW
CS - PŘILEPTE TĚSNĚNÍ NA VŠECHNY DRŽÁKY

11

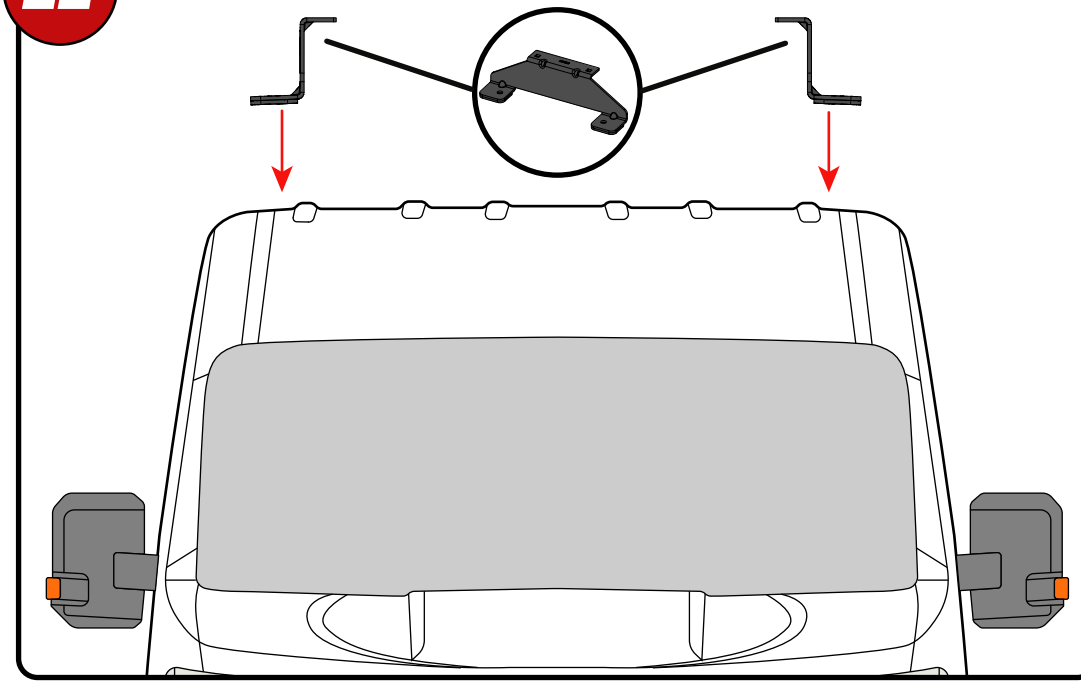


12

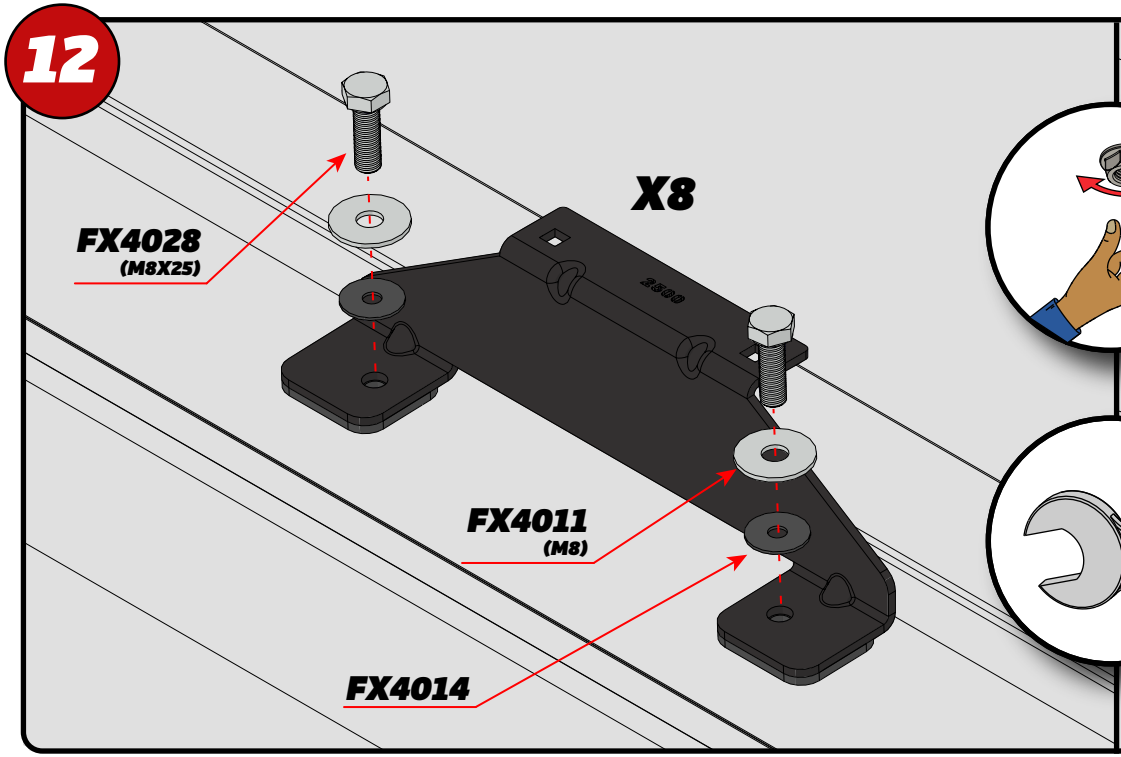


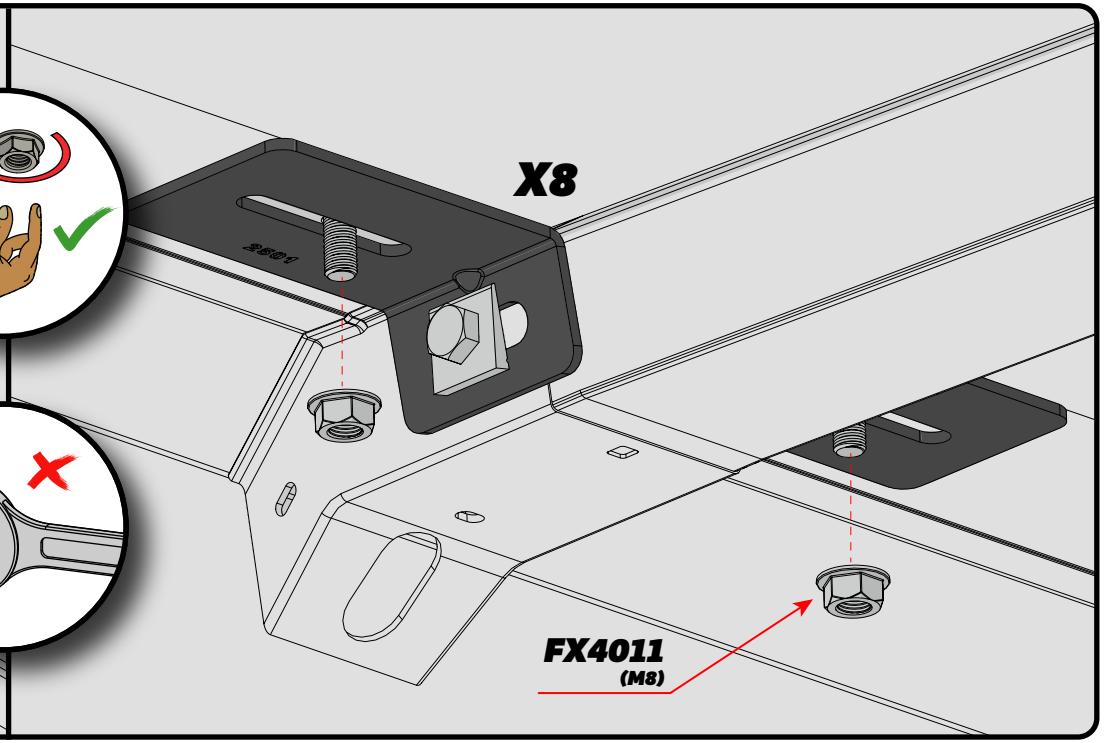

13

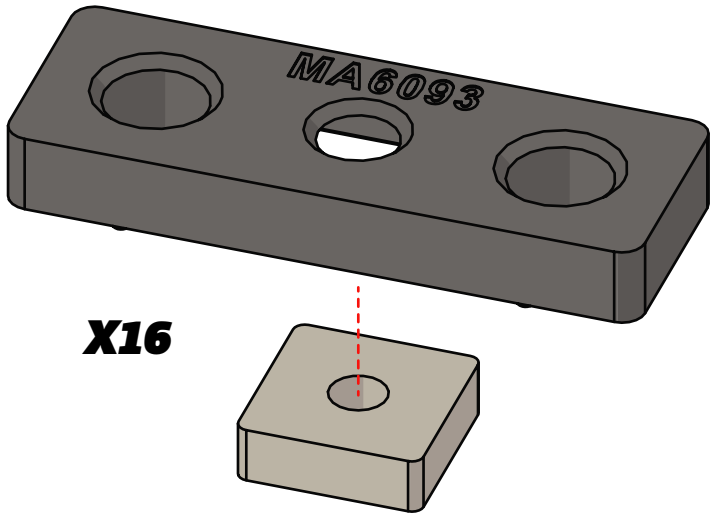


14

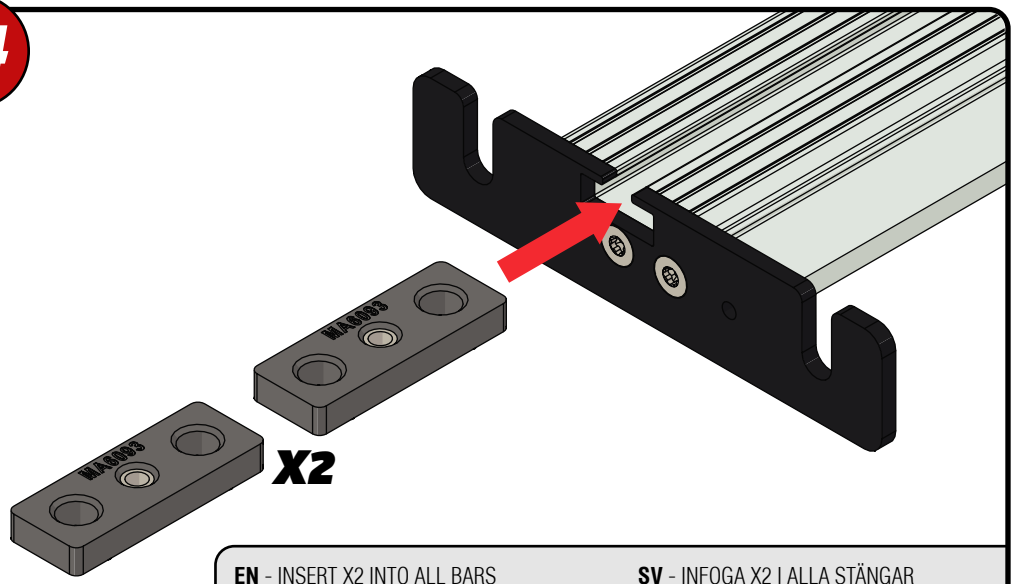


EN - INSERT X2 INTO ALL BARS
DE - X2 IN ALLE STANGEN EINFÜGEN
FR - INSÉRER X2 DANS TOUTES LES BARRES
NL - PLAATS X2 IN ALLE BARS
ES - INSERTAR X2 EN TODAS LAS BARRAS
IT - INSERIRE X2 IN TUTTE LE BARRE
SV - INFOGA X2 I ALLA STÄNGAR
DA - INDSÆT X2 I ALLE STÆNGER
NO - SETTE X2 I ALLE STENGENE
PL - WSTAW X2 DO WSZYSTKICH PRĘTÓW
CS - VLOŽTE X2 DO VŠECH TYČÍ


15

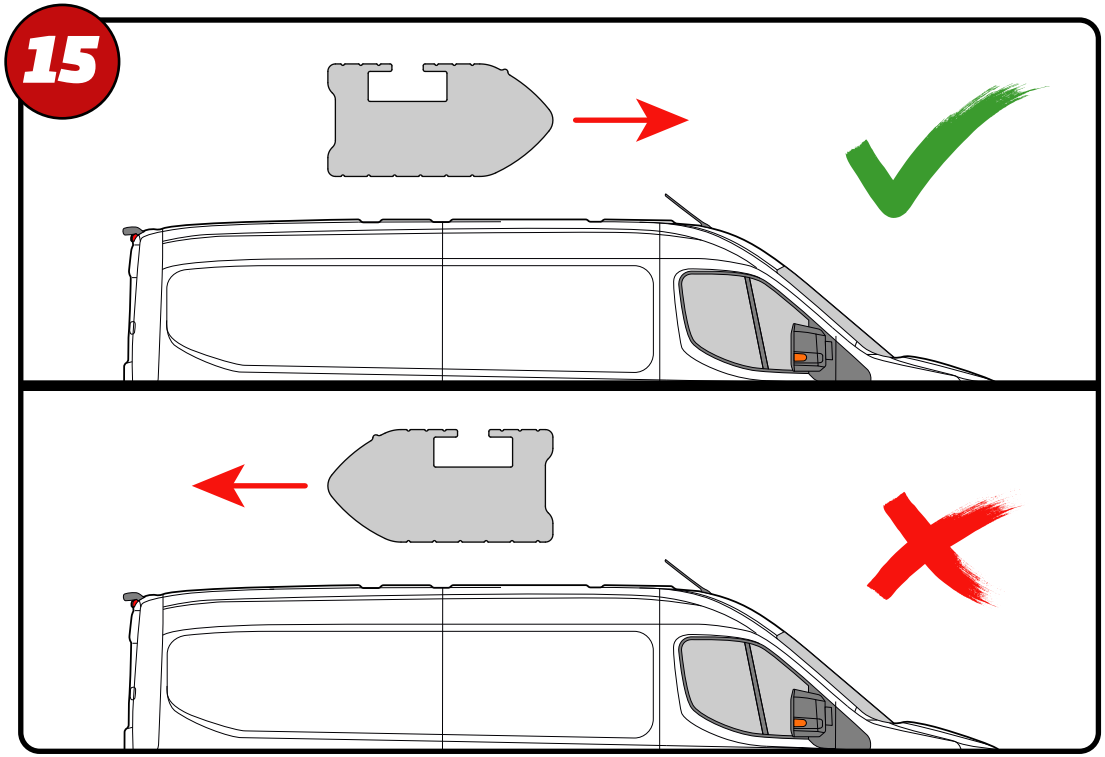


16

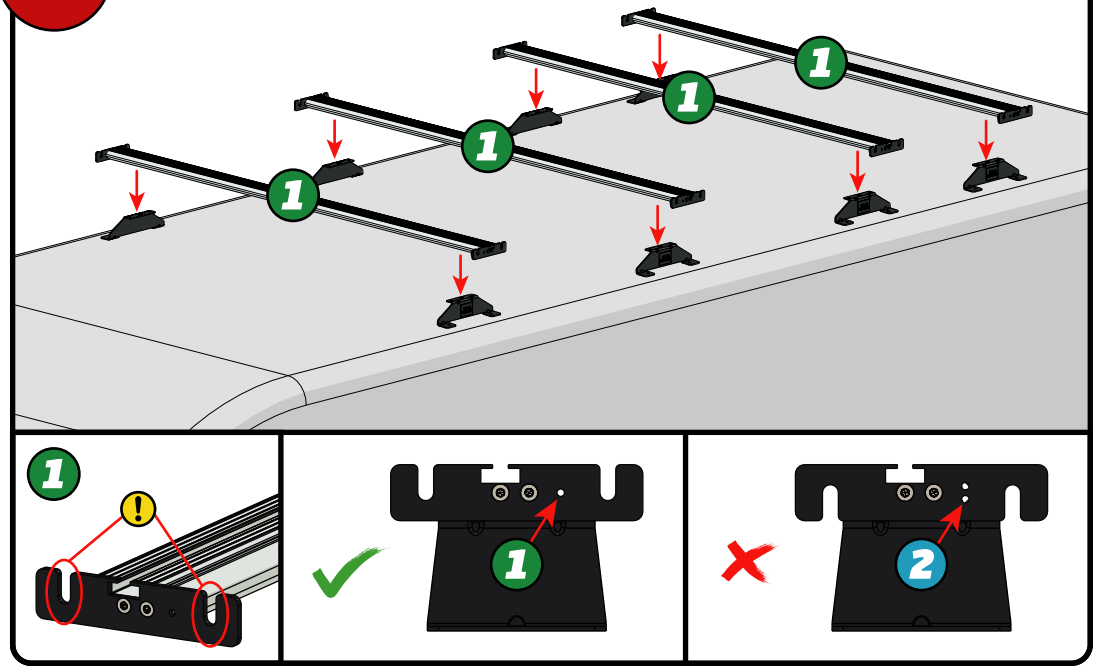


17

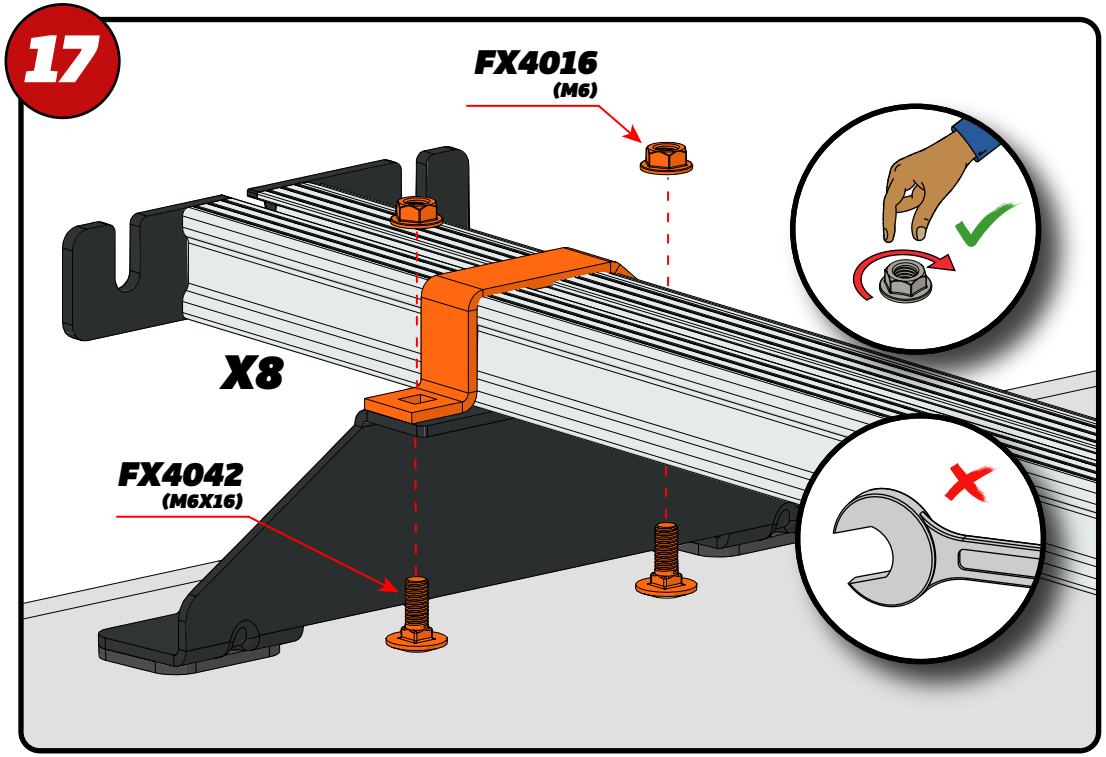


18

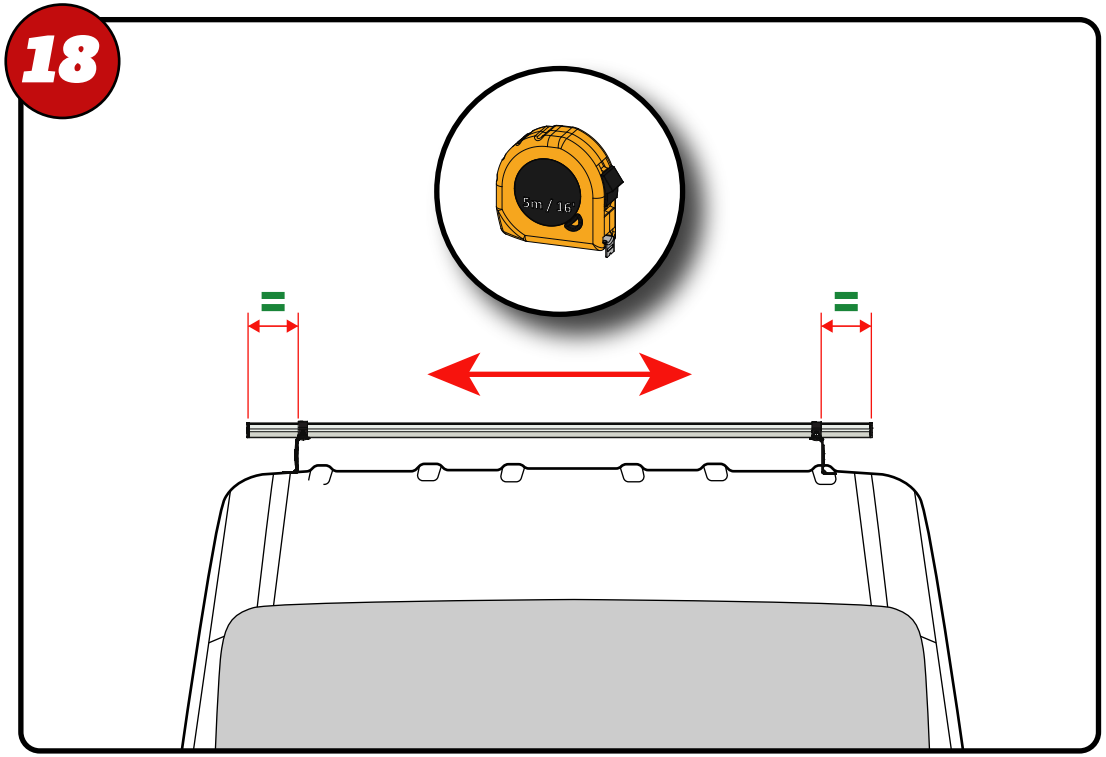

19

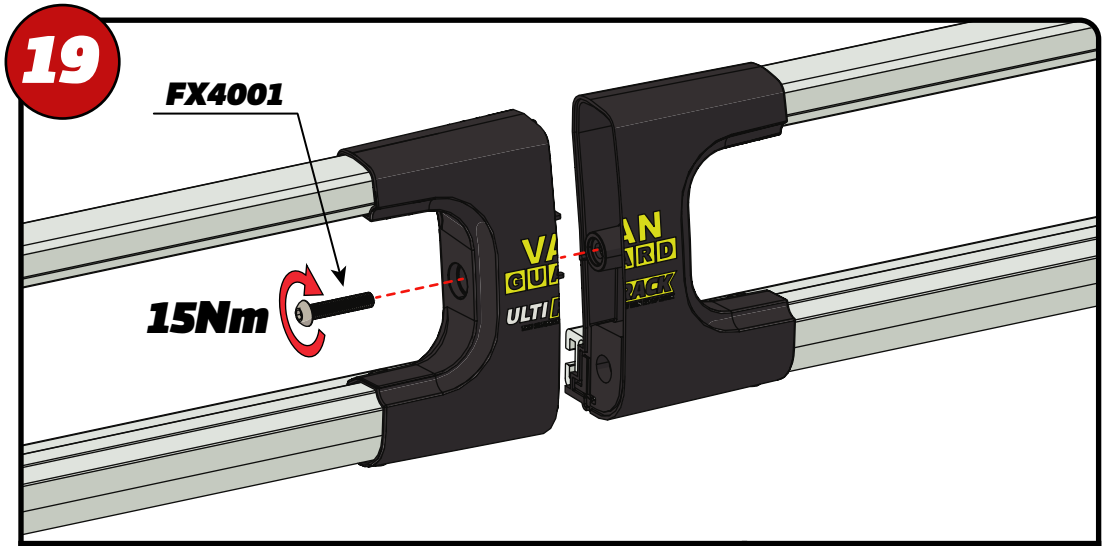


X2

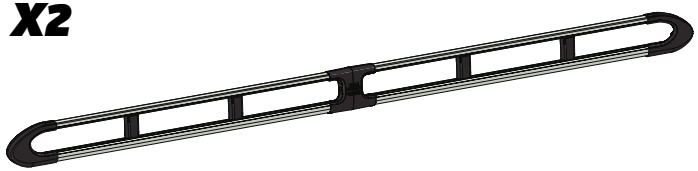


FX4008




20

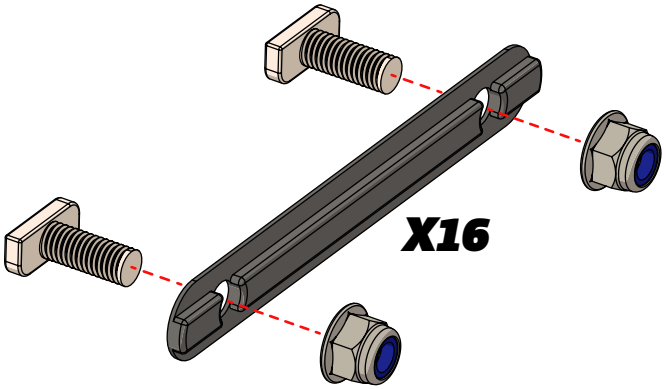


21

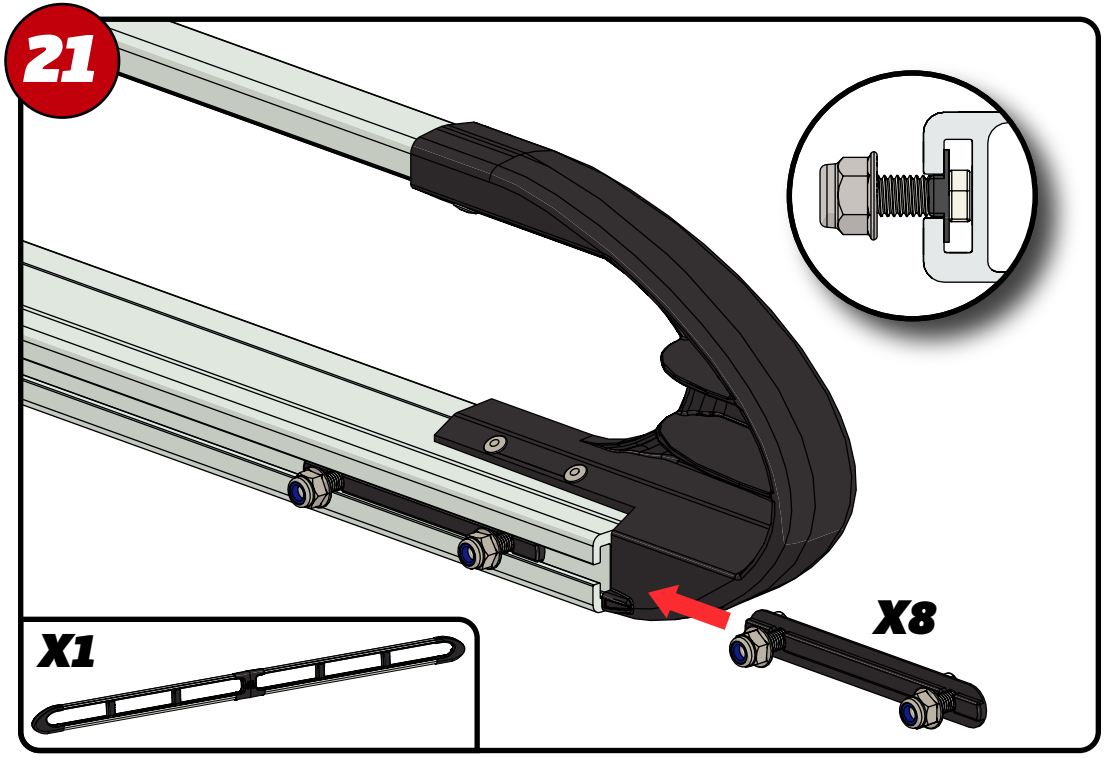


22

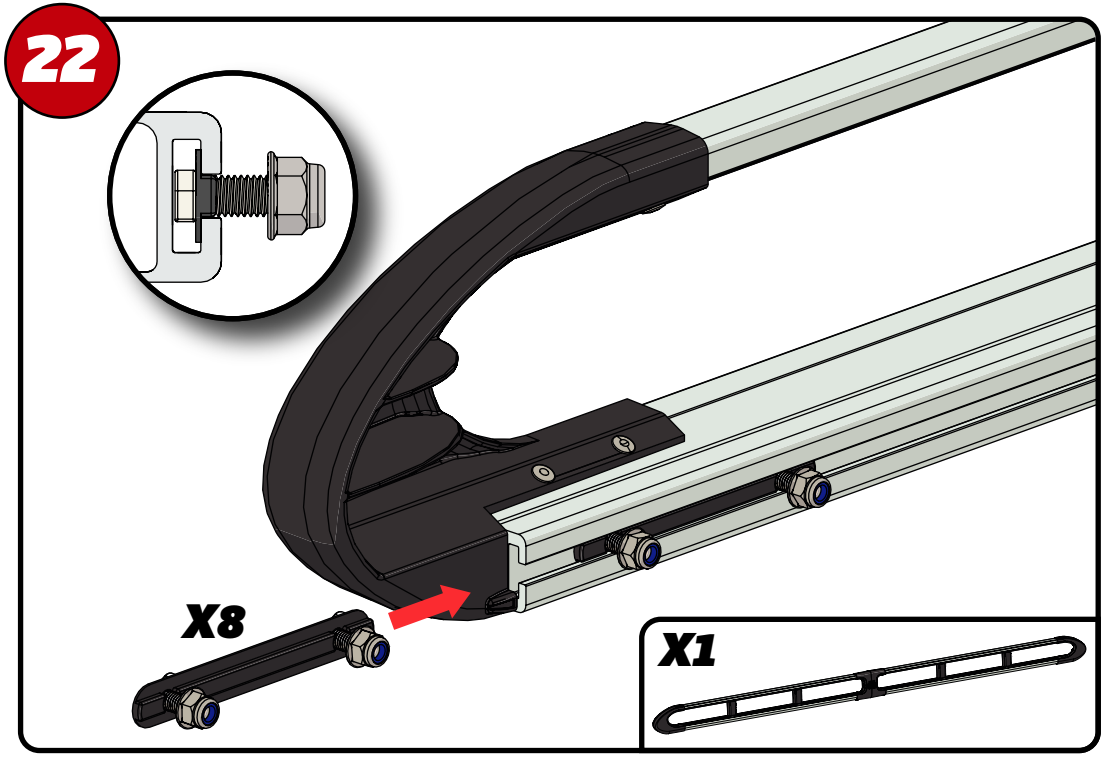


23

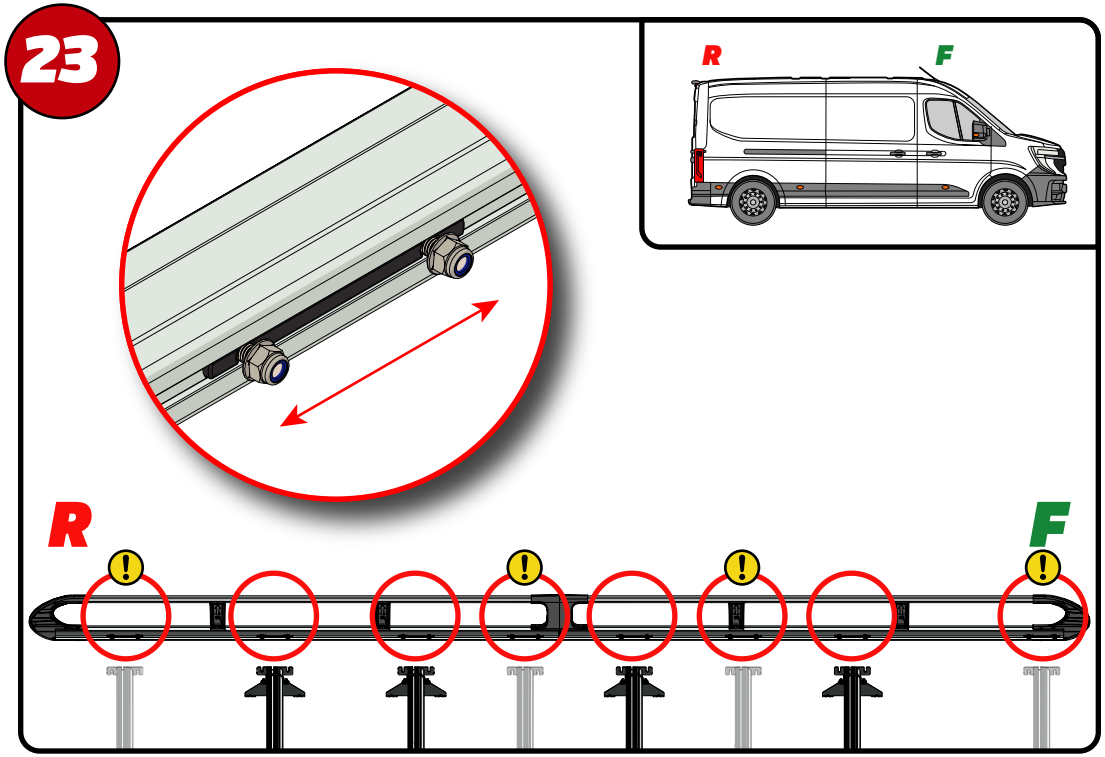


24

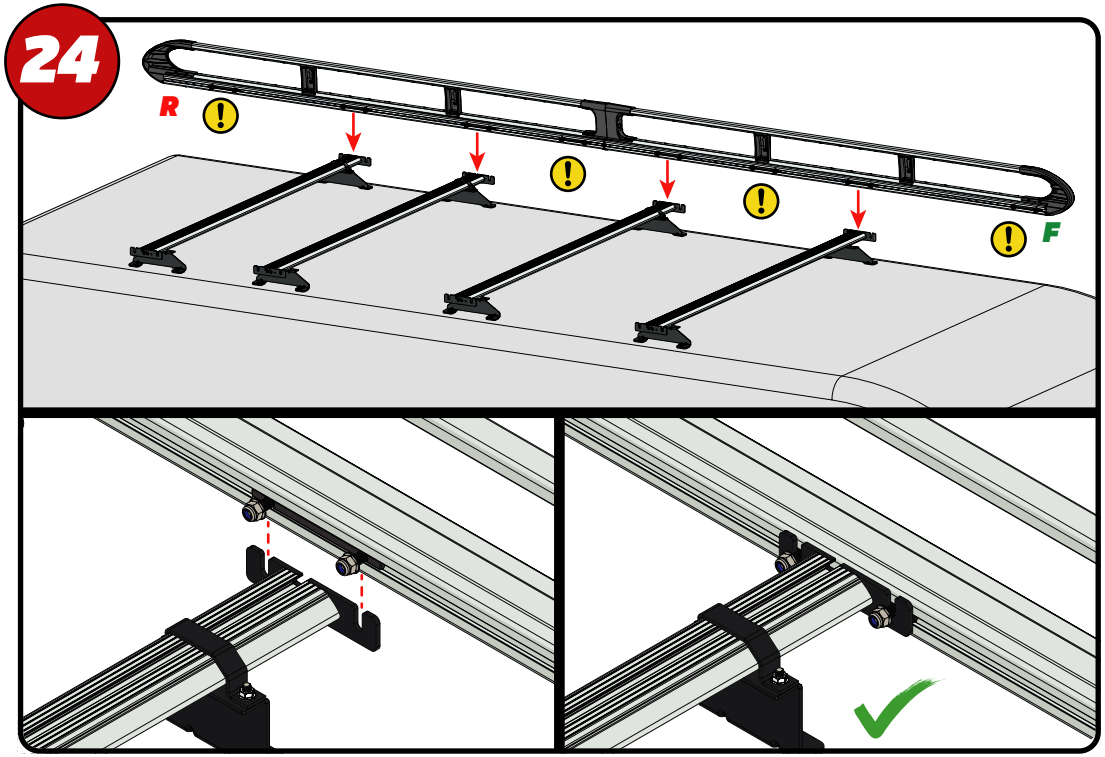


25

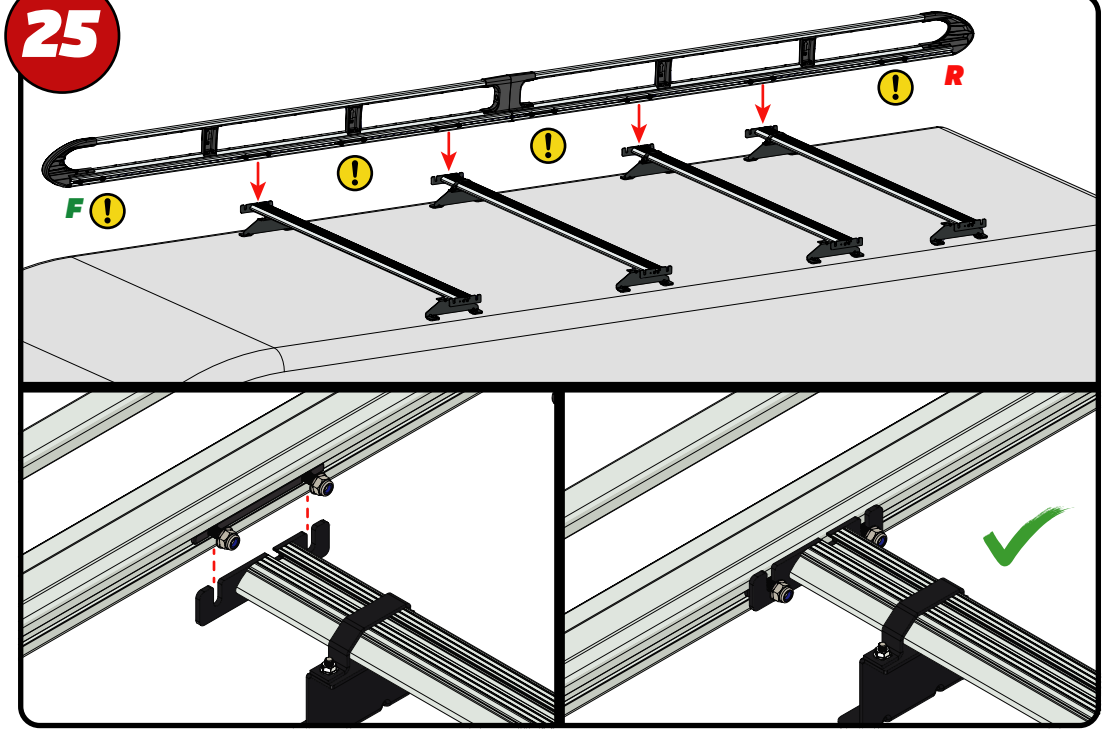


26

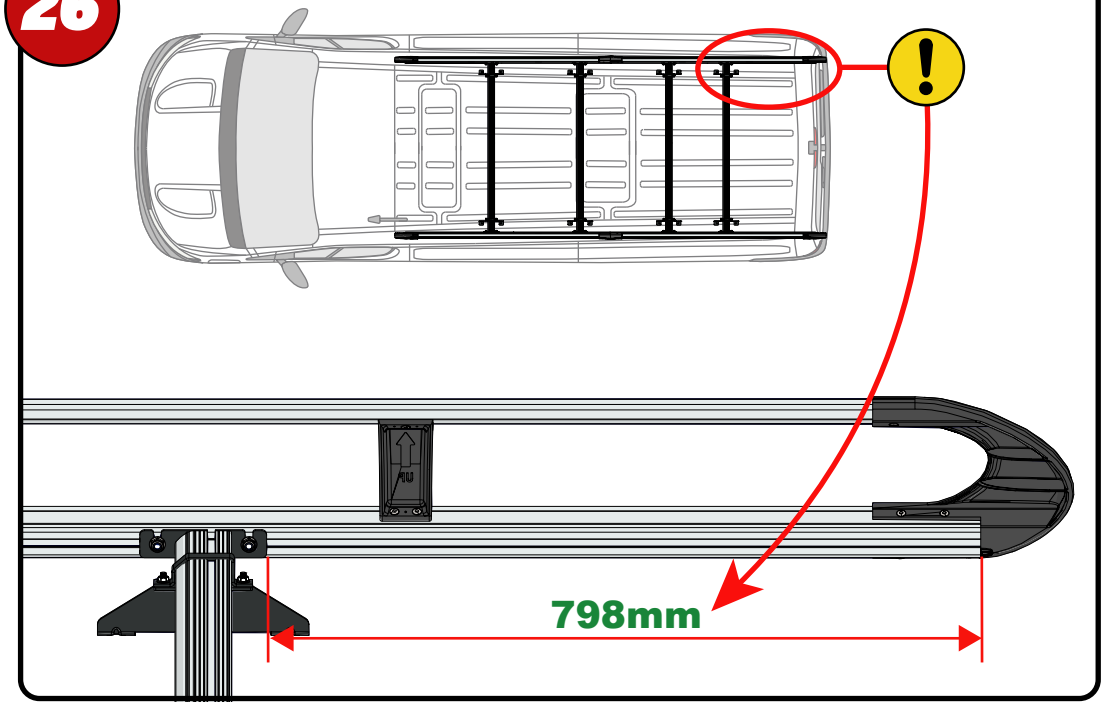


27

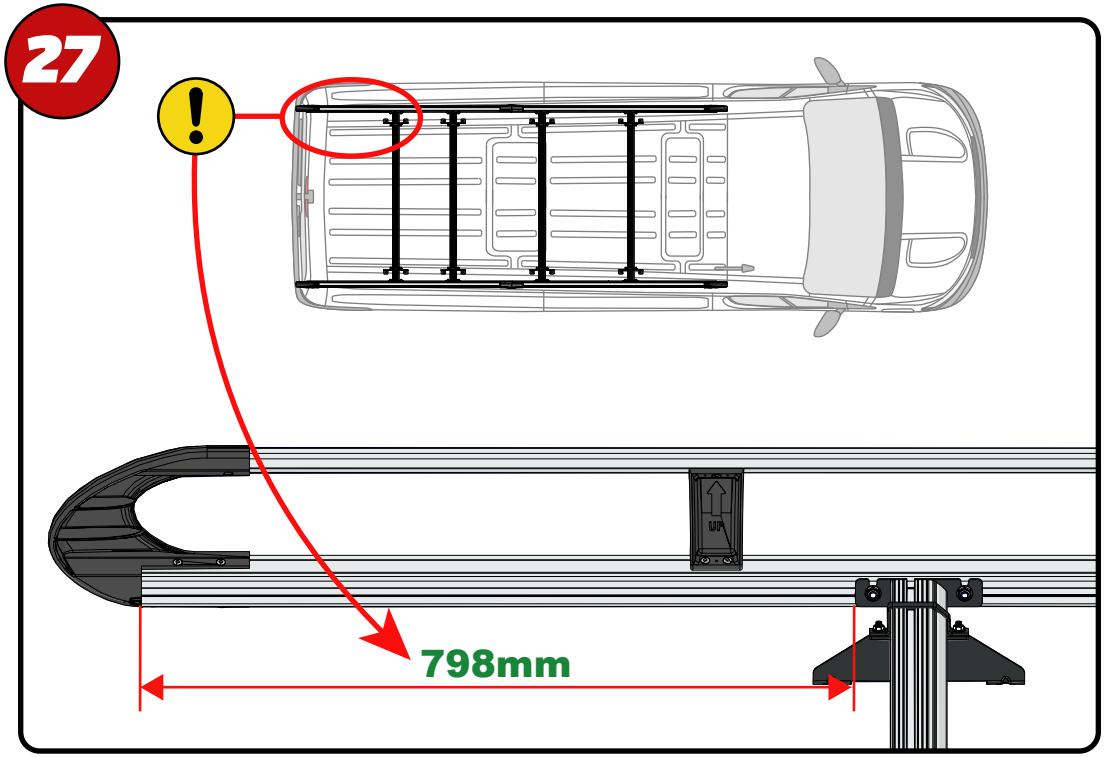


28

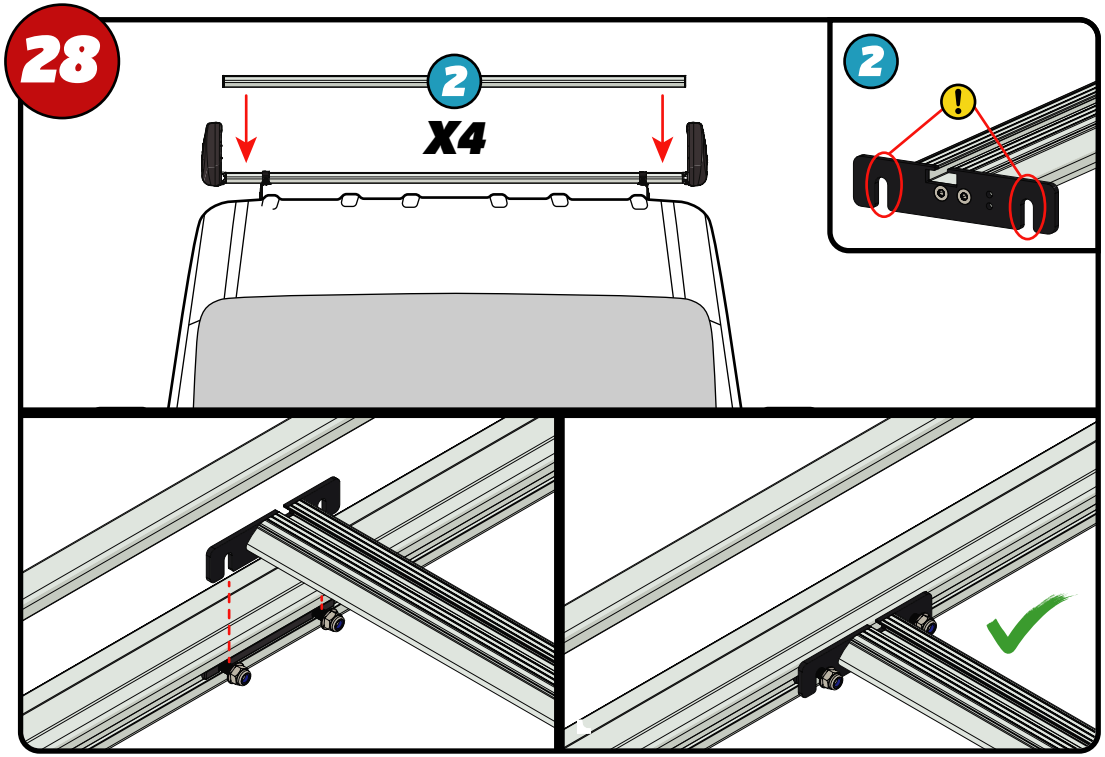


29

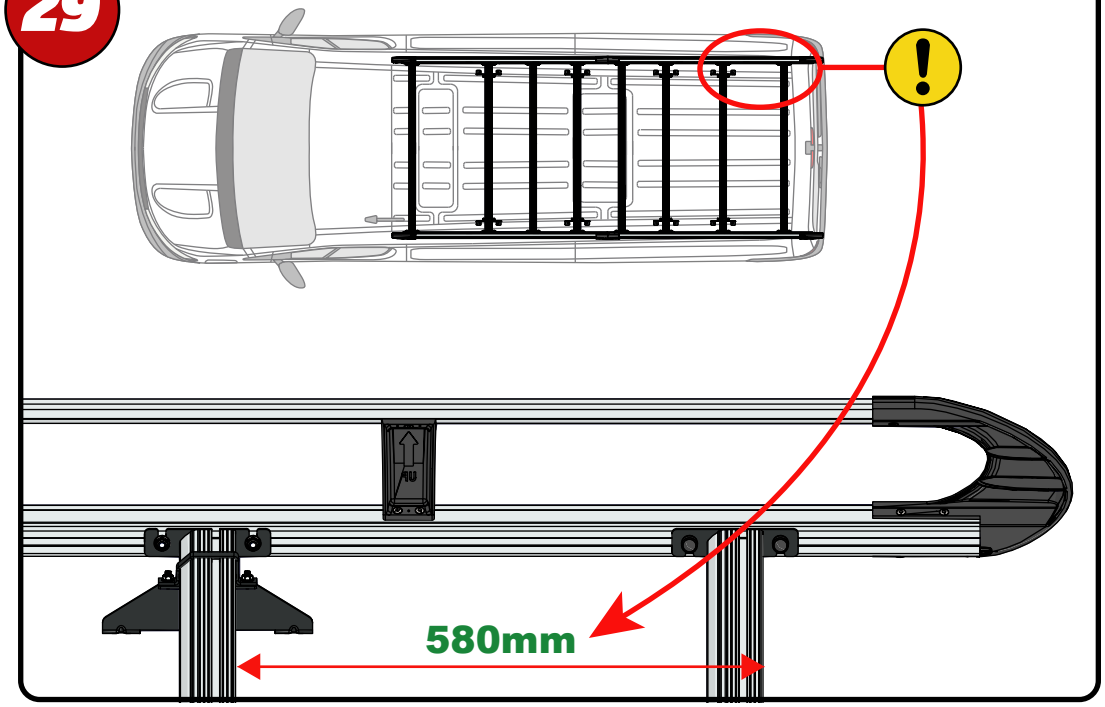


30

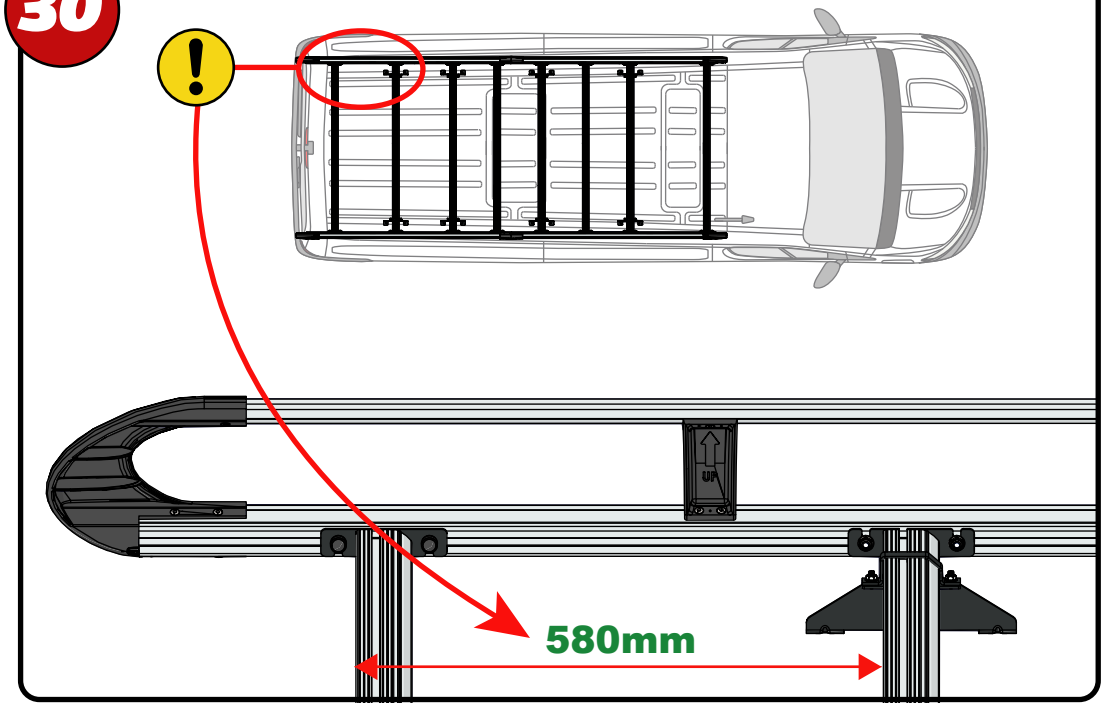


31

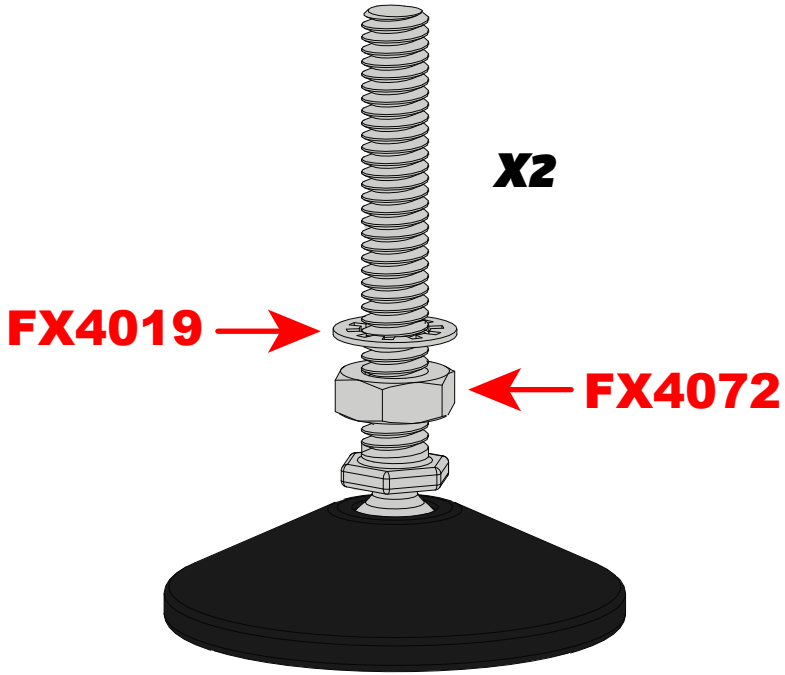


32

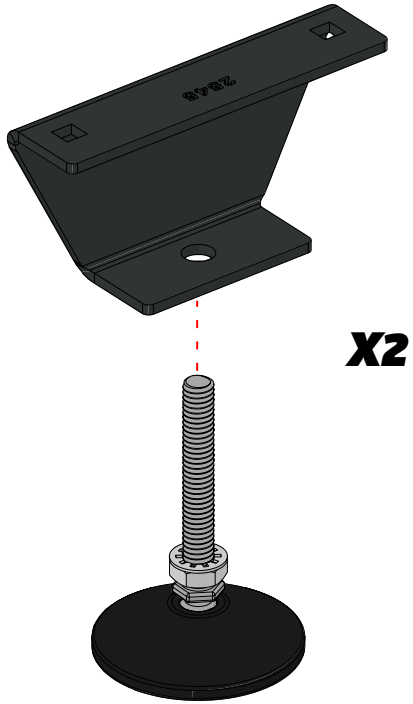


33

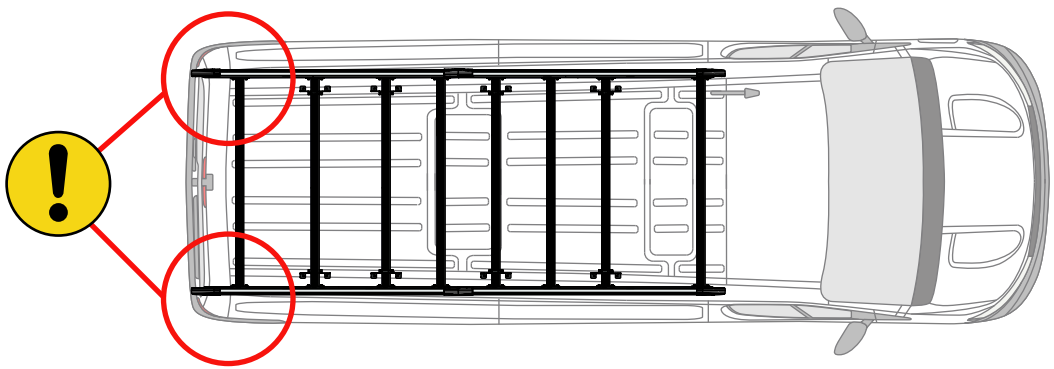


34

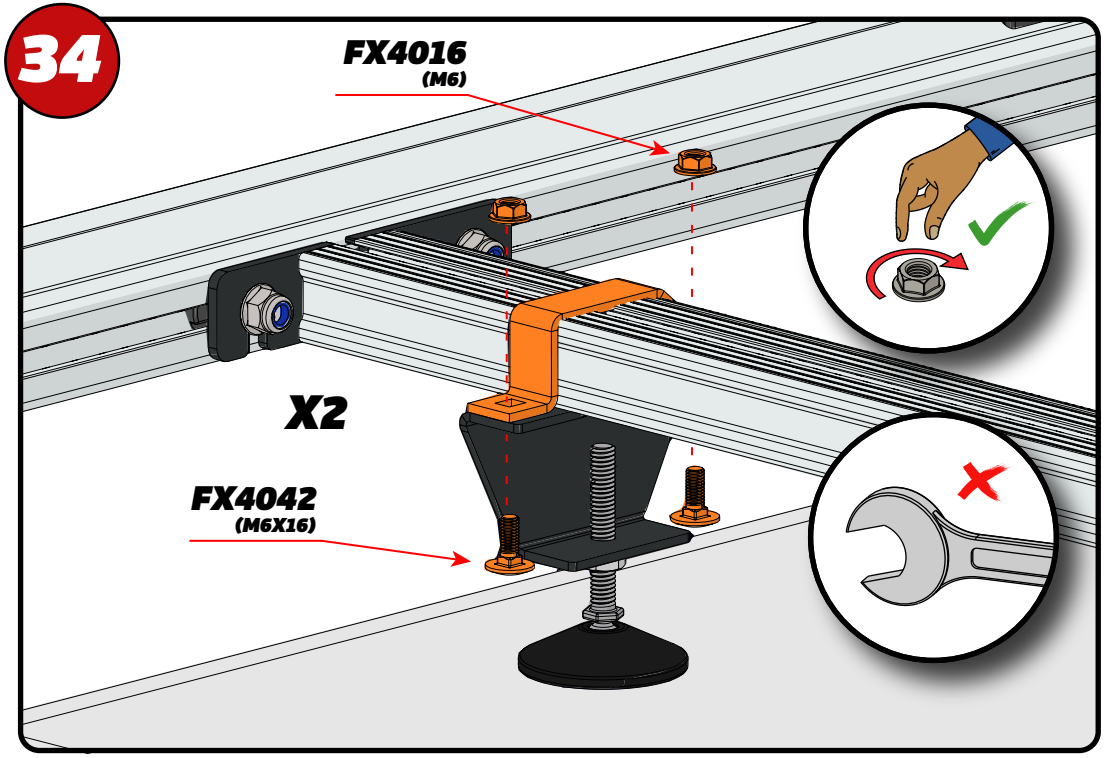


35

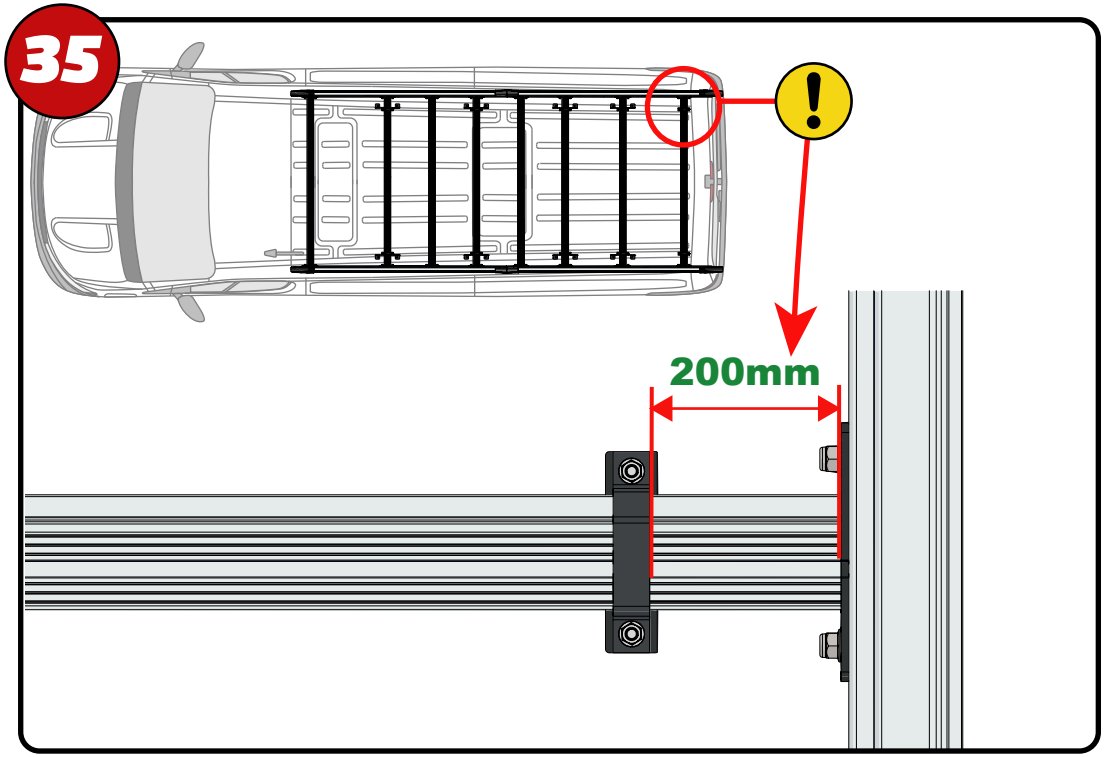


36

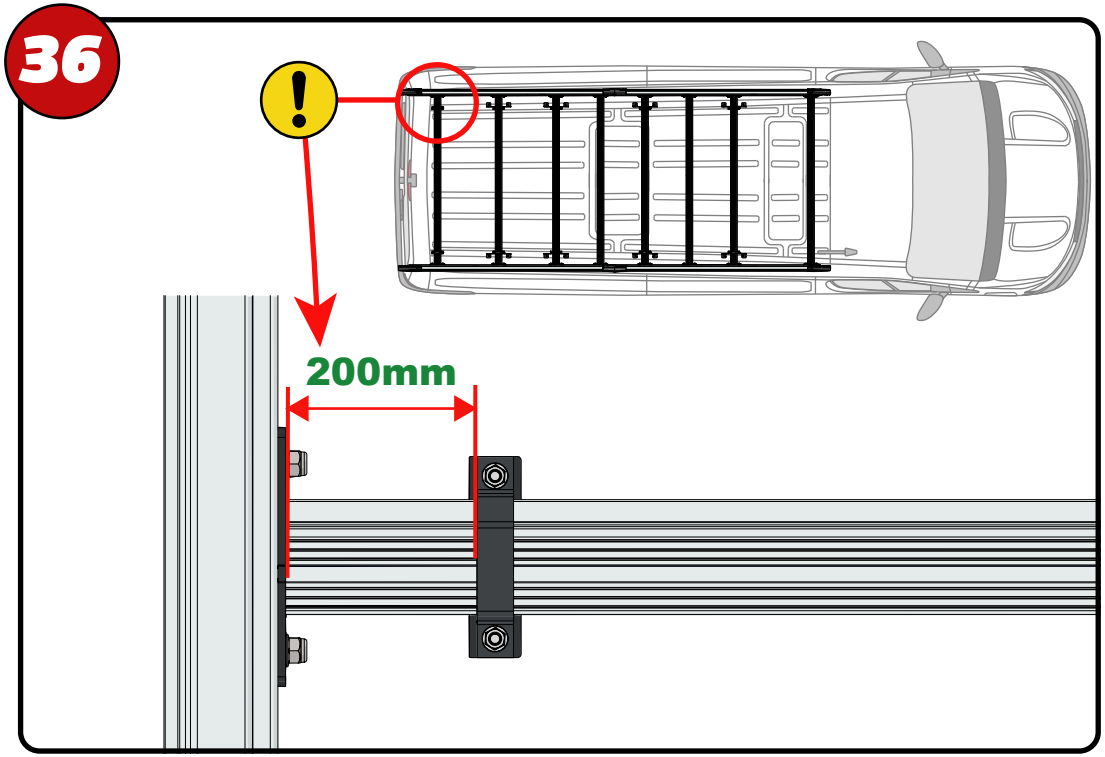

37

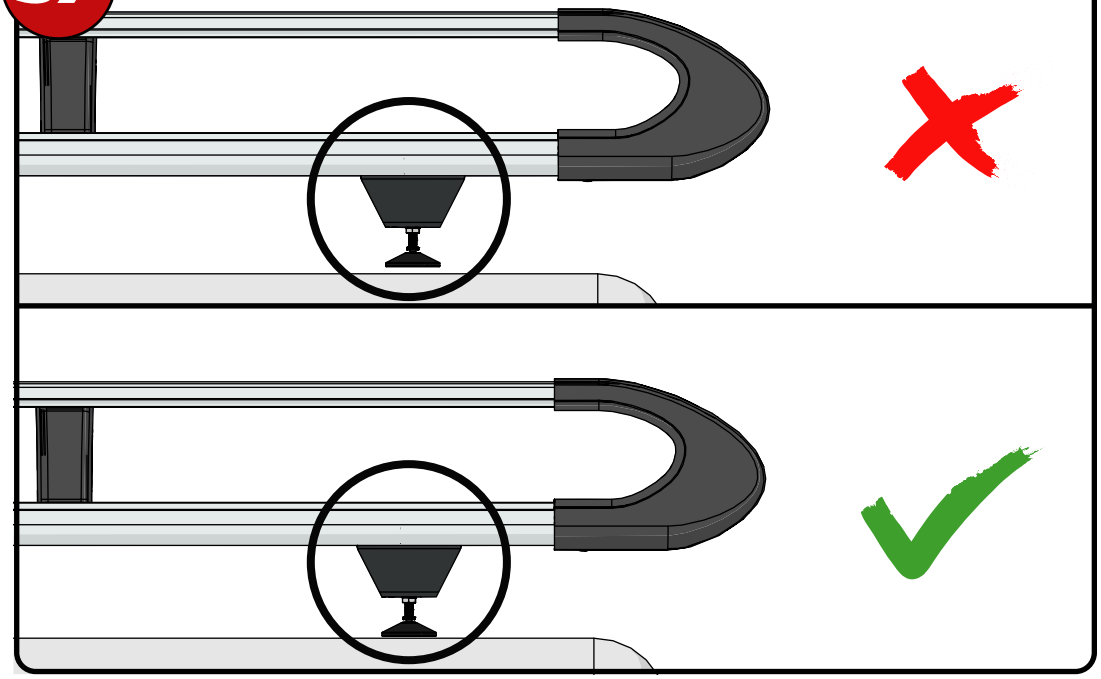


38

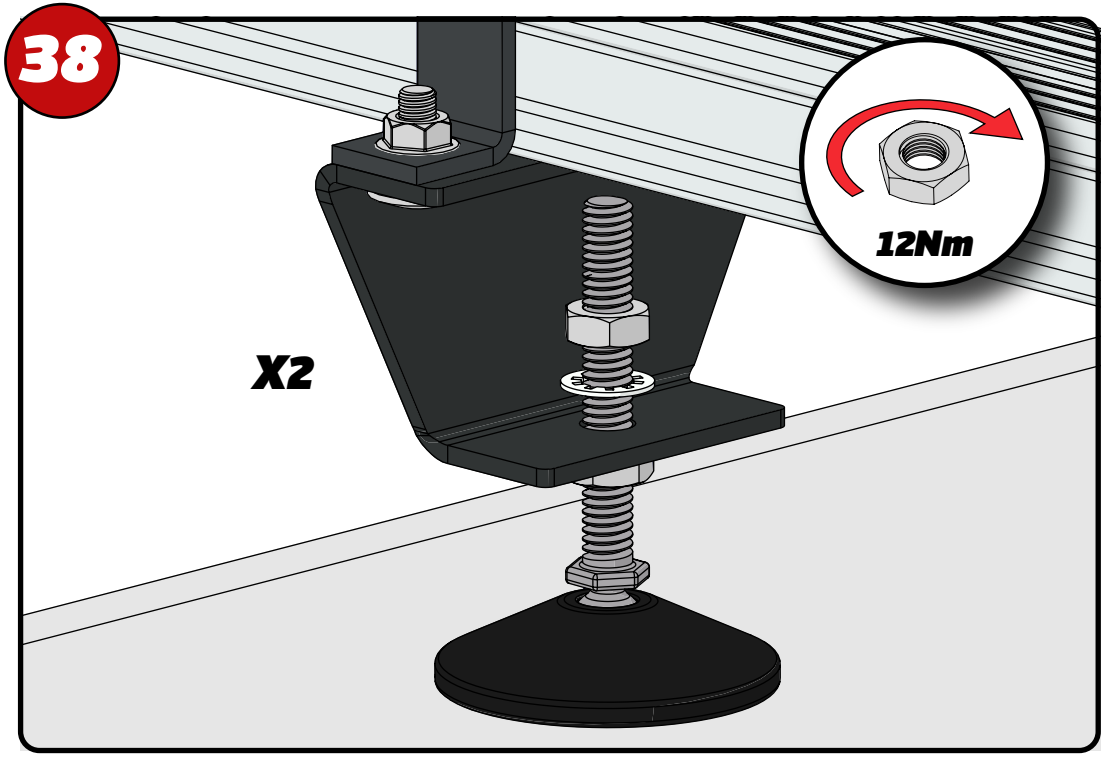


39

XXX =
PAGE 2 OF 19

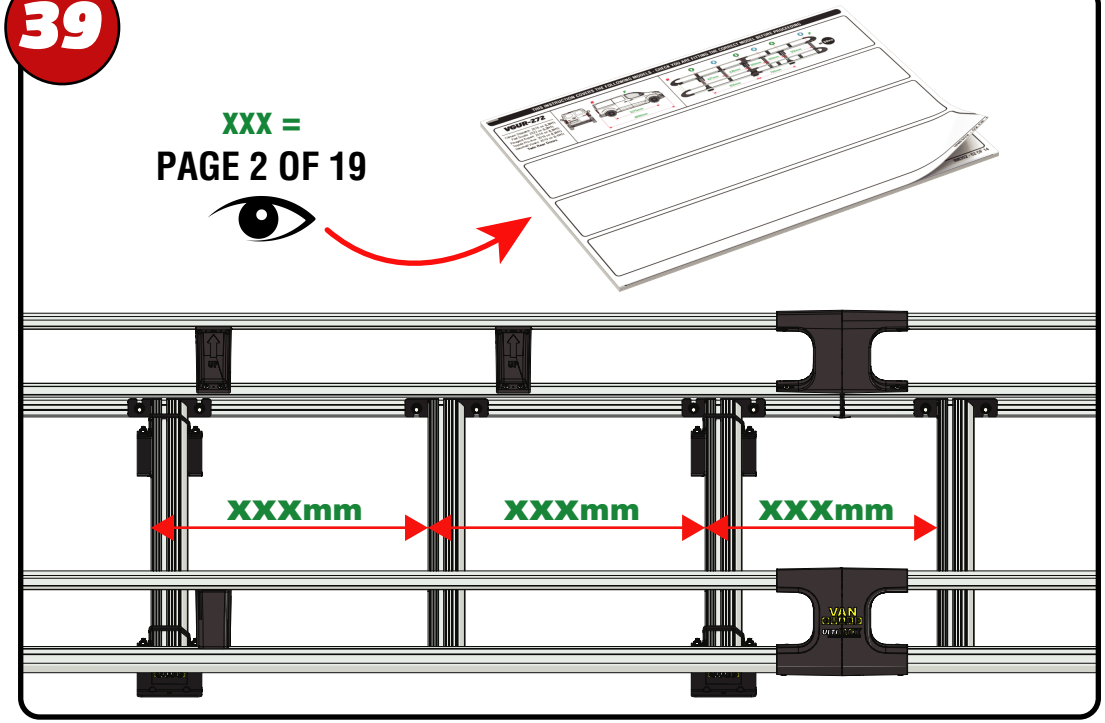


40

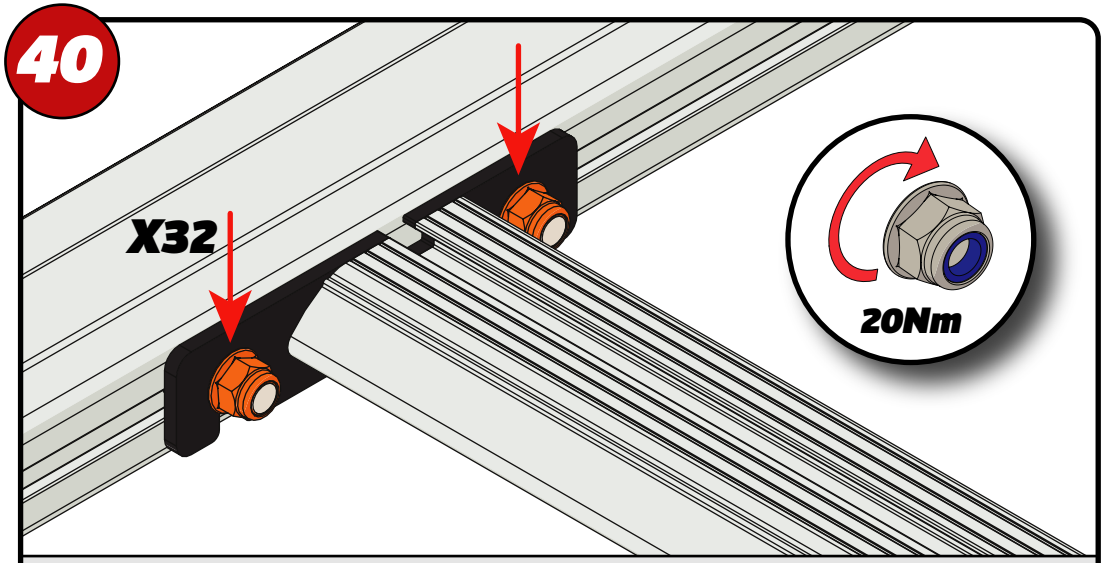



EN - TIGHTEN ALL OF THE CROSS BARS
DE - ALLE QUERSTANGEN FESTZIEHEN
FR - SERREZ TOUTES LES BARRES TRANSVERSALES
NL - DRAAI ALLE DWARSBALK VAN HET DAK AAN
ES - APRIETE TODAS LAS BARRAS TRANSVERSALES
IT - STRINGERE TUTTE LE BARRE TRASVERSALI
SV - SKRU UPP ALLA KORSSTANGAR
DA - SKRU ALLE TAGBØJLER OP
NO - SKRU OPP ALLE TVERRSTENGER
PL - DOKRĘCIĆ WSZYSTKIE POPRZECZKI
CS - VŠECHNY PŘÍČNÉ TYČE SEŠROUJTE

41

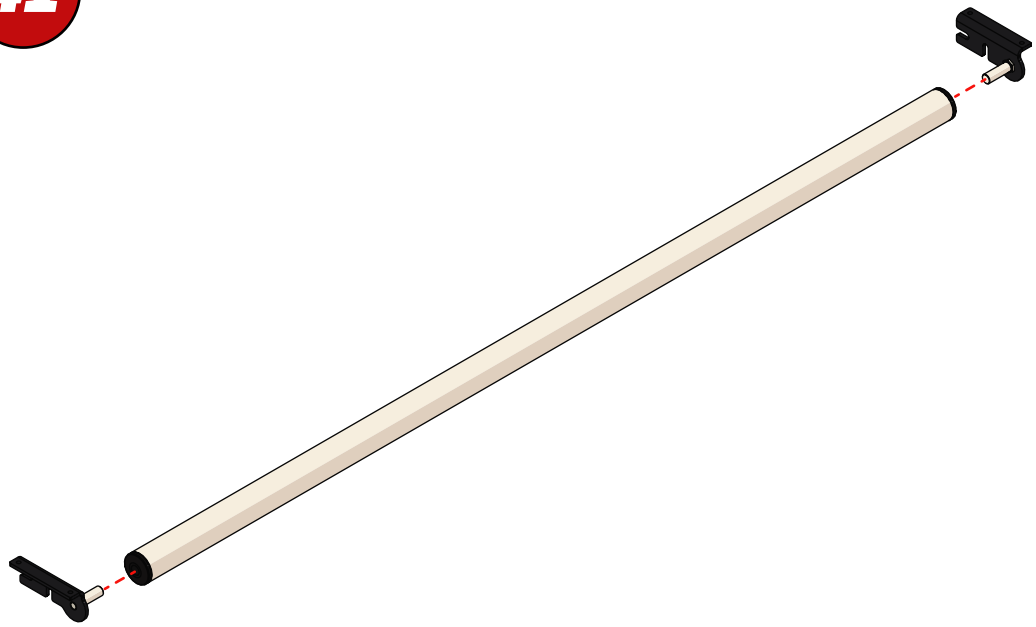


42

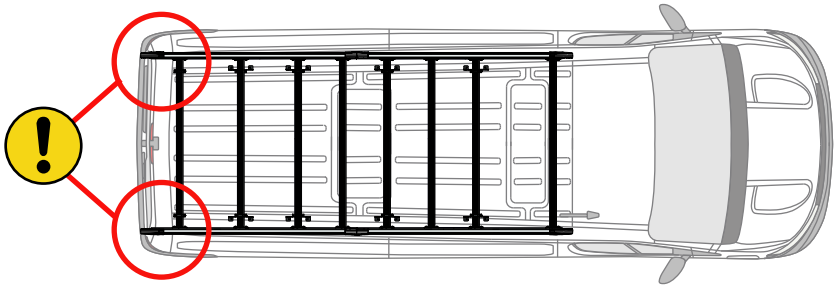


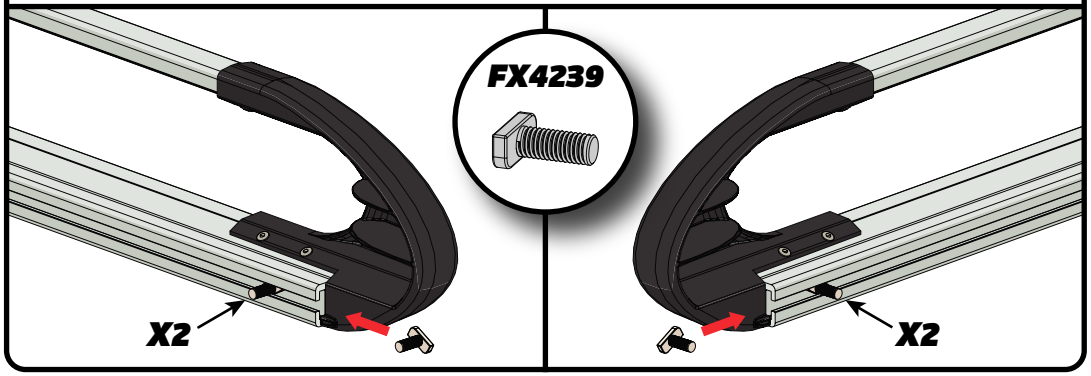


43

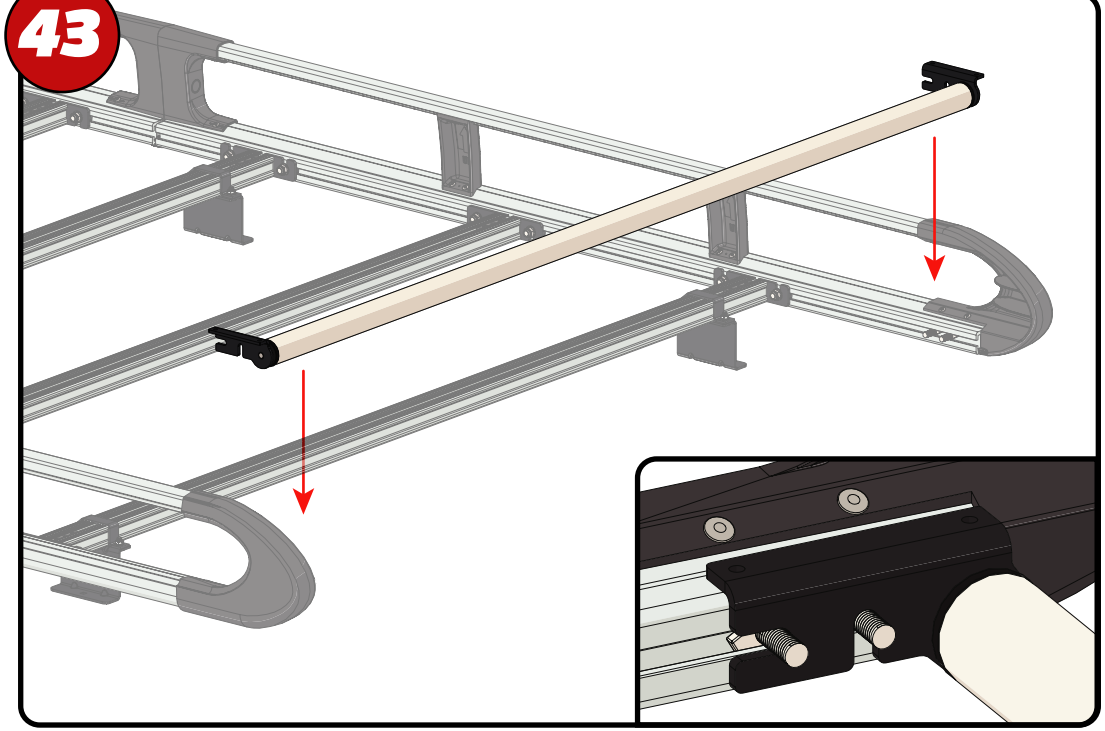


44

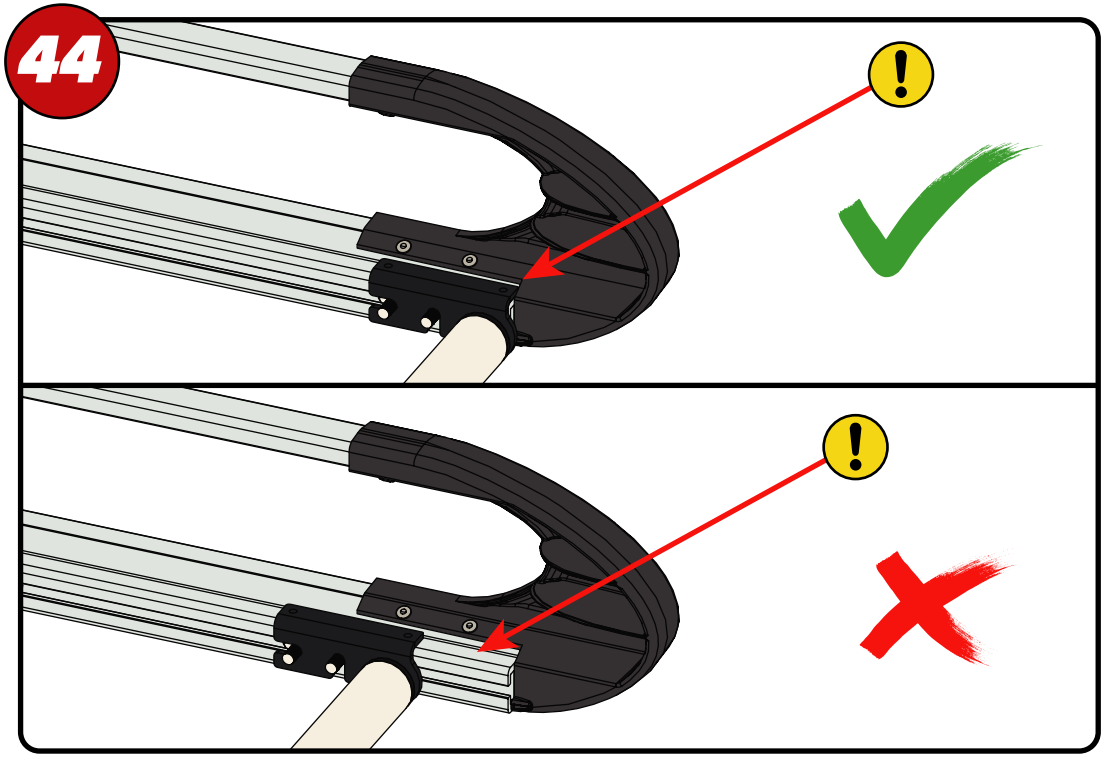


45

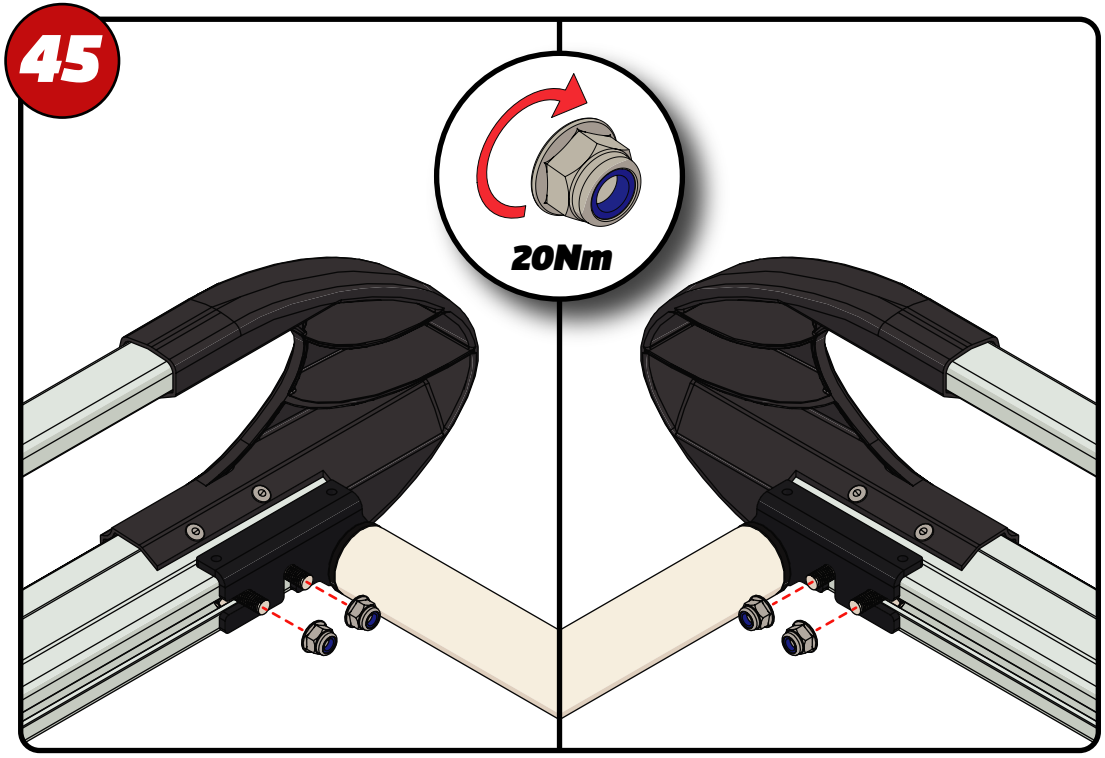


46

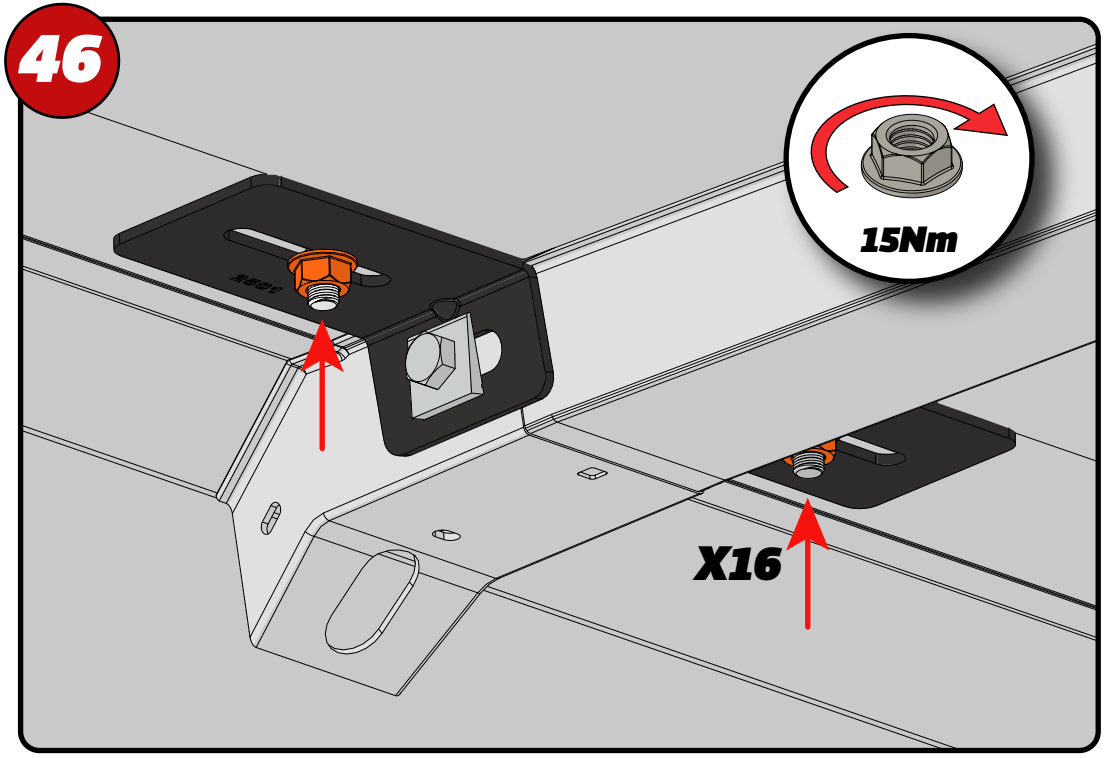


47

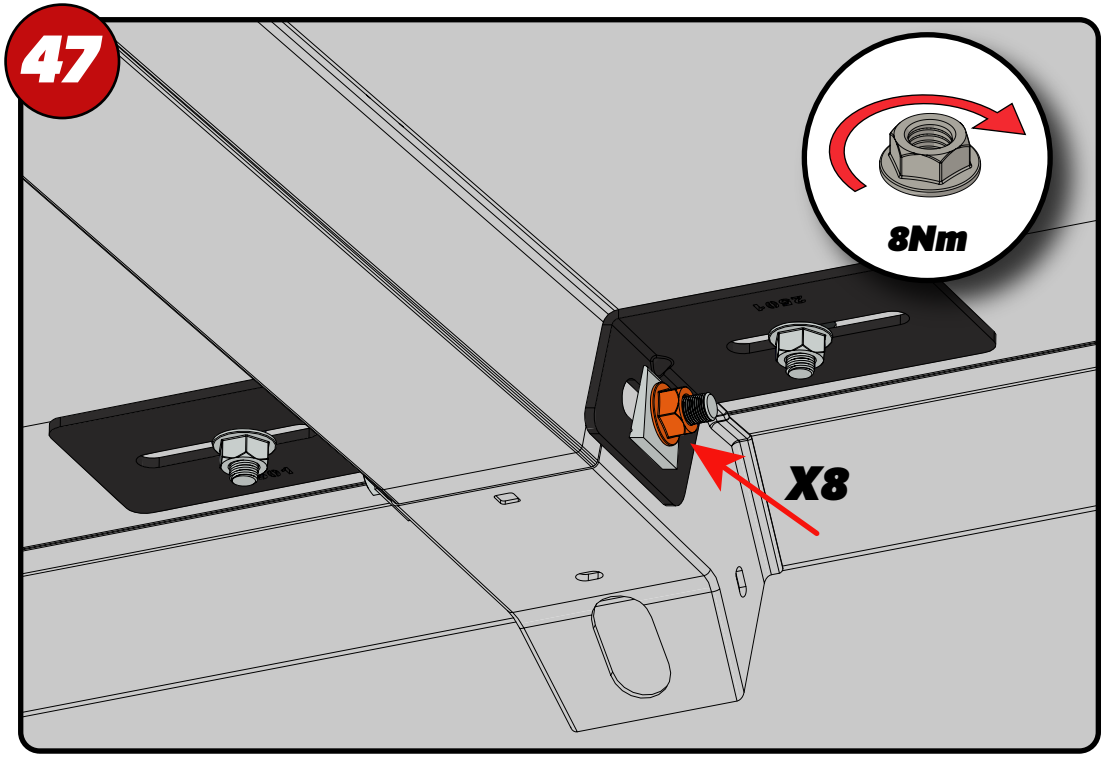

48

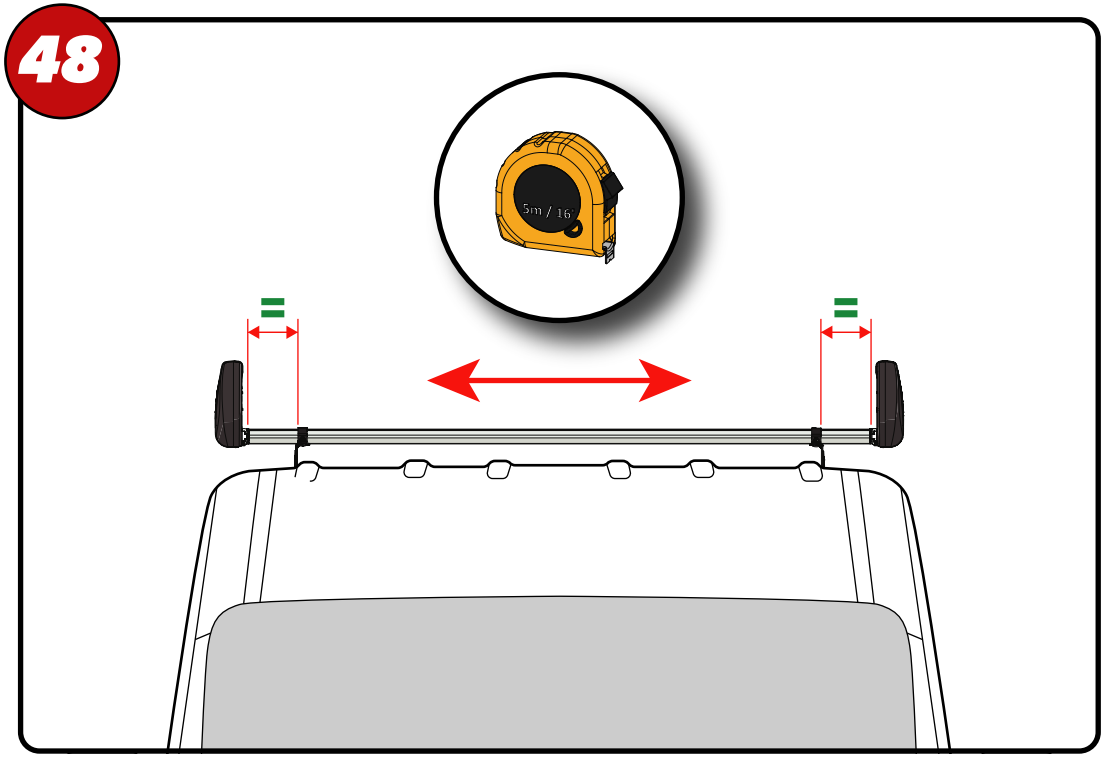


49

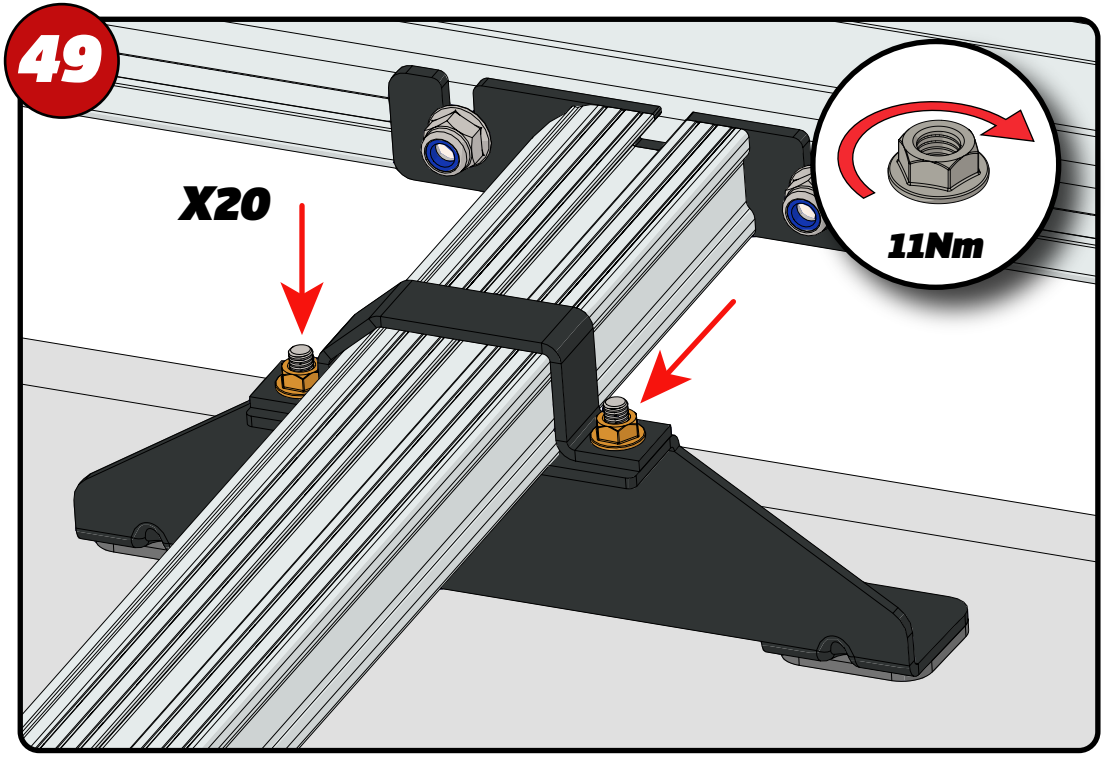


50




X36

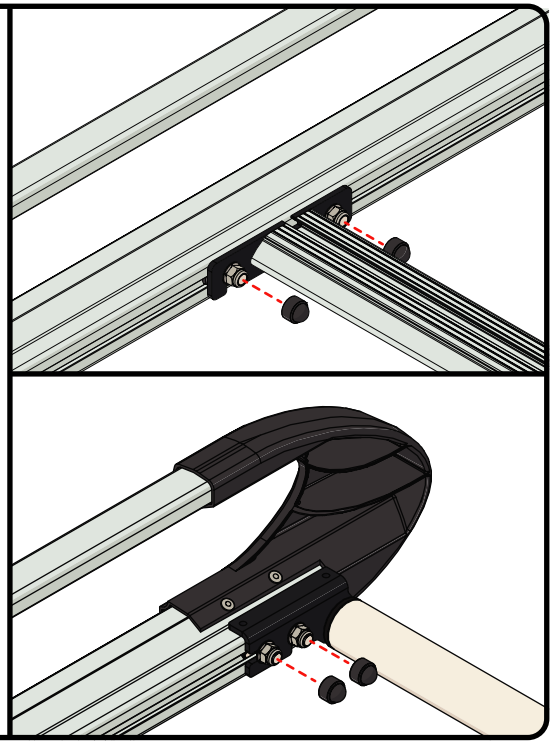

51

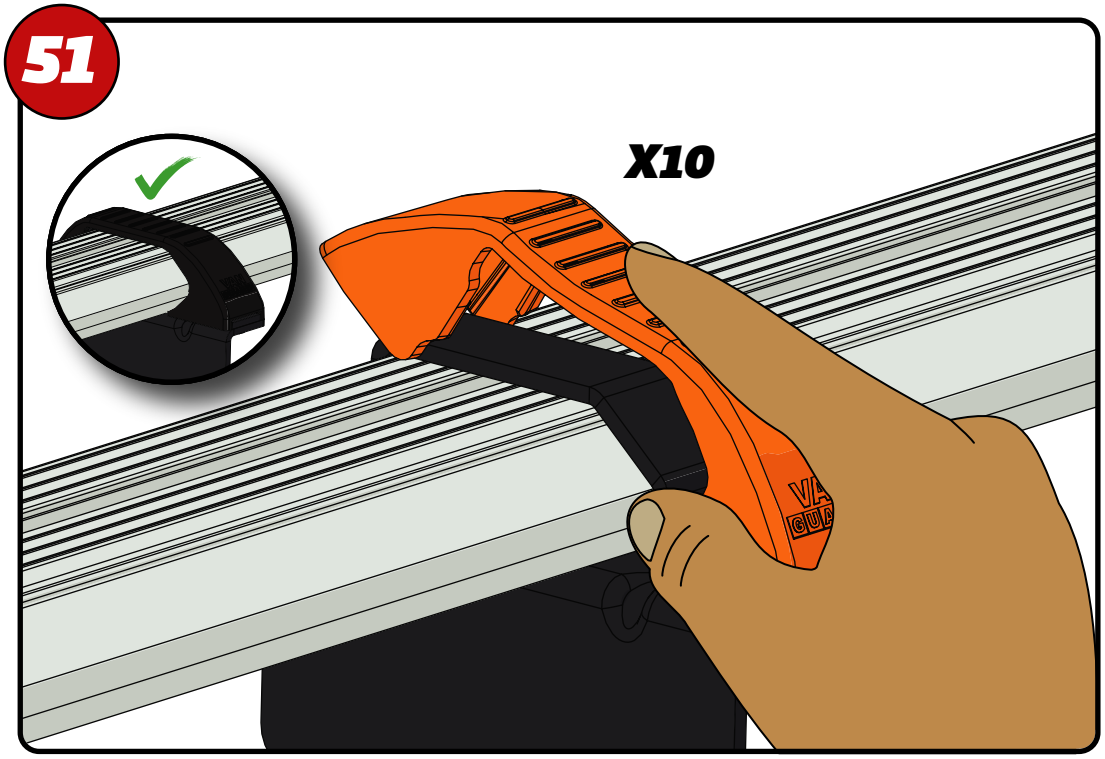

52

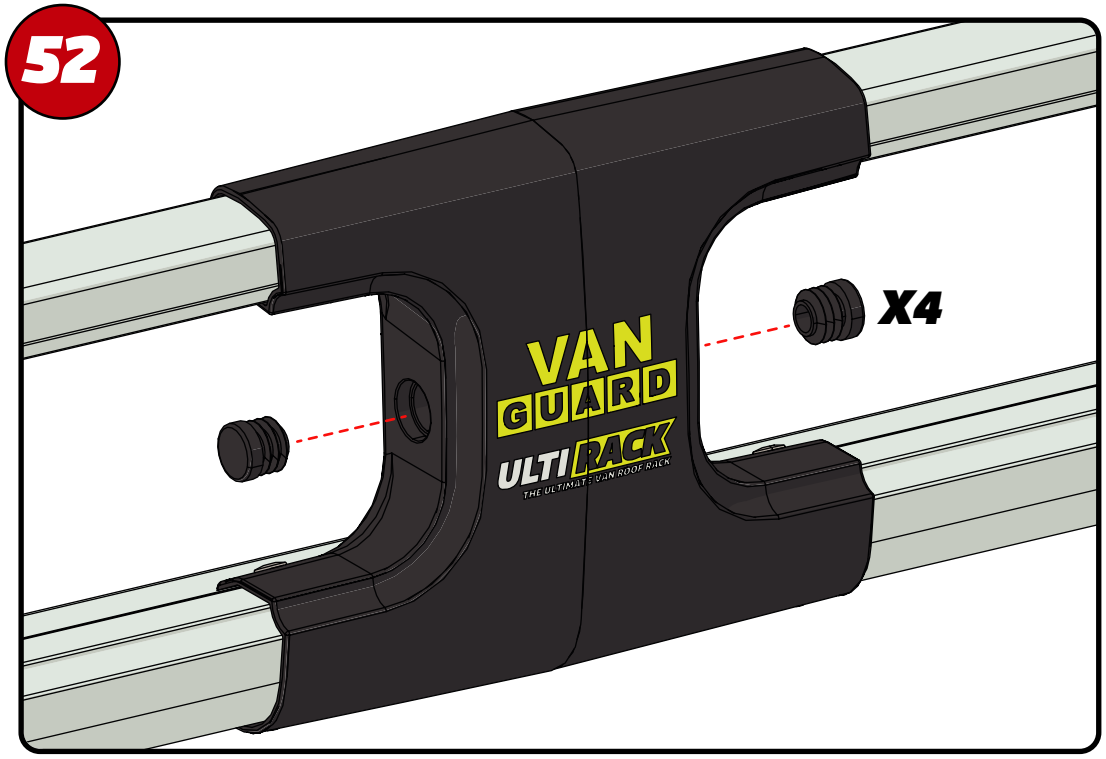

53

