

IN8471 ULTI Rack+

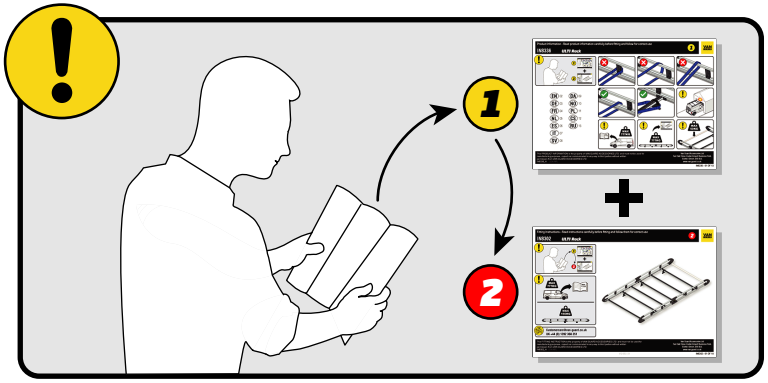

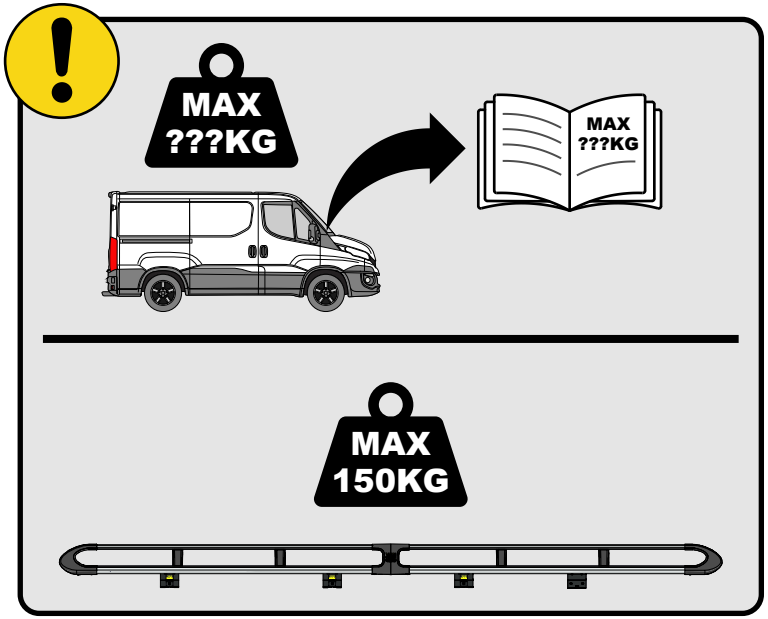



Customercare@van-guard.co.uk
UK +44 (0) 1392 368 351


This FITTING INSTRUCTION is the property of VAN GUARD ACCESSORIES LTD. and must not be used for manufacturing purposes, copied nor communicated in any way to third parties without written permission from VAN GUARD ACCESSORIES LTD.
IN8471_A (CN:NR)


Van Guard Accessories Ltd
Fair Oak Close, Exeter Airport Business Park,
Exeter, Devon, EX5 2UL
www.van-guard.co.uk

THIS INSTRUCTION COVERS THE FOLLOWING MODELS - CHECK YOU ARE FITTING THE CORRECT MODEL BEFORE PROCEEDING

VGUR-311

Iveco Daily: 2014 on
L2H1
Twin Rear Doors

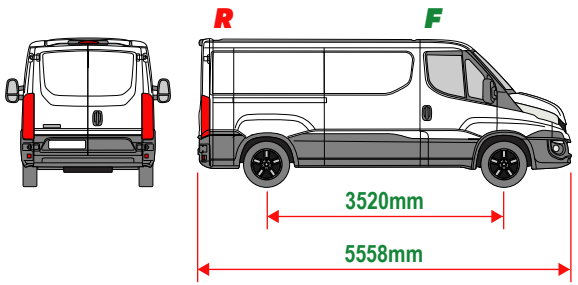

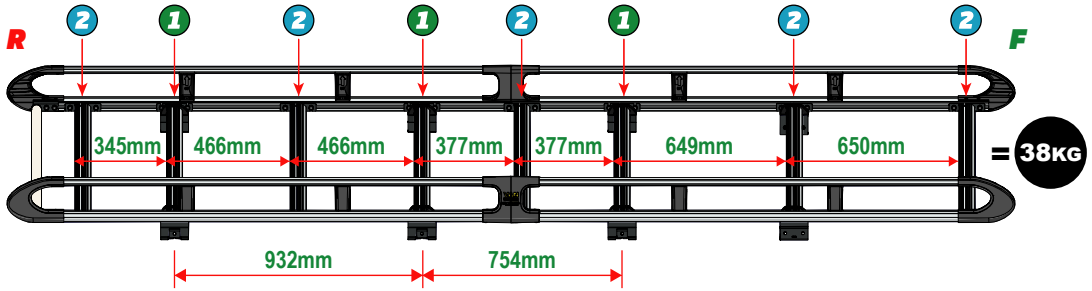

SUPPLIED COMPONENTS - CHECK ALL PARTS ARE PRESENT AND CORRECT BEFORE PROCEEDING (1 OF 2)

TOOLS REQUIRED

10MM X2






13MM X1






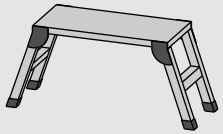






AS3547 X2
(3600 / A)

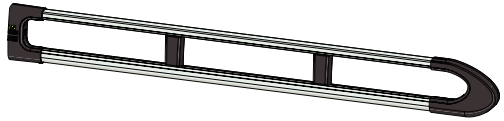


MA6118 X16




FX4241 X36



ME1622 X5




AS3546 X2
(3600 / B)

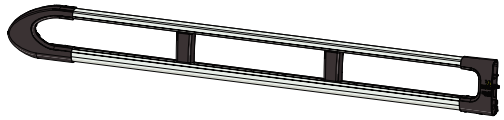


FX4008 X1




MA6145 X1




ME1623 X5



ME1628 X8
(1554mm)




FX4001 X2
(M8X40)




FX4235 X32
(M5X25)



ME0203 X8




AS3160 X1
(1540mm)




MA6007 X4




FX4248 X1
(T25)




MA6065 X8

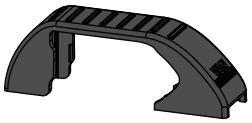


AS3590 X1

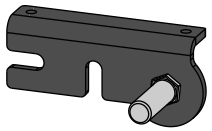


MA6093 X16



FX4239 X36
(M8X20)




ME1620 X3




FX4016 X26
(M6)



AS3591 X1




ME0316 X16




FX4240 X36
(M8)



ME1621 X3




FX4042 X16
(M6X16)




SUPPLIED COMPONENTS - CHECK ALL PARTS ARE PRESENT AND CORRECT BEFORE PROCEEDING (2 OF 2)


ME0010 X6

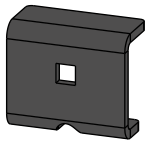


ME2621 X6

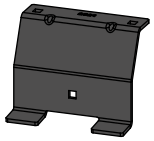


ME2627 X2

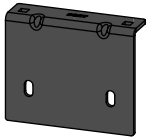


ME2628 X2




MA6016 X12




FX4015 X10
(M6X30)




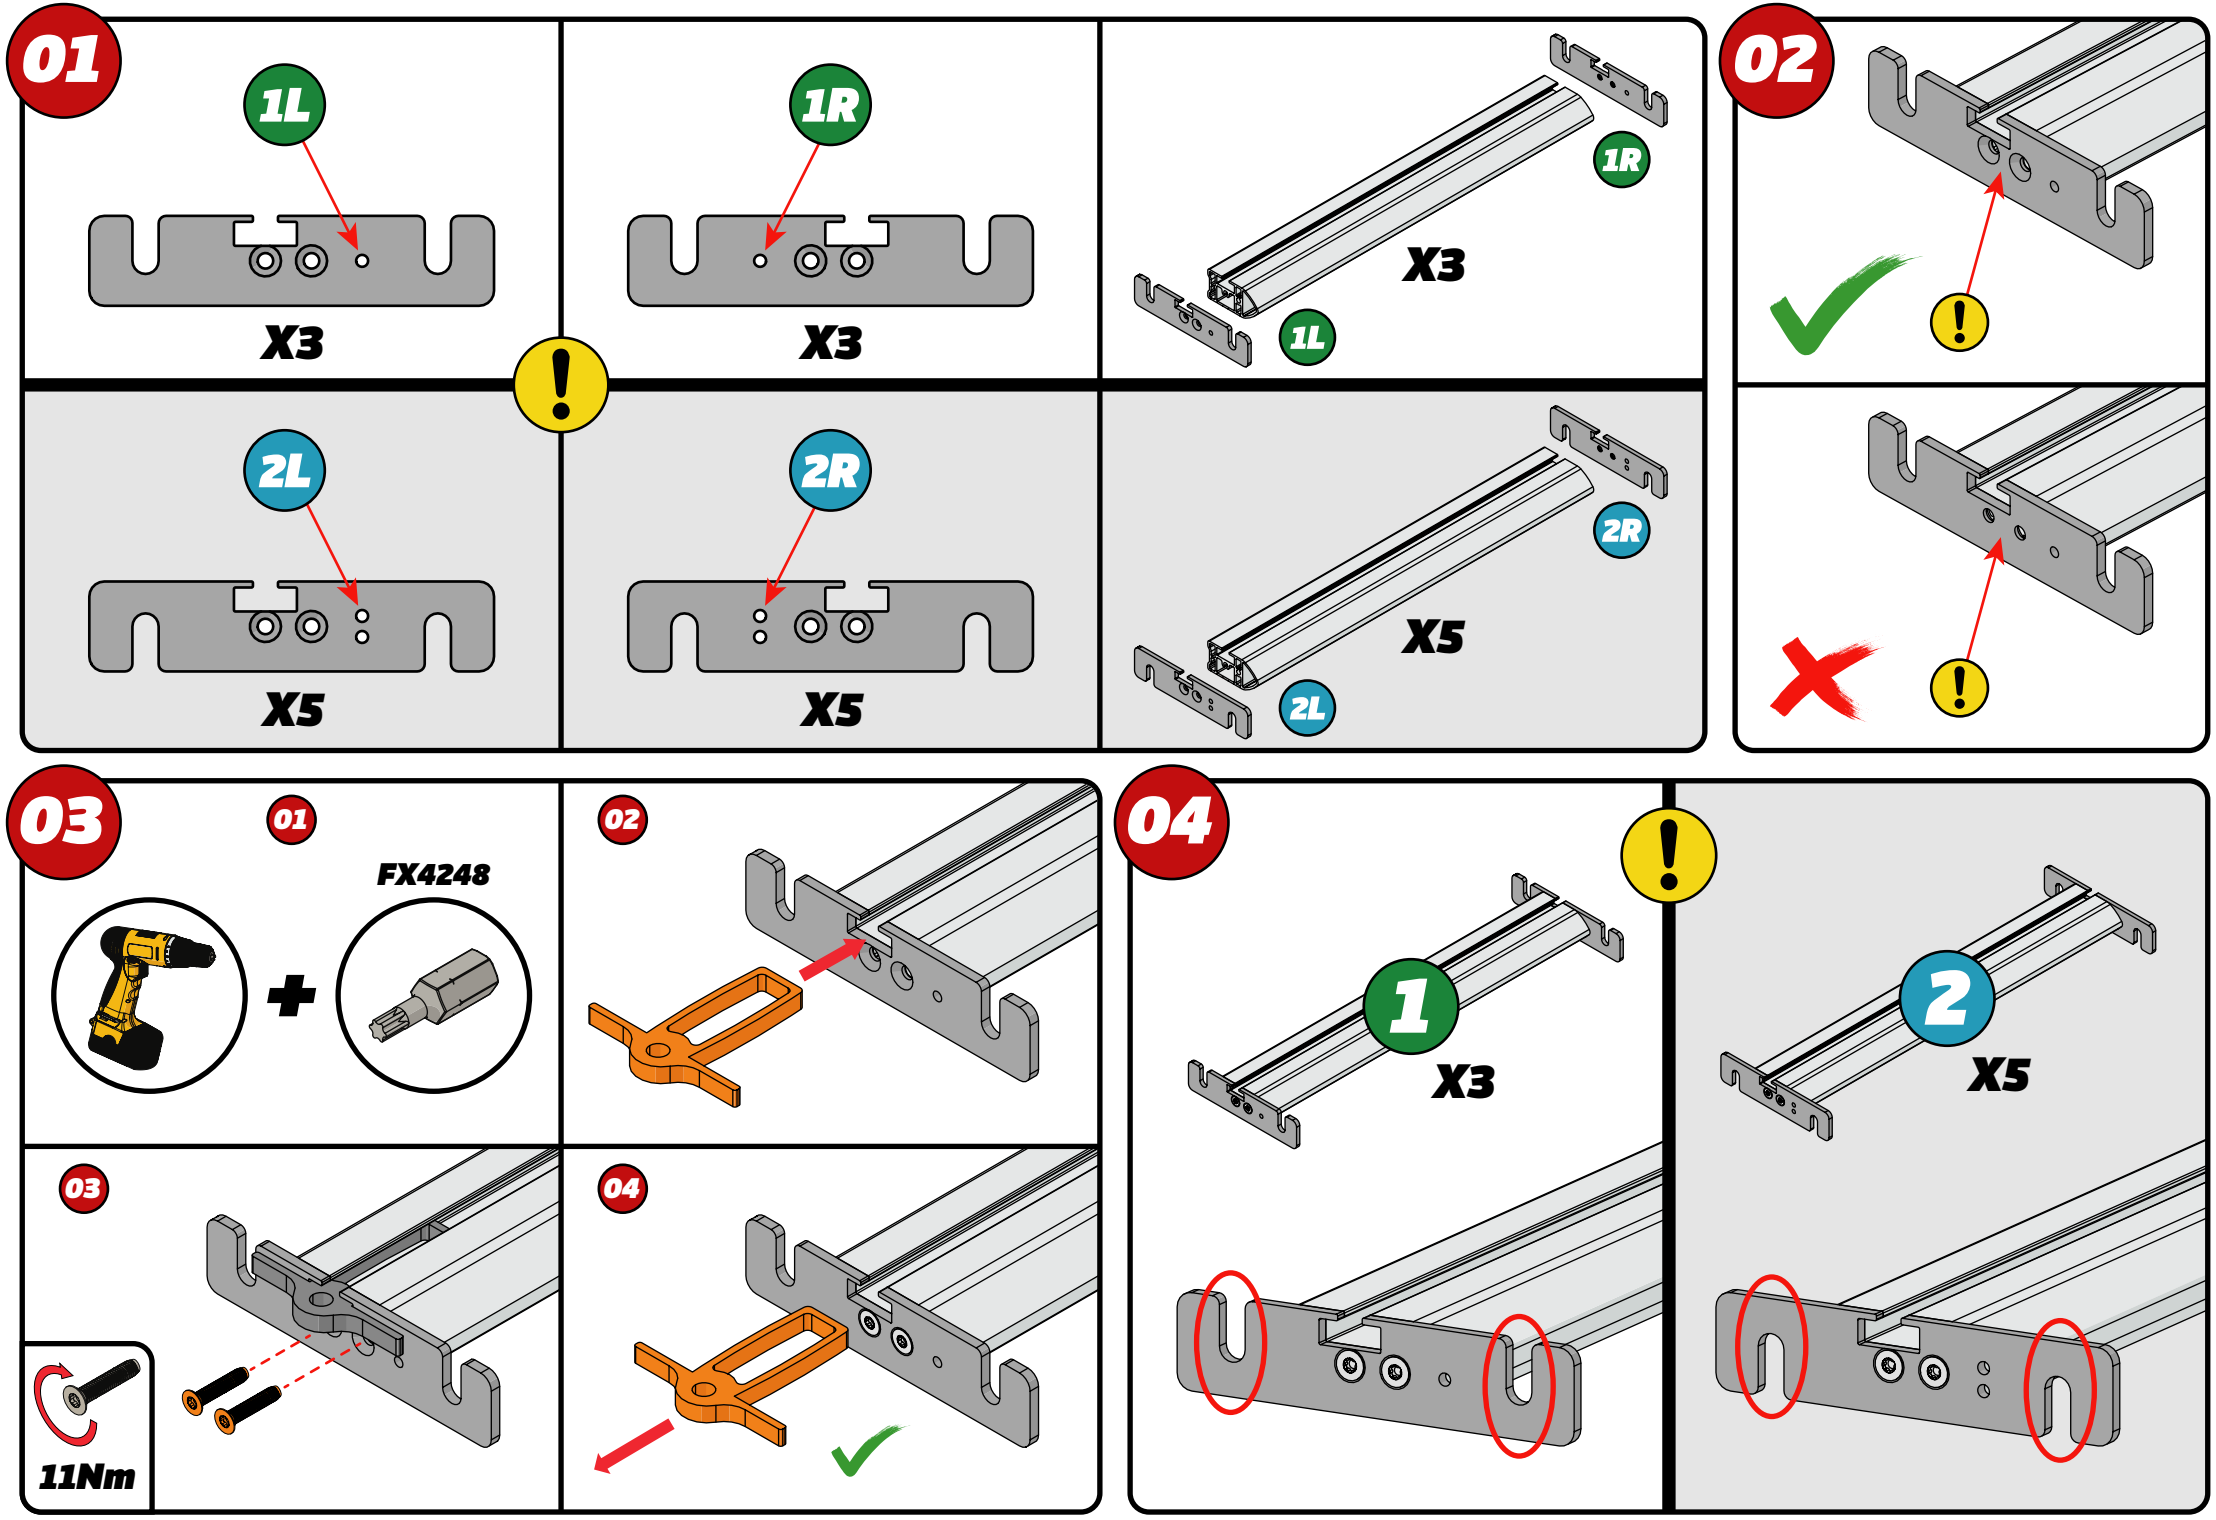
01
1L
X3
1R
X3
1R
X3
1L
2L
X5
2R
X5
2R
X5
2L
02
03
01
FX4248
02
03
11Nm
04
04
1
X3
2
X5


05

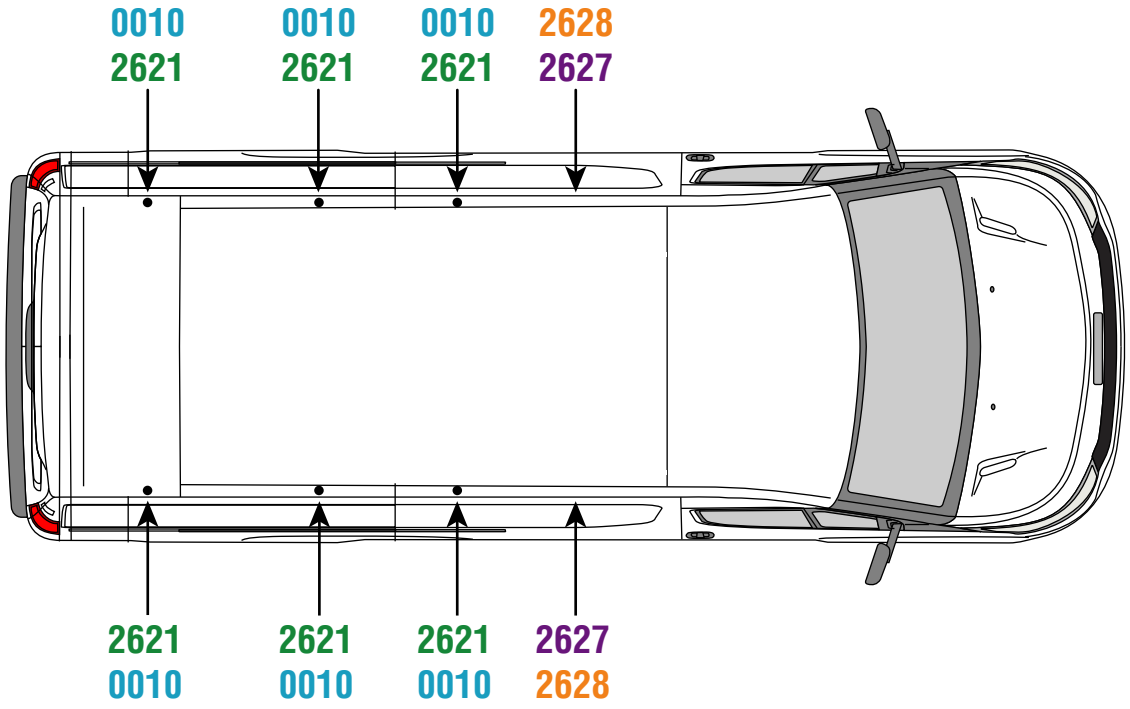


2621

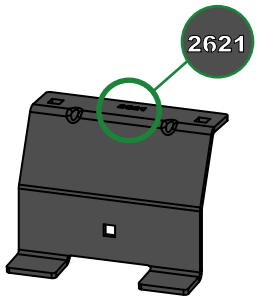


2627

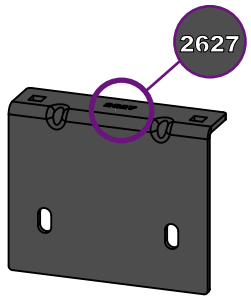


0010

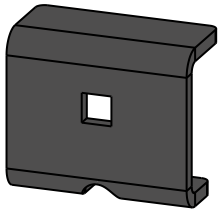


2628

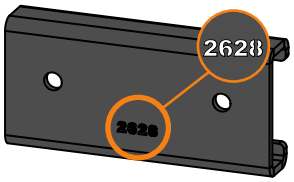


06

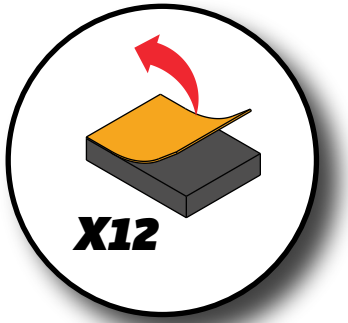

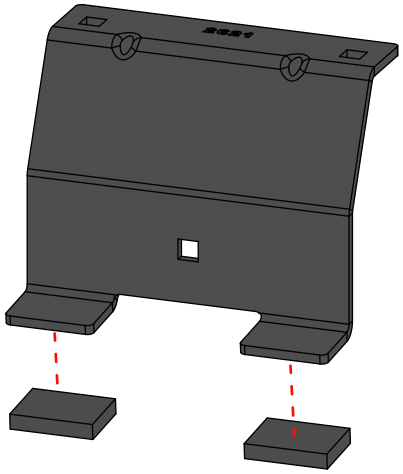


EN - STICK GASKETS TO ALL BRACKETS
DE - KLEBEN SIE DIE DICHTUNG AN ALLEN HALTERUNGEN
FR - COUSSINETS ADHÉSIFS À TOUS LES SUPPORTS
NL - PLAK PAKKING OP ALLE BEUGELS
ES - PEGA LAS ALMOHADILLAS A TODOS LOS SOPORTES
IT - ADESIVI GUARNIZIONI A TUTTE LE STAFFE
SV - FÄST GUMMI PÅ ALLA FÄSTEN
DA - KLÆB GUMMI PÅ ALLE BESLAG
NO - PLIST GUMMI PÅ ALLE BRAKKETTER
PL - NAKLEJ USZCZELKI DO WSZYSTKICH WSPORNIKÓW
CS - PŘILEPTE TĚSNĚNÍ NA VŠECHNY DRŽÁKY

07

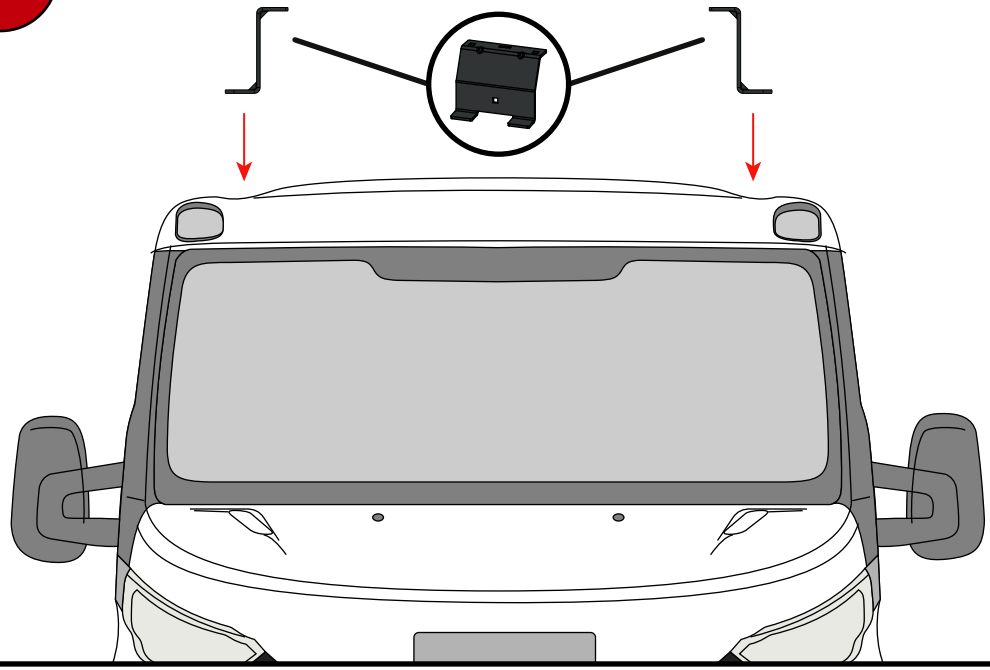


08


X6

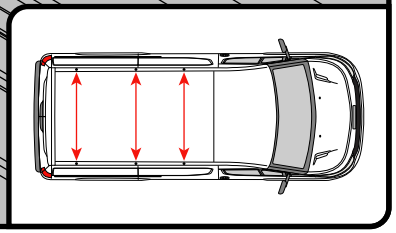


09

X6

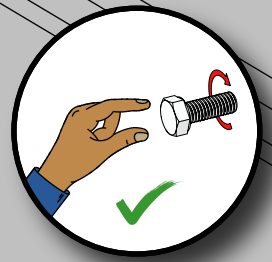


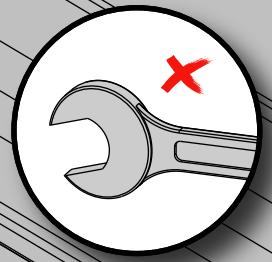


10

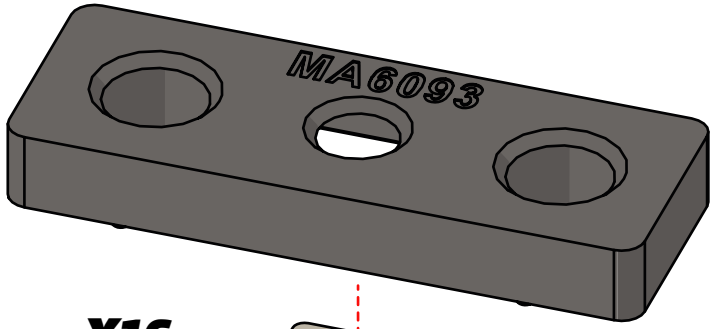

X16

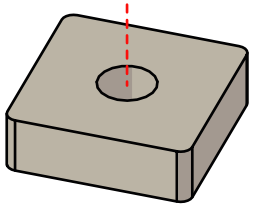


11

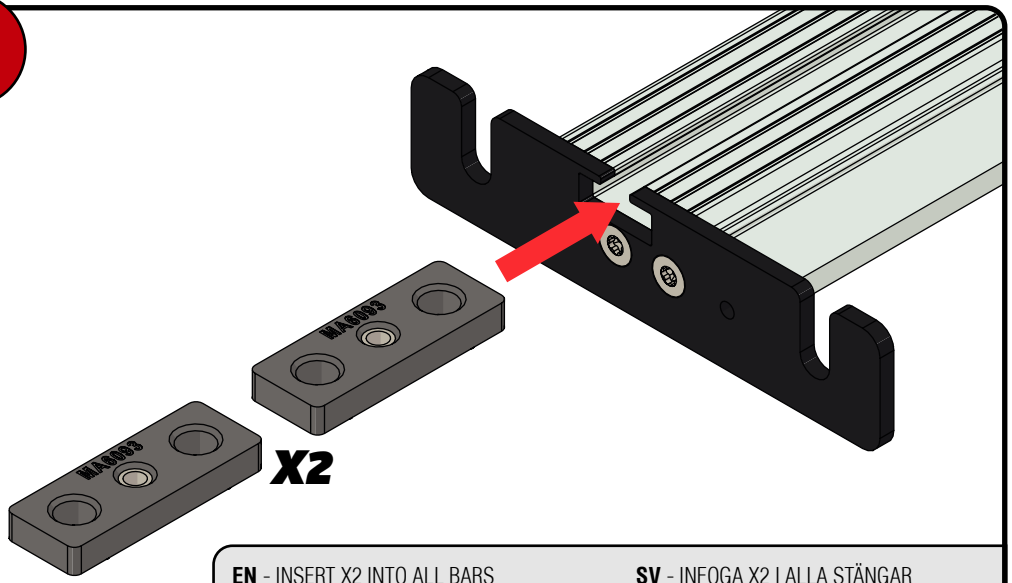


X2

EN - INSERT X2 INTO ALL BARS
DE - X2 IN ALLE STANGEN EINFÜGEN
FR - INSÉRER X2 DANS TOUTES LES BARRES
NL - PLAATS X2 IN ALLE BARS
ES - INSERTAR X2 EN TODAS LAS BARRAS
IT - INSERIRE X2 IN TUTTE LE BARRE
SV - INFOGA X2 I ALLA STÄNGAR
DA - INDSÆT X2 I ALLE STÆNGER
NO - SETT X2 INN I ALLE TAKSTENGER
PL - WSTAW X2 DO WSZYSTKICH PRĘTÓW
CS - VLOŽTE X2 DO VŠECH TYČÍ


12

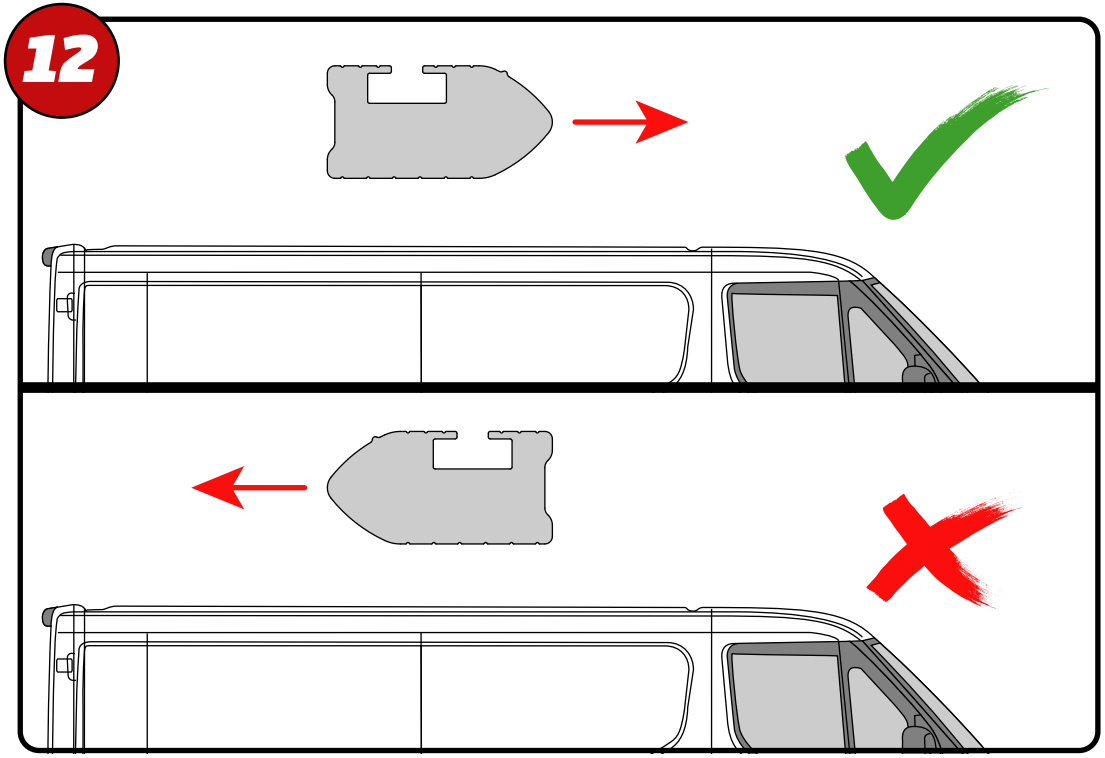


13

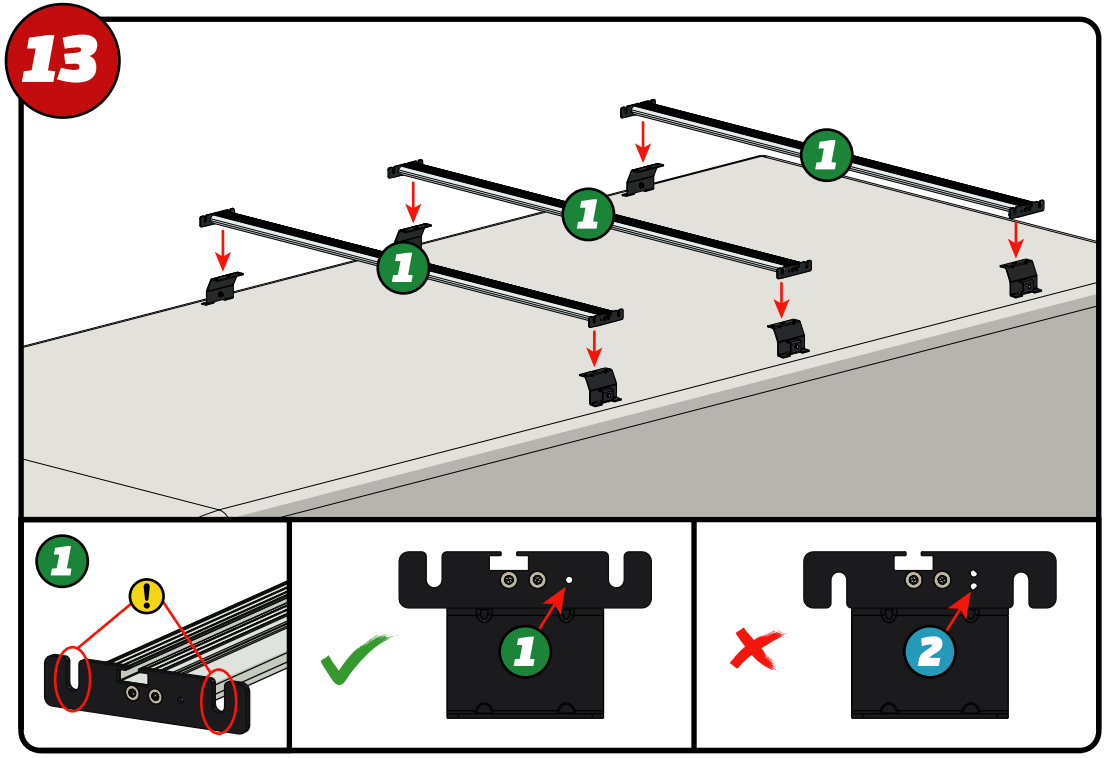


14

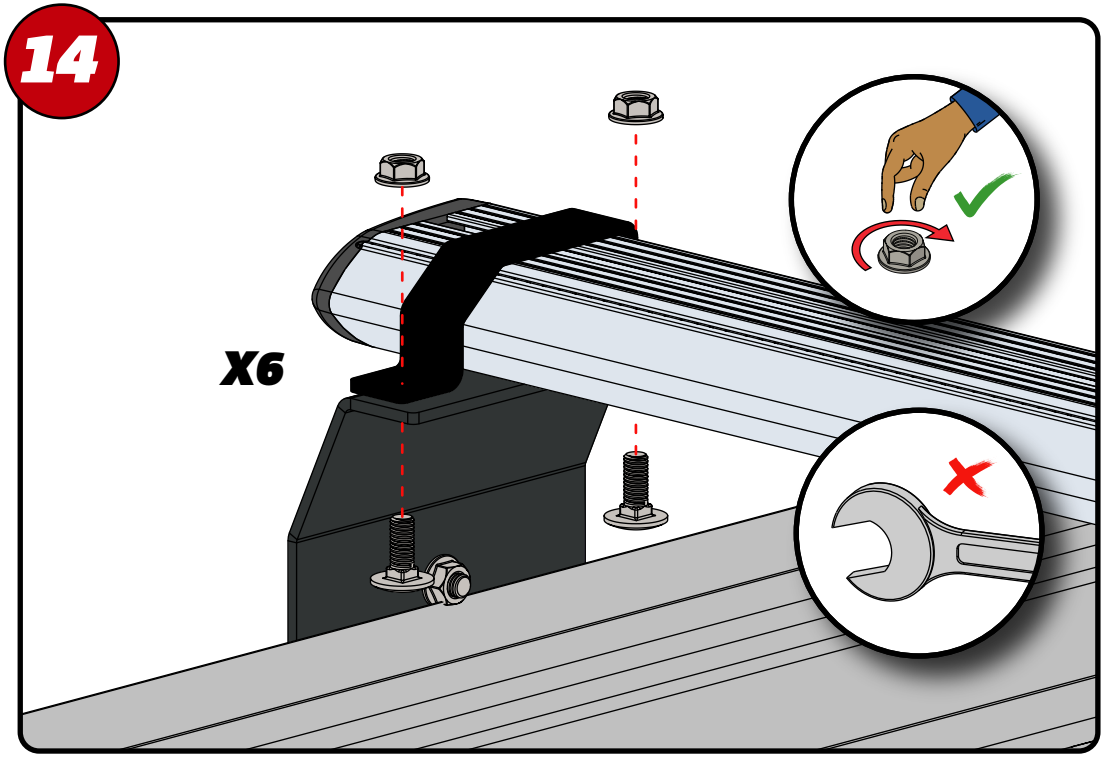


15

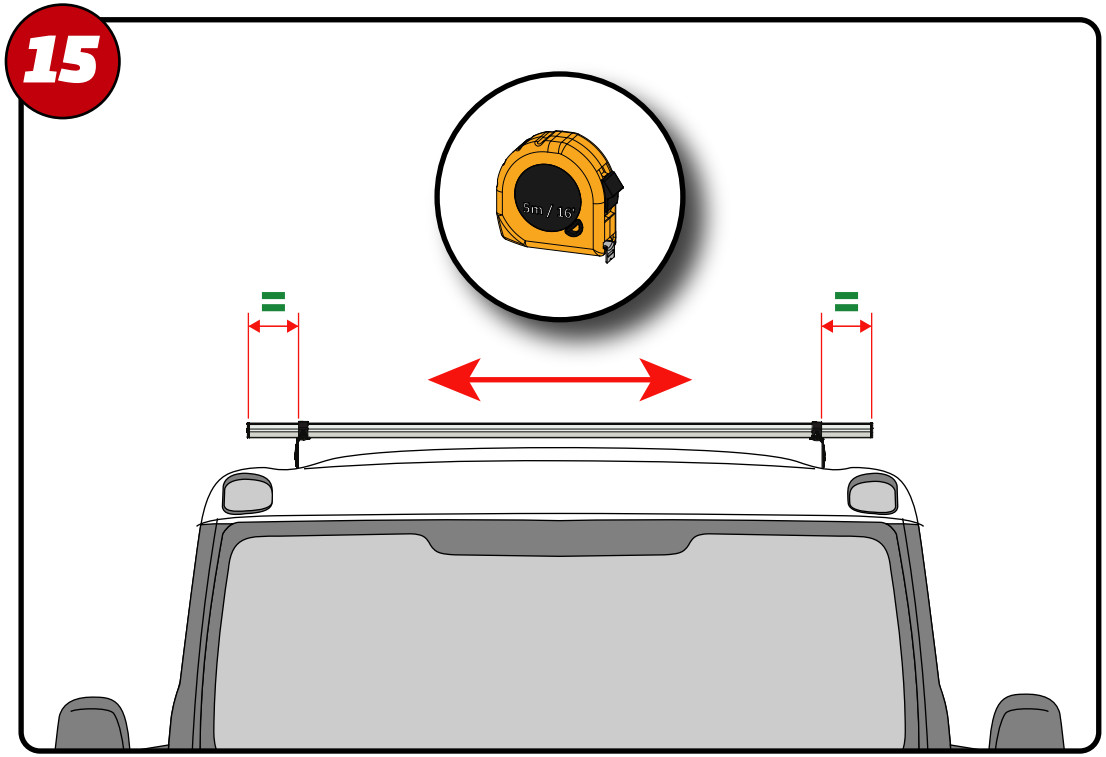


16

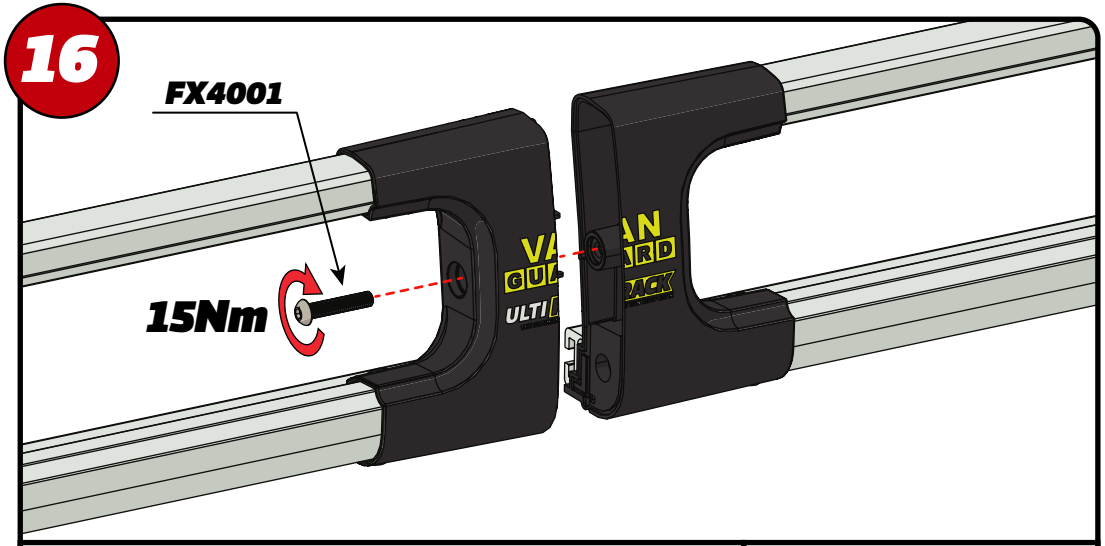


X2

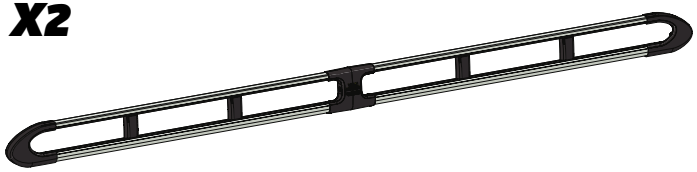



FX4008




17

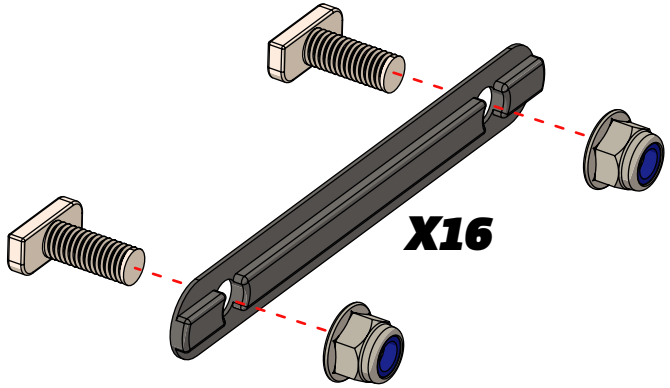

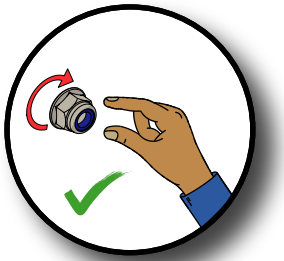

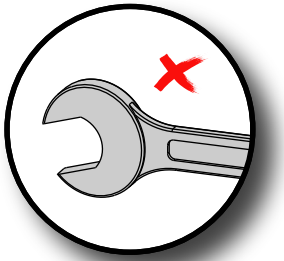


18

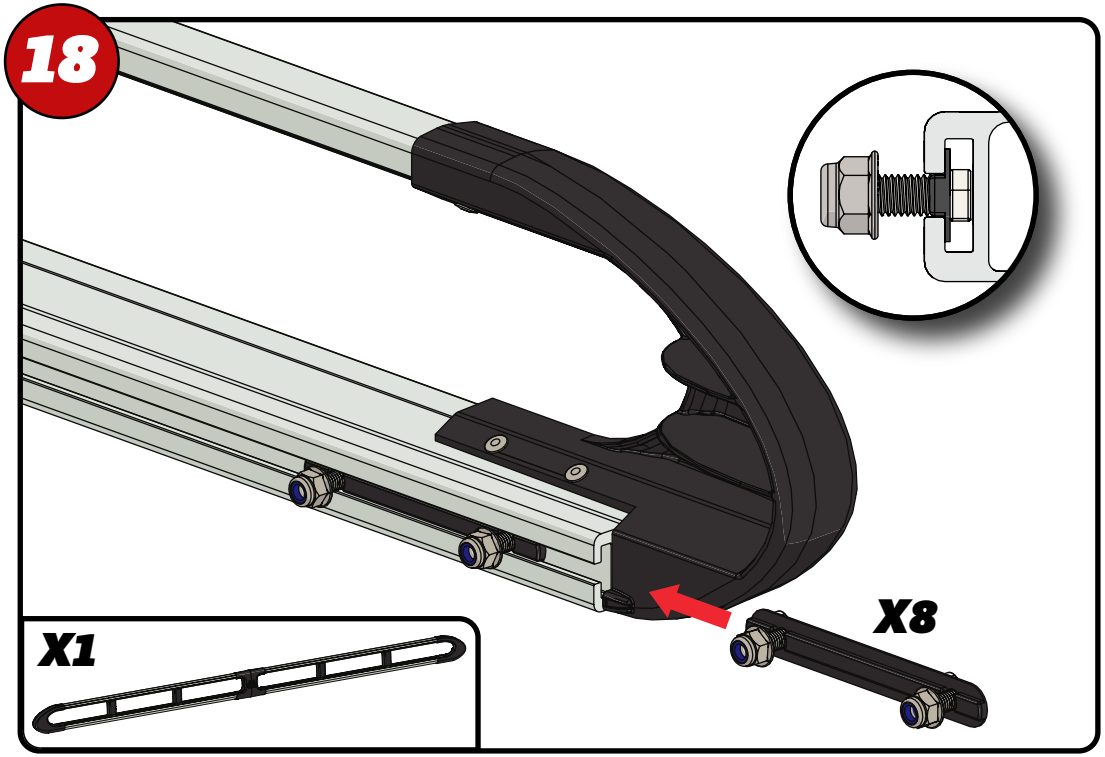


X1


19

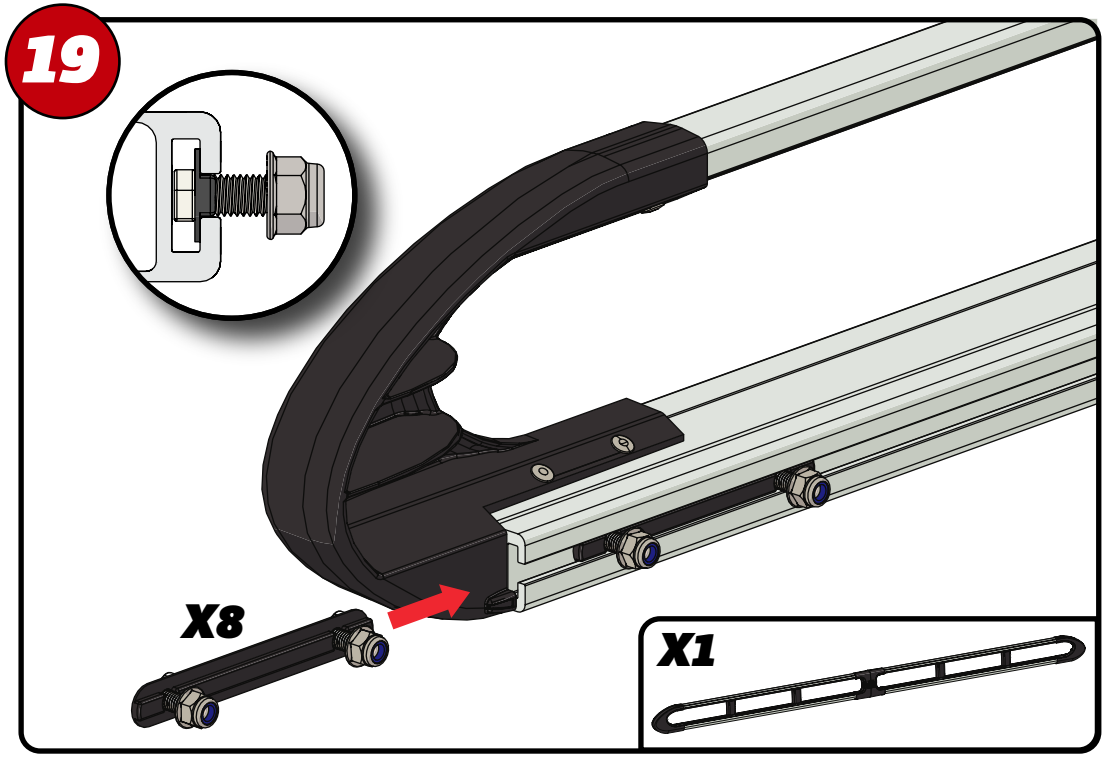


X1


20

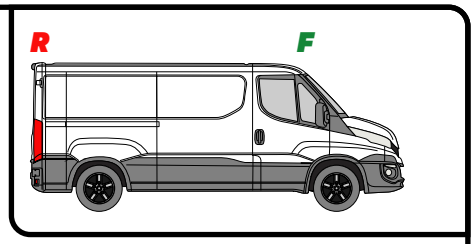

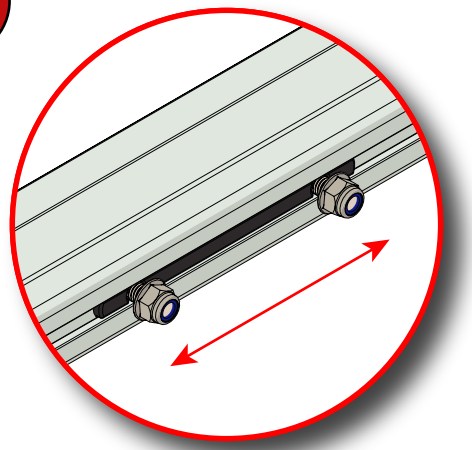


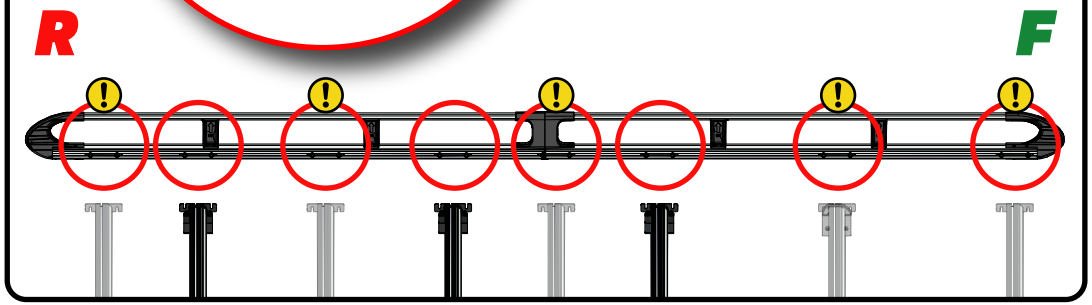


21

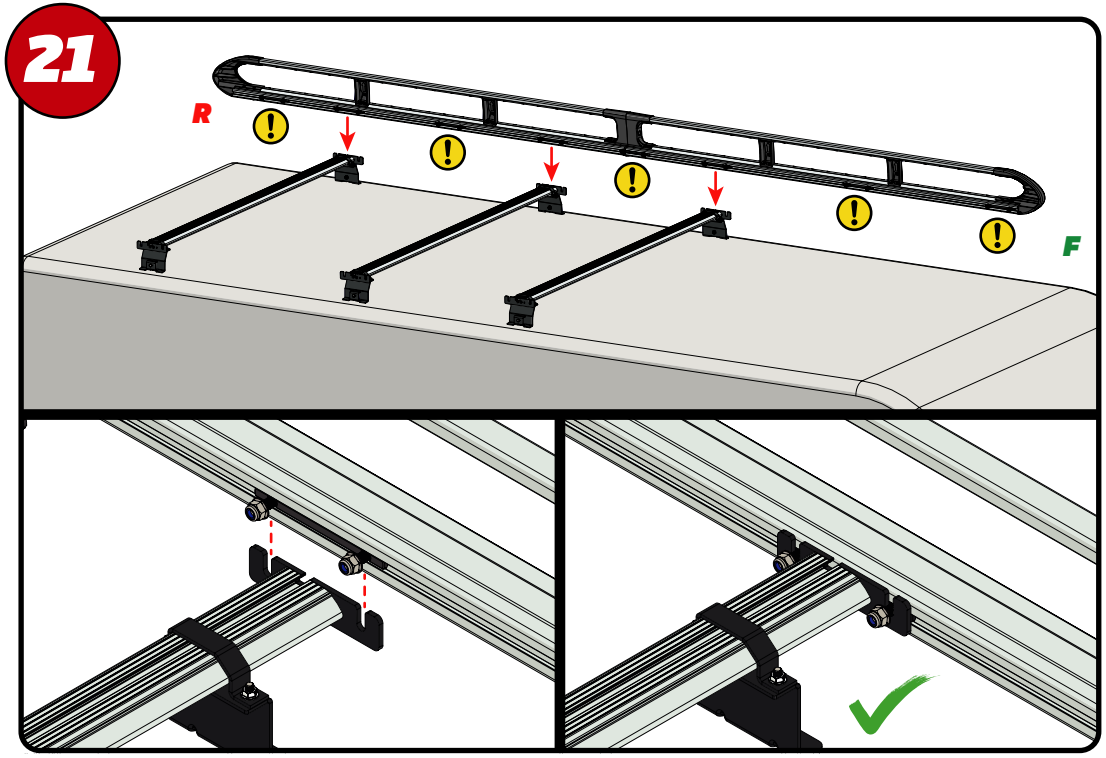



22

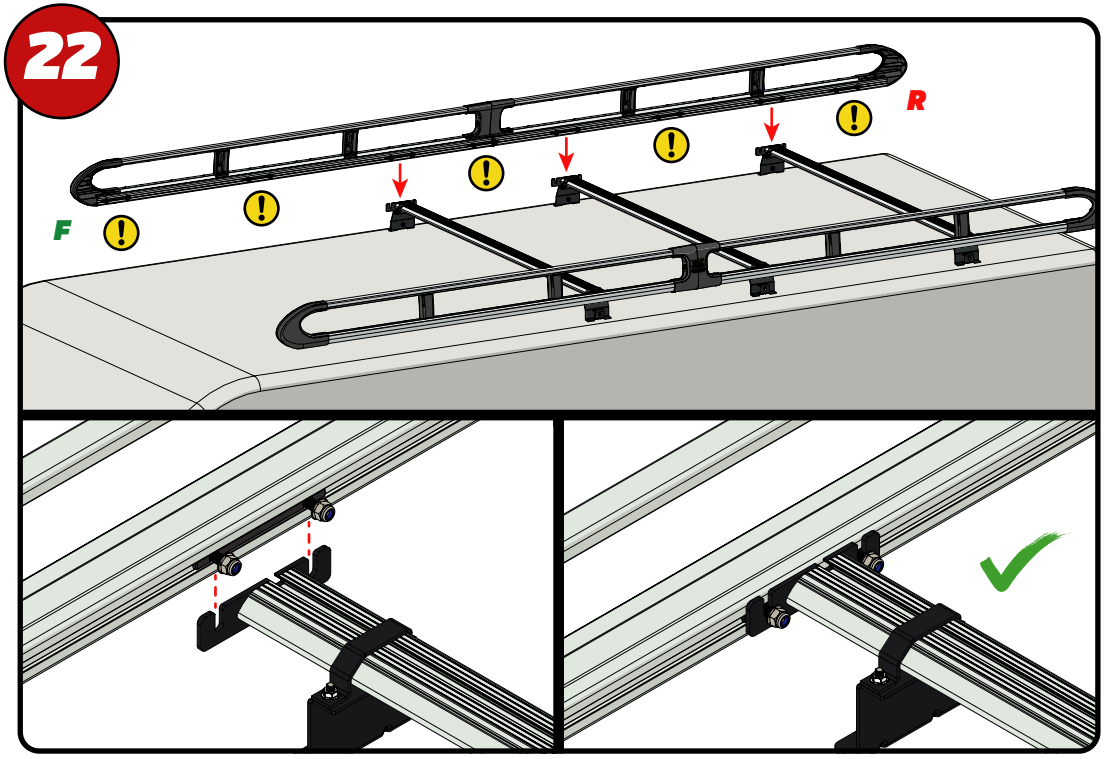



23

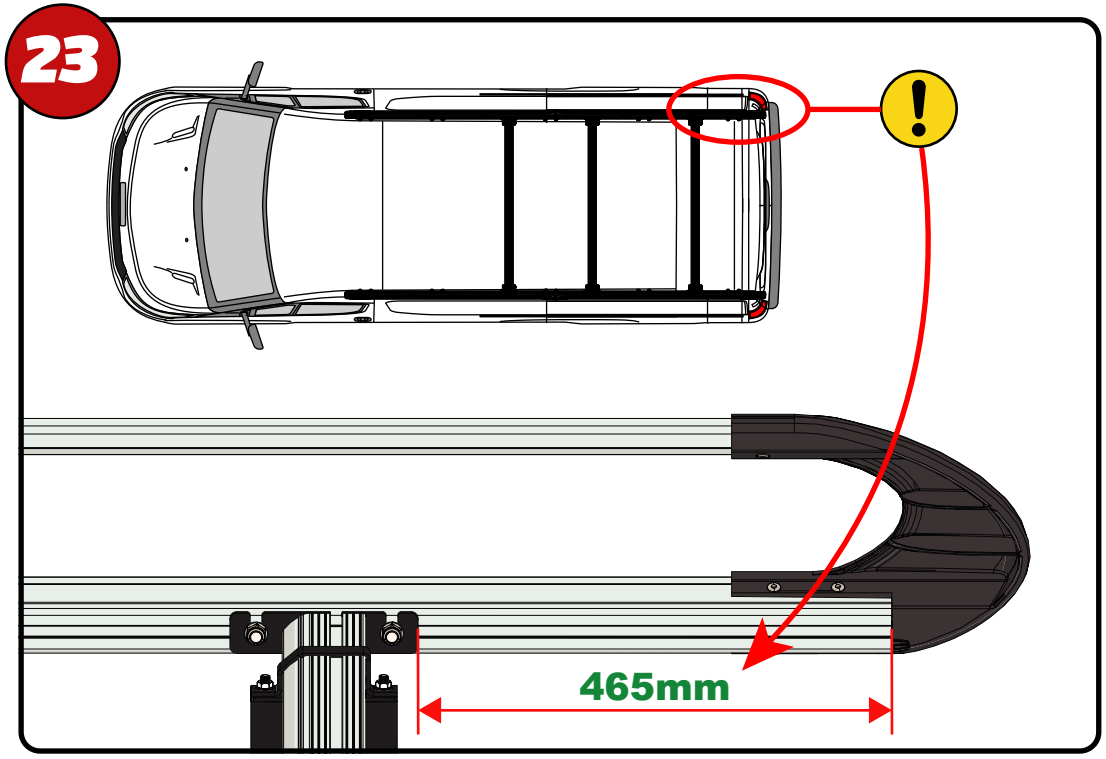


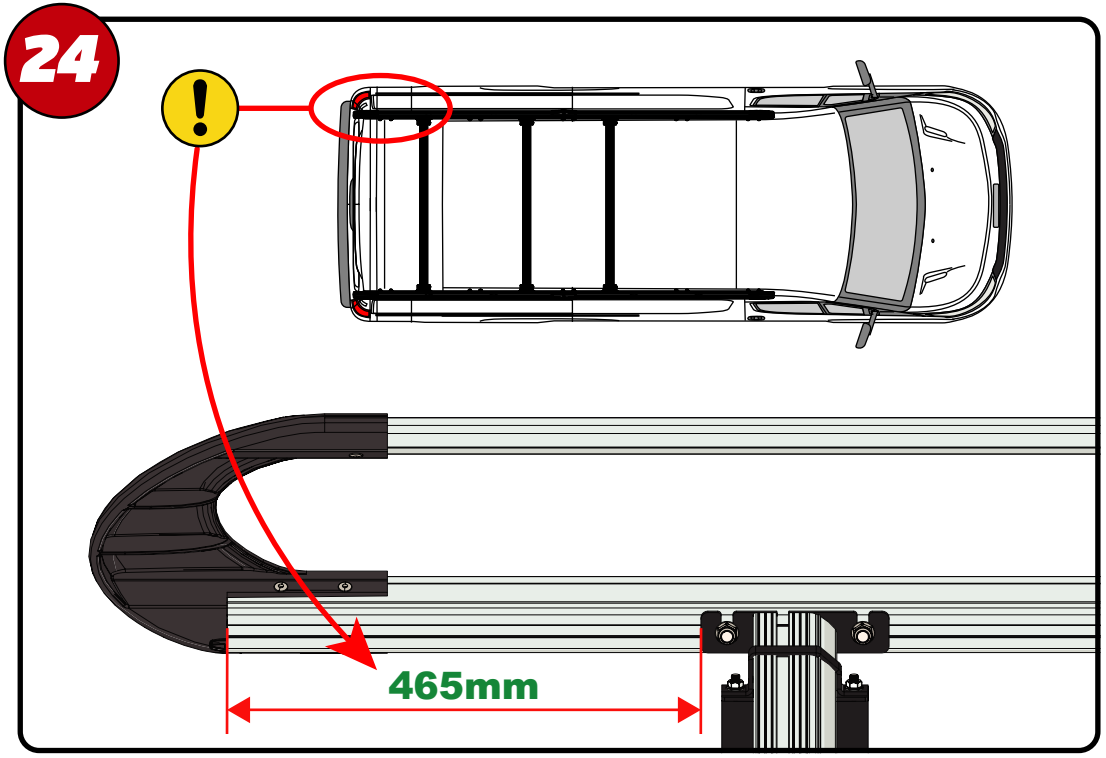
24
465mm

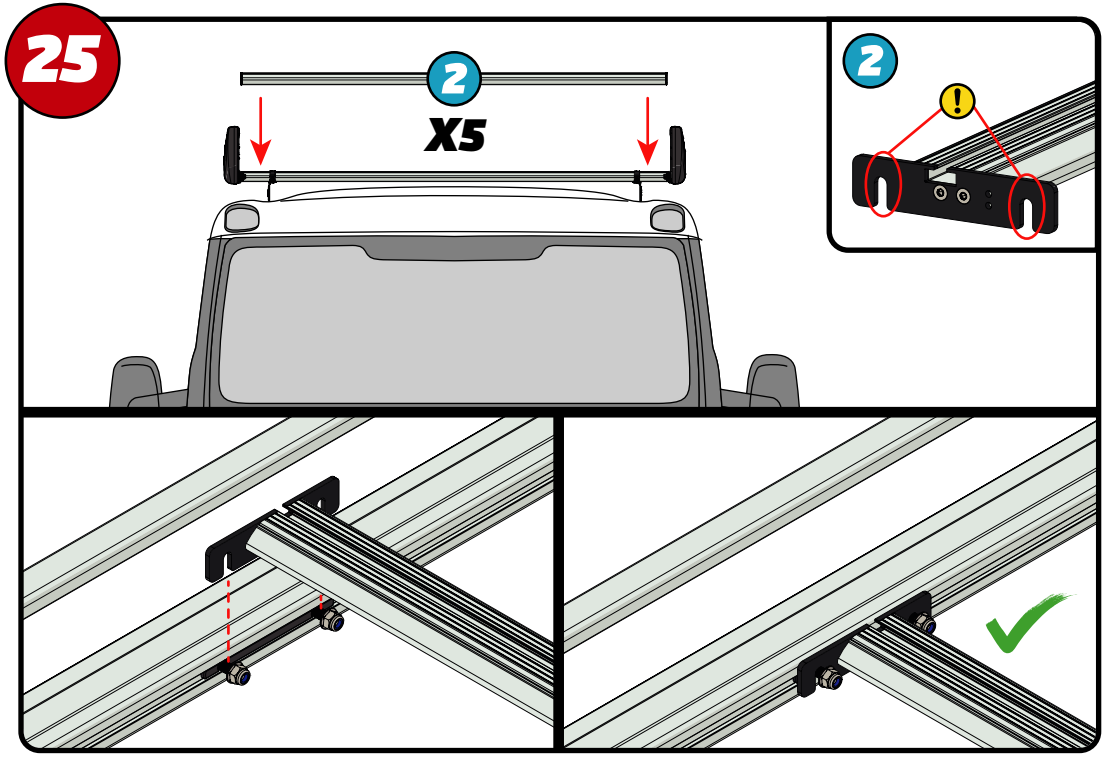

25
2
X5
2

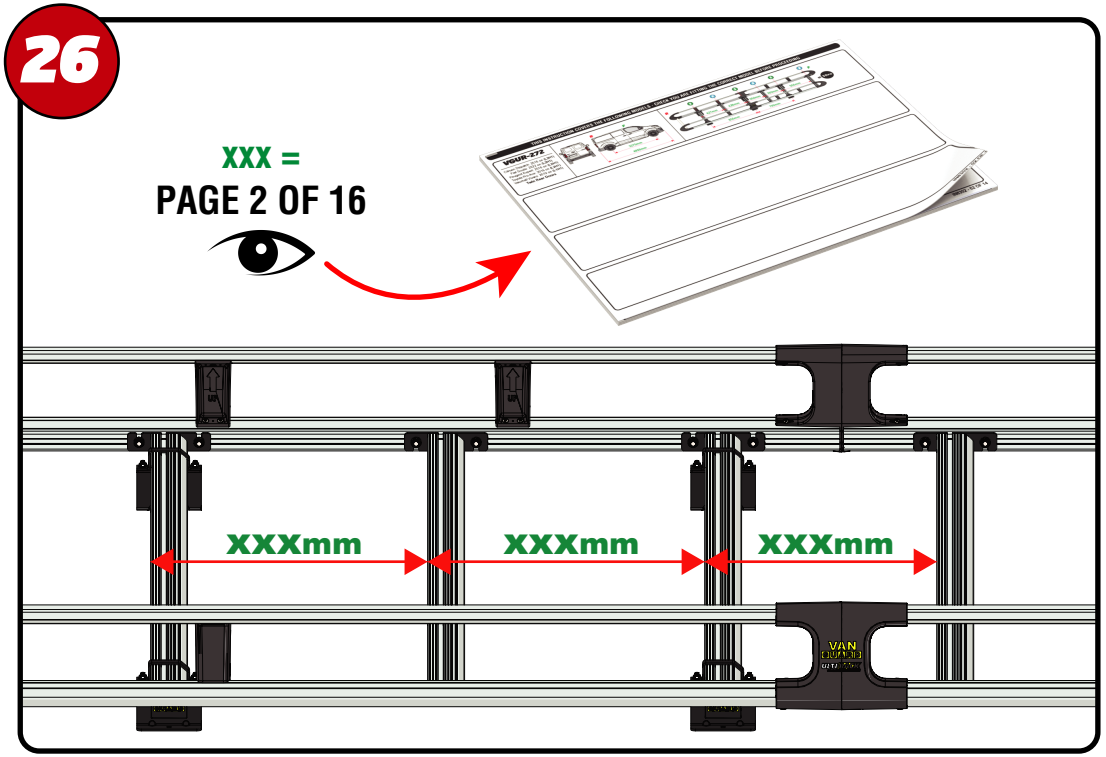
26
XXX =
PAGE 2 OF 16
XXXmm
XXXmm
XXXmm

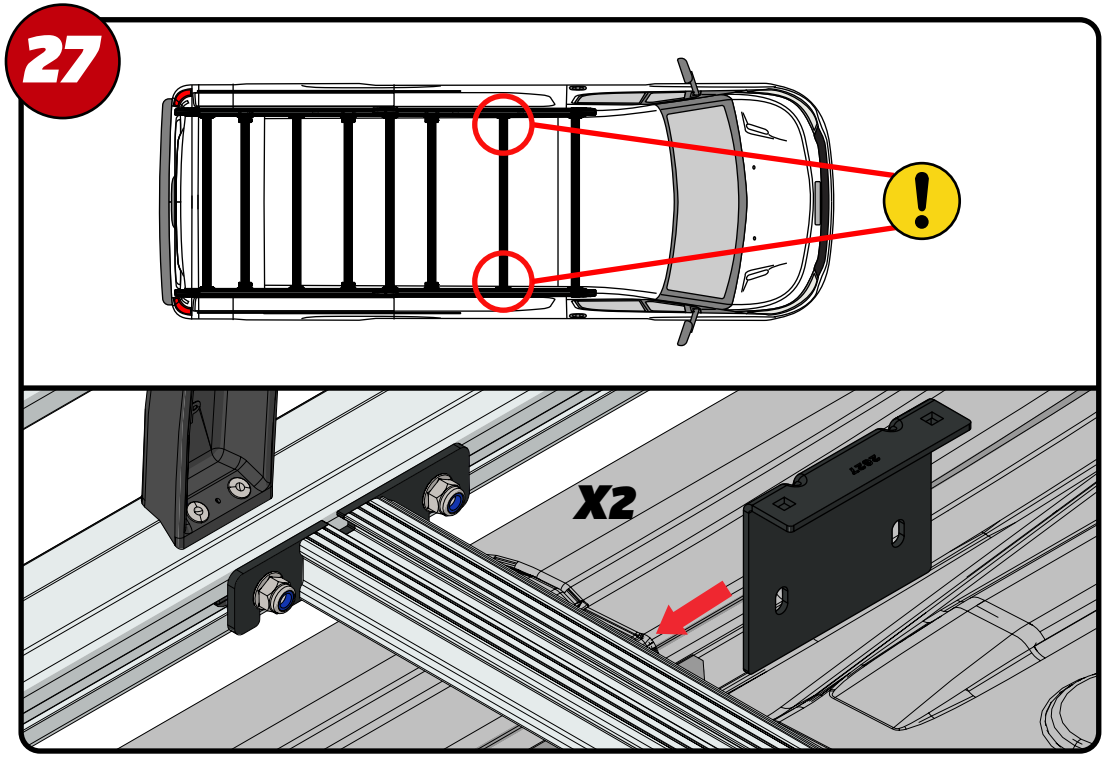
27
X2

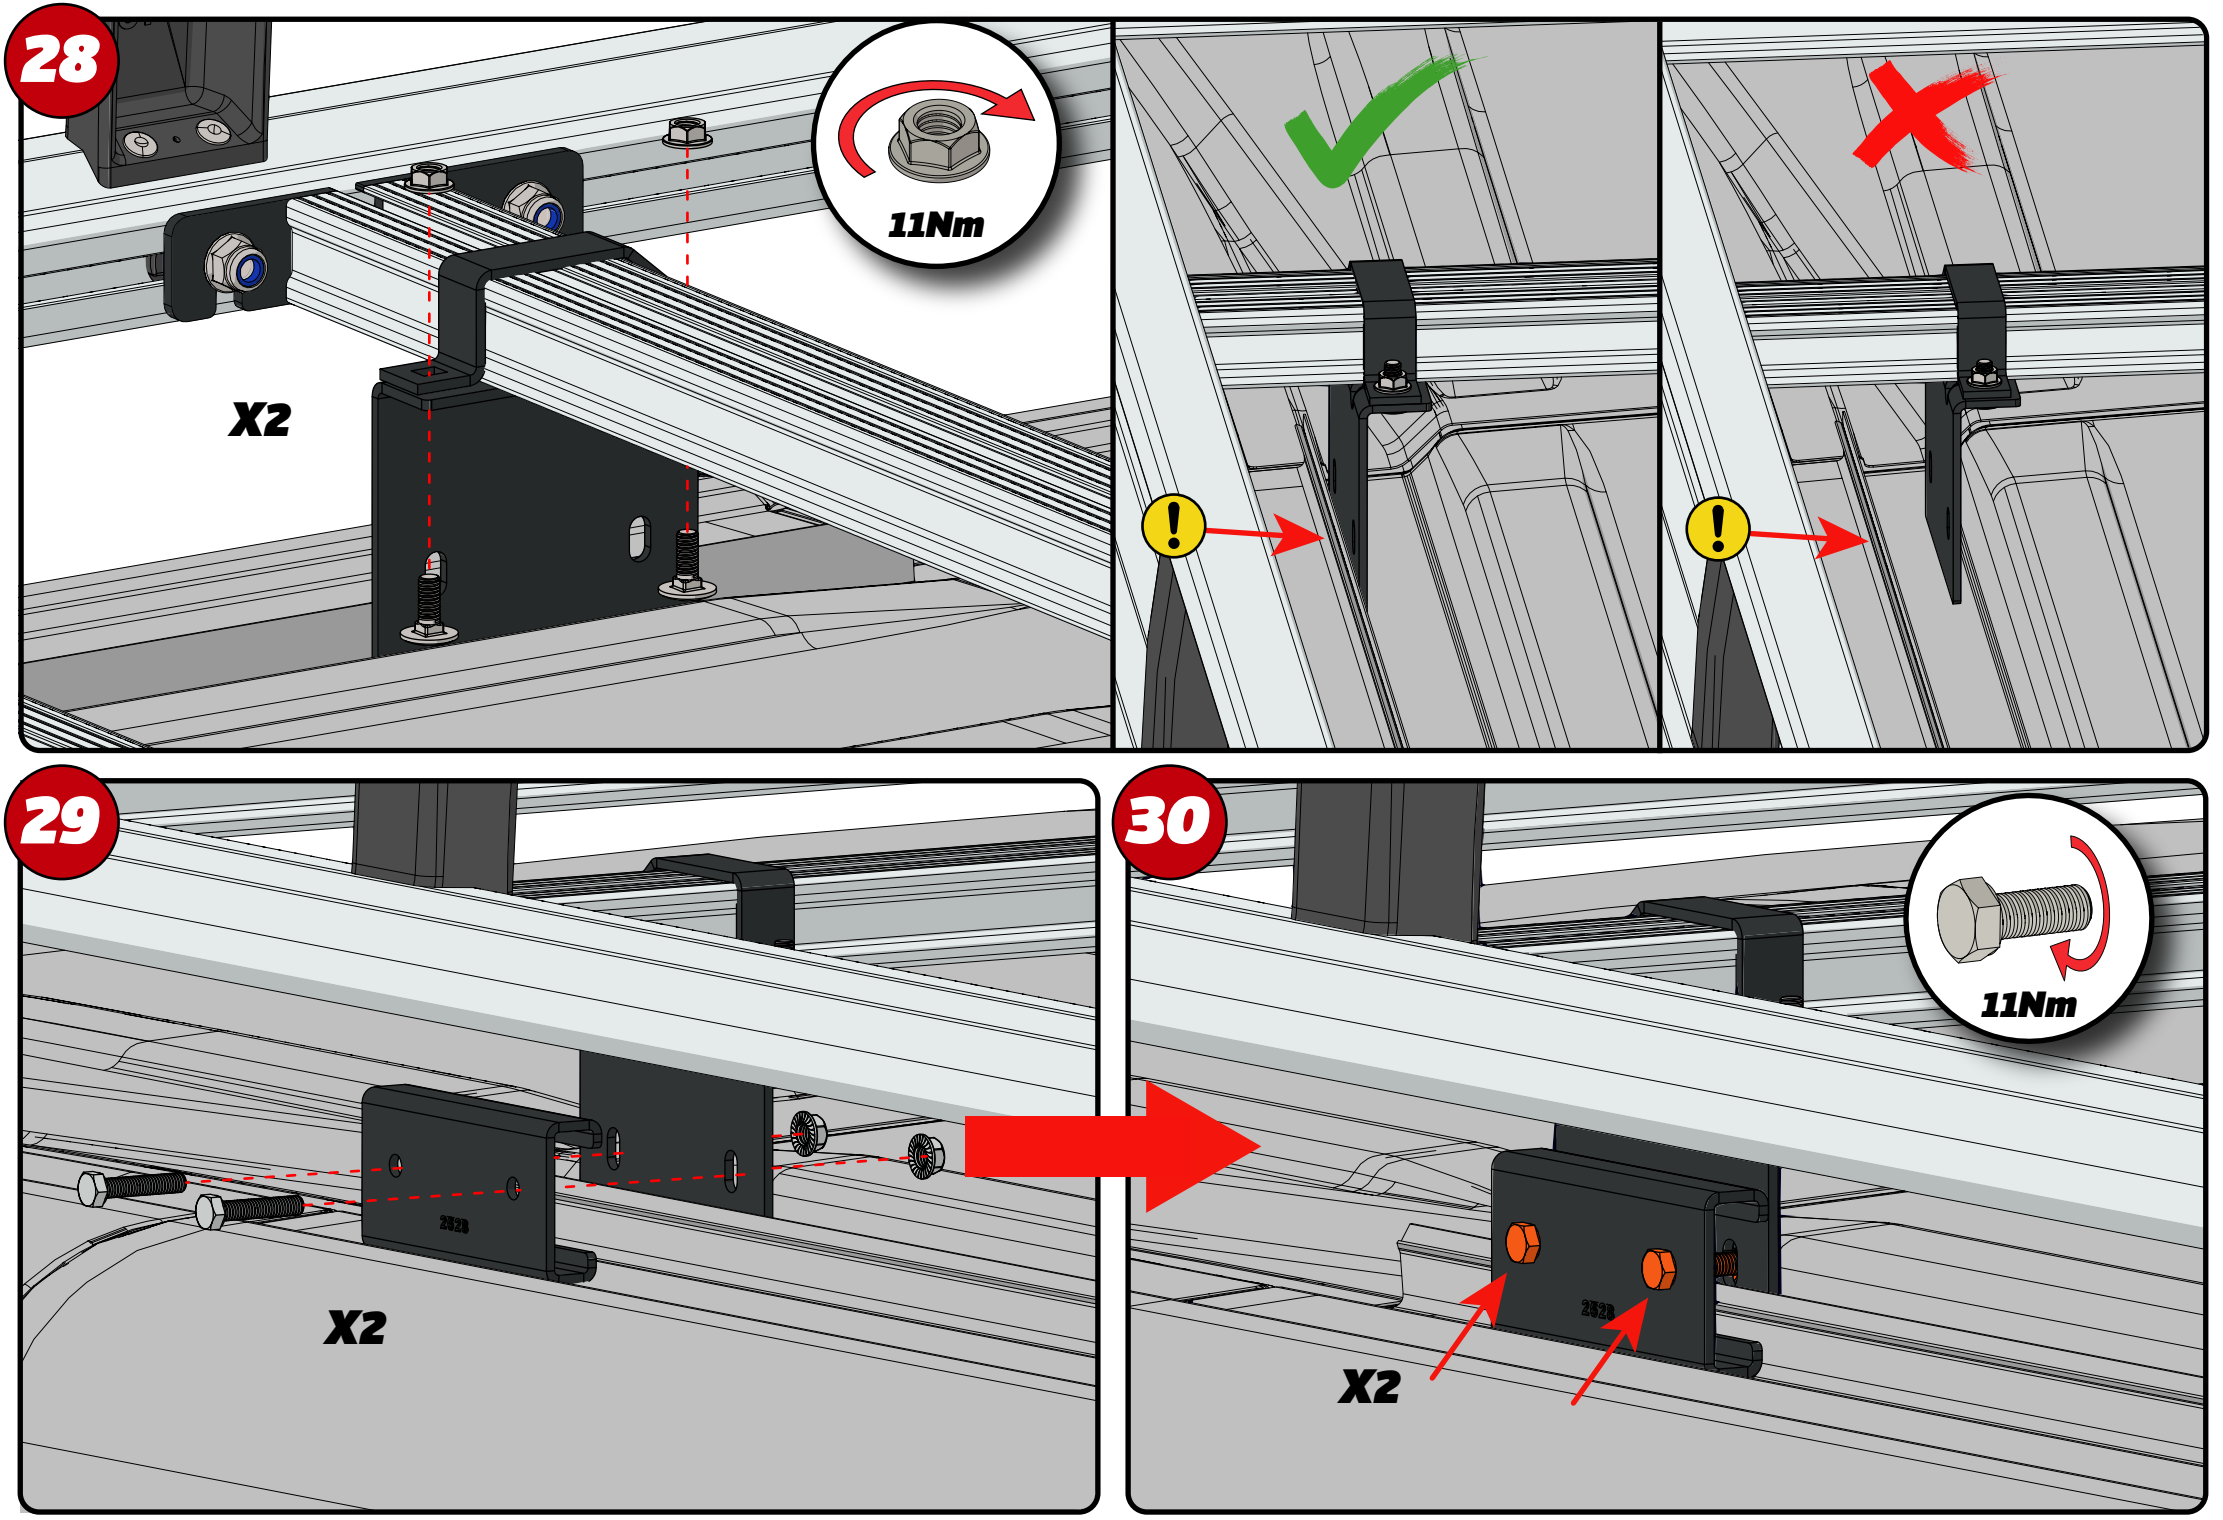

28
11Nm
X2
29
X2
30
11Nm
X2

31

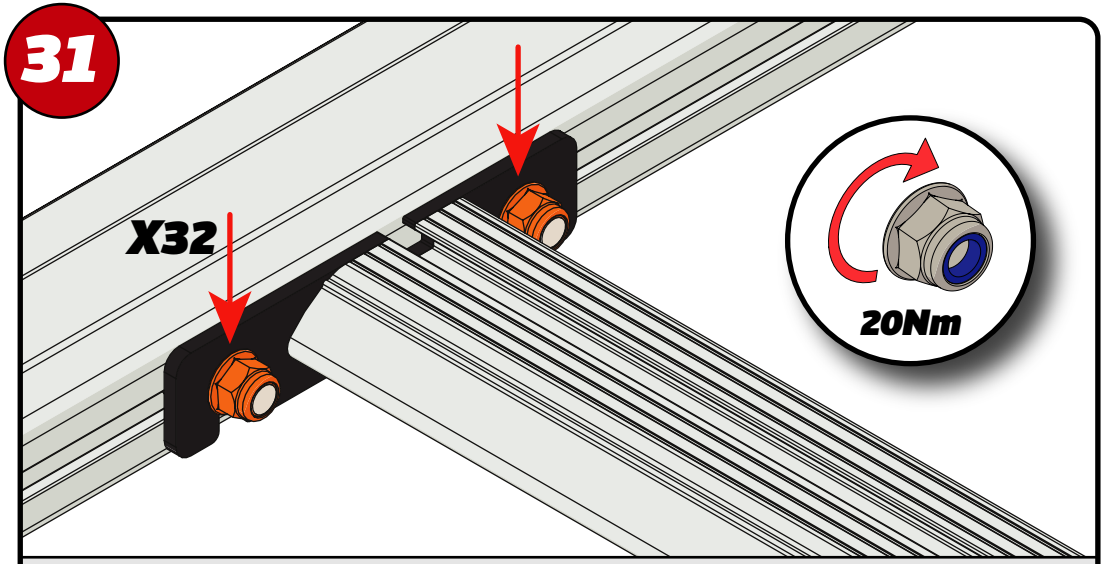


EN - TIGHTEN ALL OF THE CROSS BARS
DE - ALLE QUERSTANGEN FESTZIEHEN
FR - SERREZ TOUTES LES BARRES TRANSVERSALES
NL - DRAAI ALLE DWARSBALK VAN HET DAK AAN
ES - APRIETE TODAS LAS BARRAS TRANSVERSALES
IT - STRINGERE TUTTE LE BARRE TRASVERSALI
SV - SKRU UPP ALLA KORSSTANGAR
DA - SKRU ALLE TAGBØJLER OP
NO - SKRU OPP ALLE TVERRSTENGER
PL - DOKRĘCIĆ WSZYSTKIE POPRZECZKI
CS - VŠECHNY PŘÍČNÉ TYČE SEŠROUJTE


32

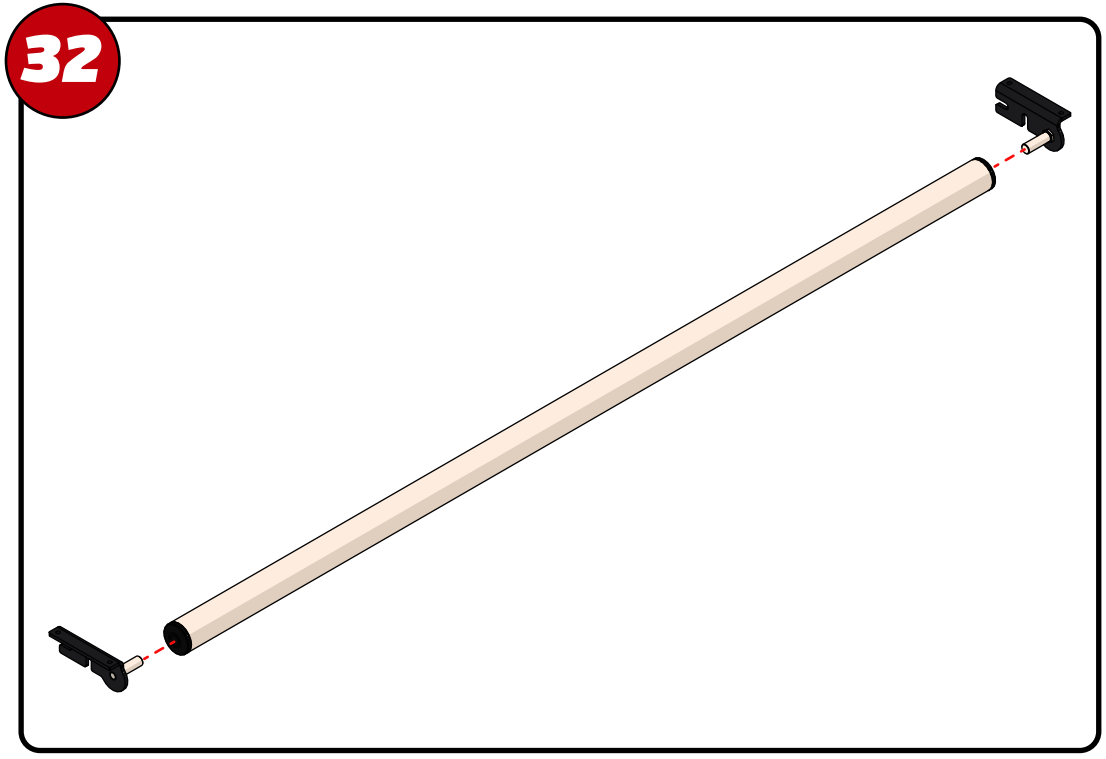


33

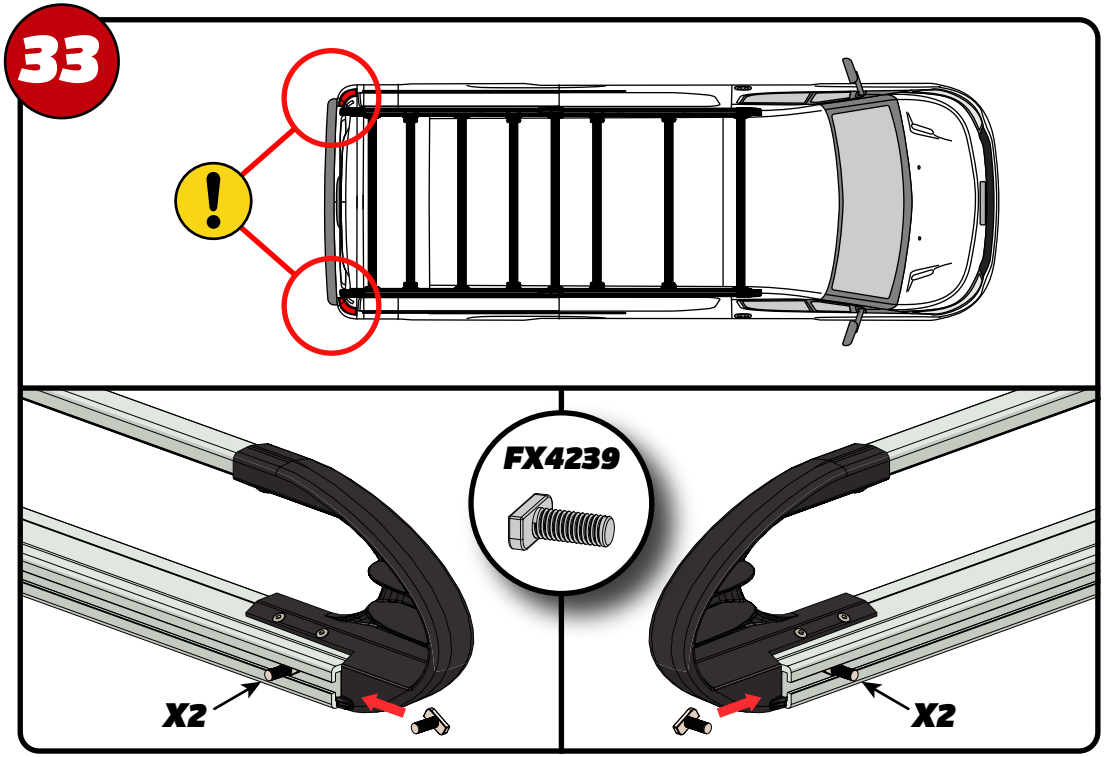


34

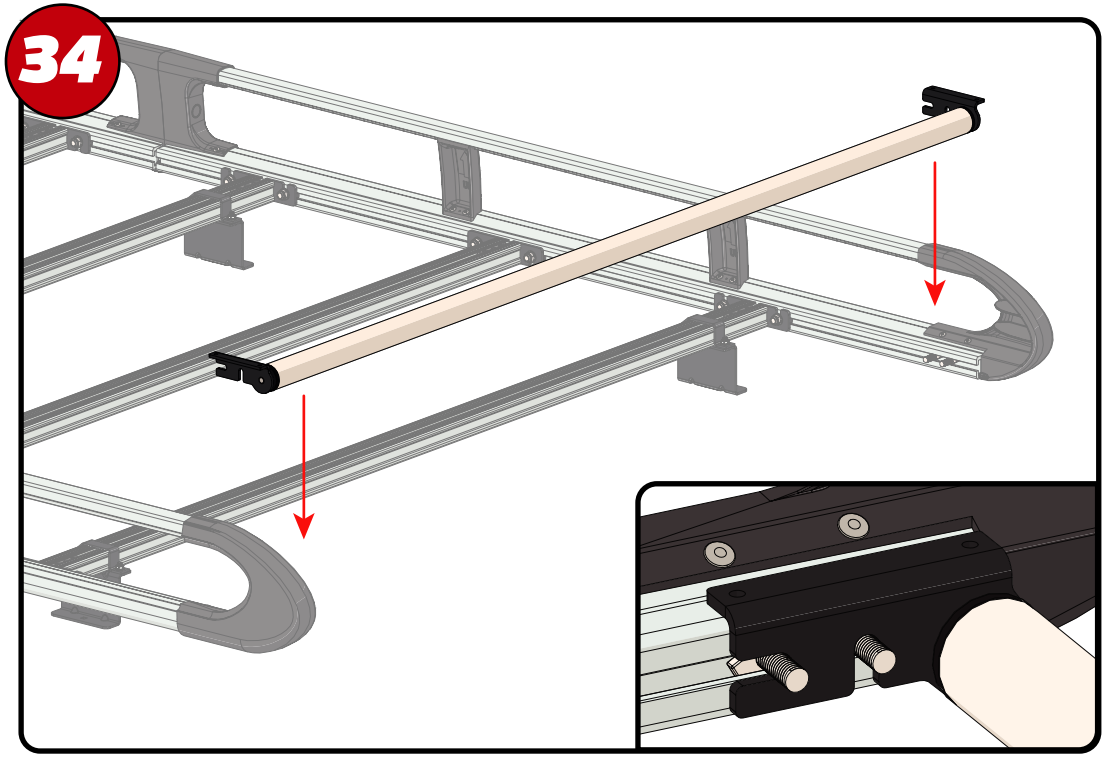


35

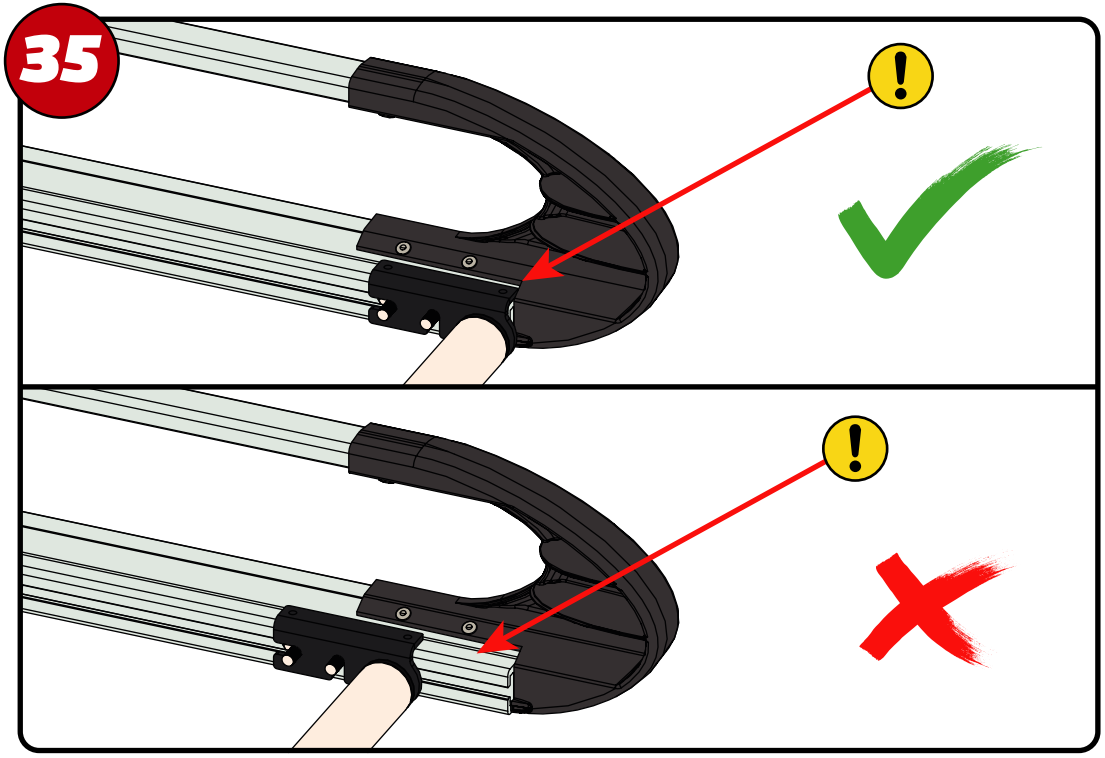

36

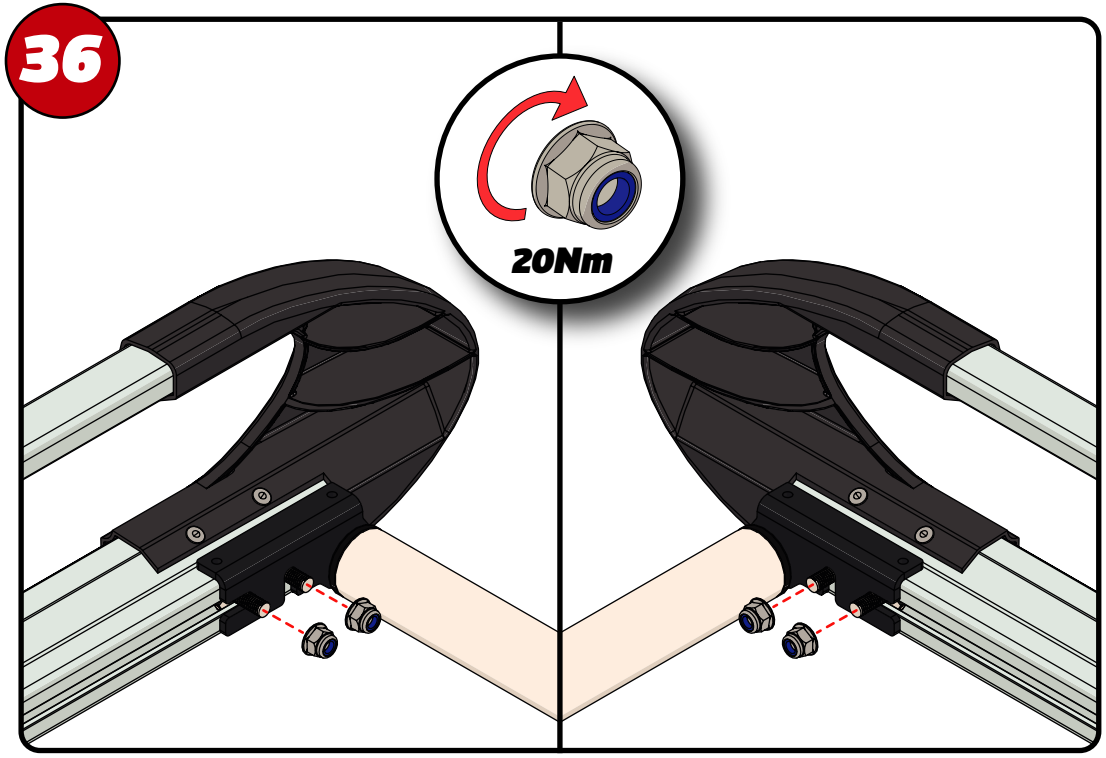


37

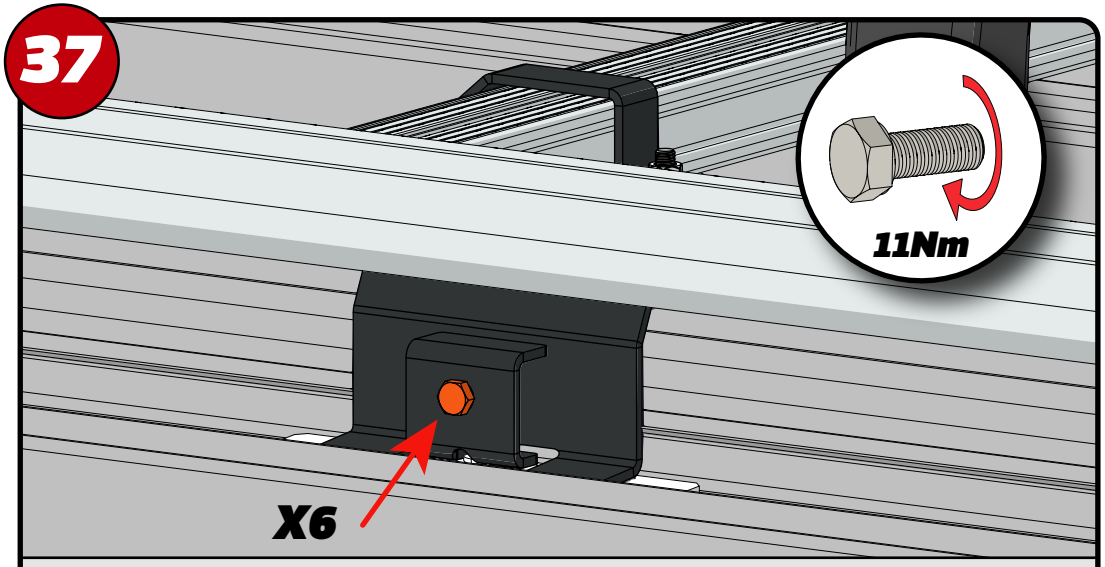


EN - HOLD THE BRACKET STRAIGHT WHILE TIGHTENING
DE - HALTEN SIE DIE HALTERUNG BEIM FESTZIEHEN GERADE
FR - TENIR LE SUPPORT DROITE PENDANT LE SERRAGE
NL - BEUGEL RECHT HOUDEN TIJDENS HET AANDRAAIEN
ES - MANTENGA EL SOPORTE RECTO MIENTRAS APRIETE
IT - TENERE LA STAFFA DIRITTA DURANTE IL SERRAGGIO
SV - HÅLL FÄSTET RAKT MEDAN DU DRAR ÅT
DA - HOLD BESLAGET LIGE, MENS DU STRAMMER
NO - HOLD BRAKETEN RETT MENS DU STRAMMES
PL - TRZYMAJ WSPORNIK PROSTO PODCZAS DOKRĘCANIA
CS - BĚHEM DOTAHOVÁNÍ DRŽTE DRŽÁK ROVNĚ

38

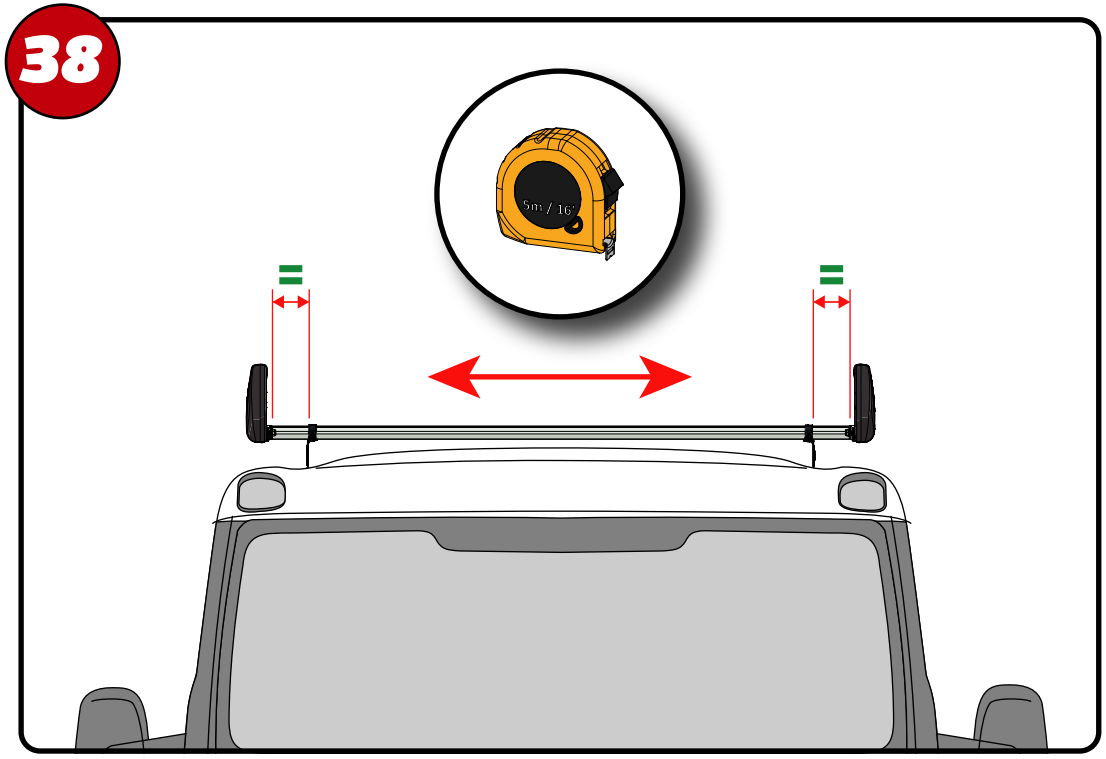


39

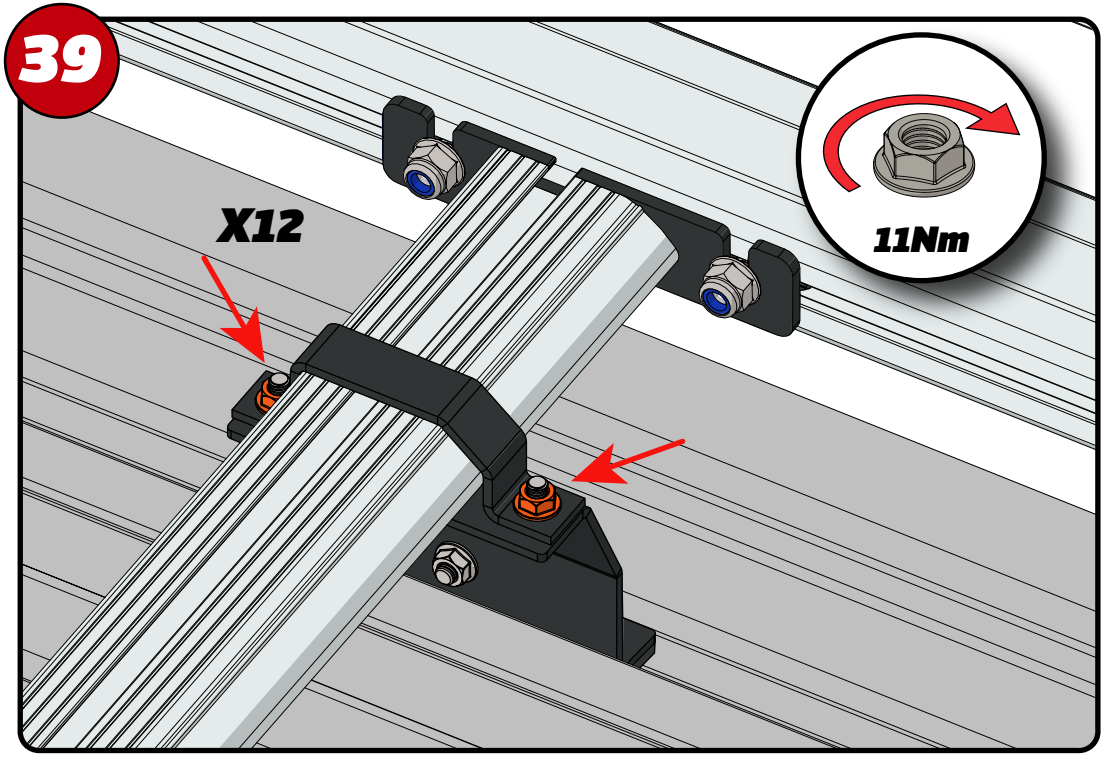


40




X36

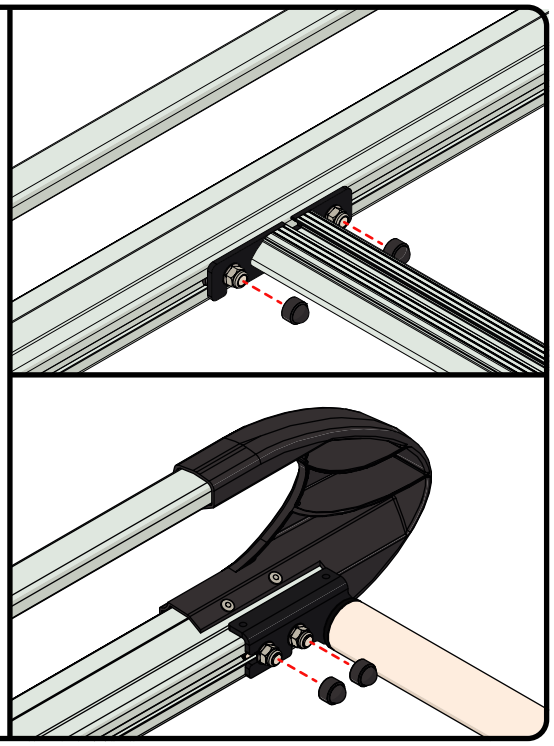

41

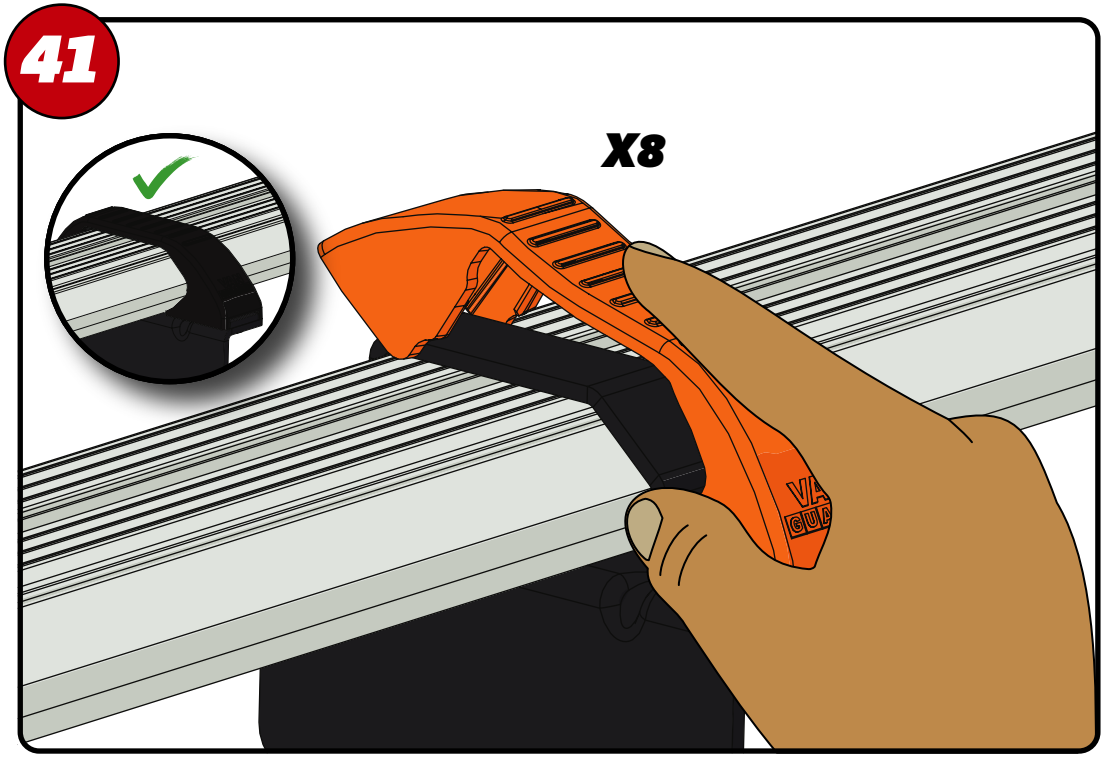

42

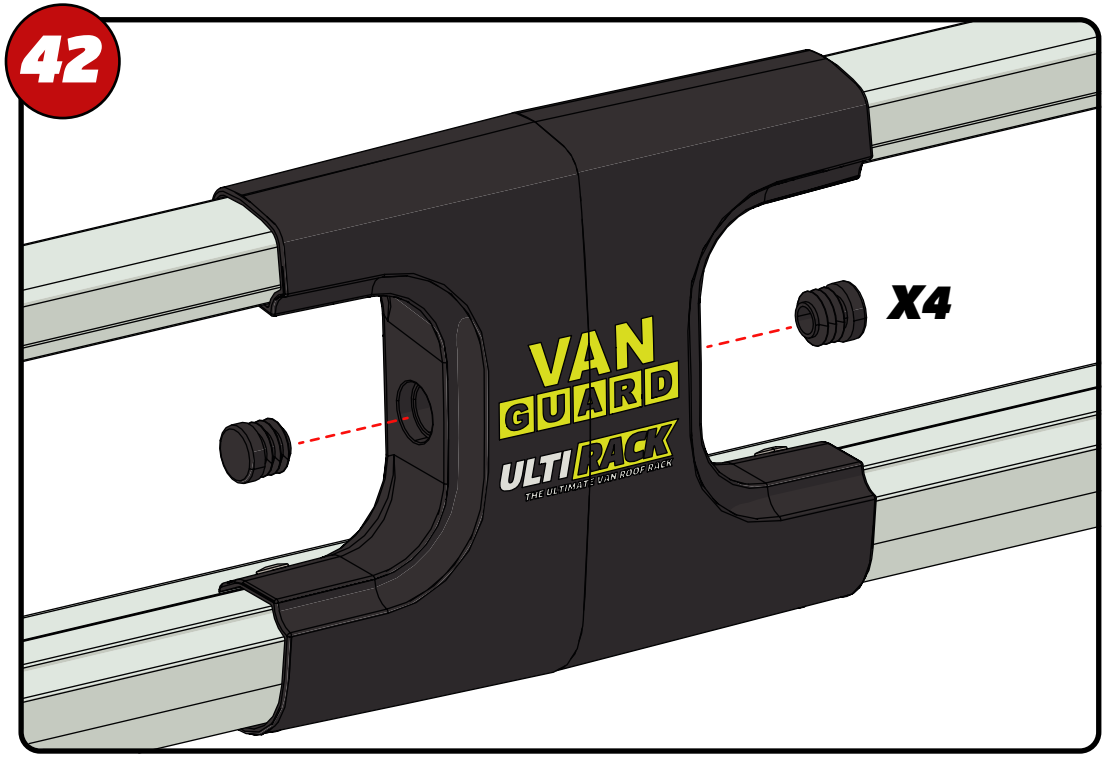

43

