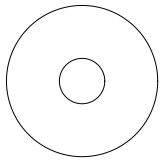

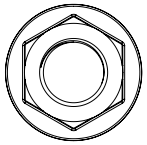
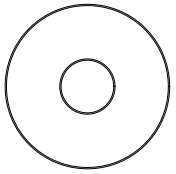
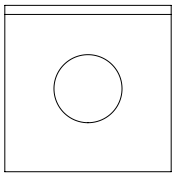
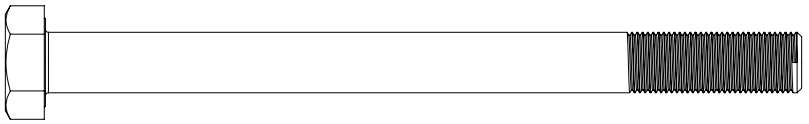
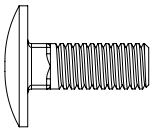
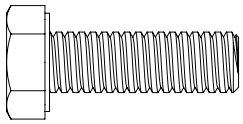






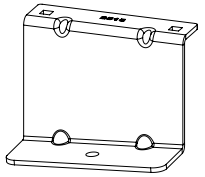
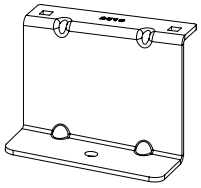
Fitting Instructions - Read instructions carefully before fitting and follow them for correct use


# IN8493 ULTI Bars - X5

| FX4014 X18 (RUBBER) | FX4016 X20 (M6) | FX4011 X26 (M8) | FX4040 X18 (M8) | FX4318 X16 (M8) | FX4319 X8 (M8X100) |
|---|---|---|---|---|---|
|  |  |  |  |  |  |


| FX4042 X20 (M6X16) | FX4028 X18 (M8X25) | MA6065 X10 | ME0203 X10 | MA6269 X16 | ME2500 X8 | ME2501 X18 | MA6268 X2 | ME2515 X1 | ME2516 X1 |
|---|---|---|---|---|---|---|---|---|---|
|  |  |  |  |  |  |  |  |  |  |

## TOOLS REQUIRED


10MM X 1





13MM X 2





TAPE MEASURE X 1




DRILL (Ø4 & Ø9) X 1

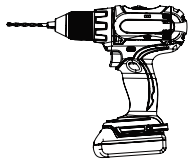

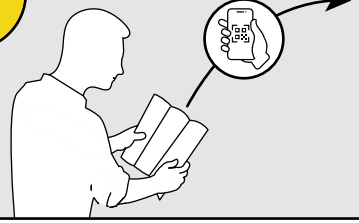


**EN** - SAFETY AND PRODUCT INFORMATION
**DE** - SICHERHEITS- UND PRODUKTINFORMATIONEN
**FR** - INFORMATIONS DE SÉCURITÉ ET DU PRODUIT
**NL** - VEILIGHEIDS- EN PRODUCTINFORMATIE
**ES** - INFORMACIÓN DE SEGURIDAD Y DEL PRODUCTO
**IT** - INFORMAZIONI SULLA SICUREZZA E SUL PRODOTTO
**SV** - SÄKERHETS- OCH PRODUKTINFORMATION
**DA** - SIKKERHEDS- OG PRODUKTINFORMATION
**NO** - SIKKERHETS- OG PRODUKTINFORMASJON
**PL** - INFORMACJE O BEZPIECZEŃSTWIE I PRODUKCIE
**CS** - INFORMACE O BEZPEČNOSTI A PRODUKTU


**Customercare@van-guard.co.uk**
**UK +44 (0) 1392 368 351**

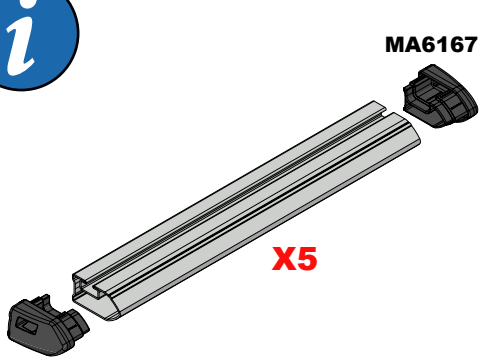
**ULTI Bar Trade**
(Steel)

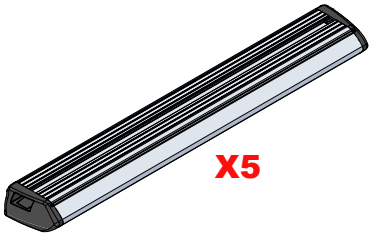


**ULTI Bar+**
(Aluminium)



This FITTING INSTRUCTION is the property of VAN GUARD ACCESSORIES LTD. and must not be used for manufacturing purposes, copied nor communicated in any way to third parties without written permission from VAN GUARD ACCESSORIES LTD.


IN8493_B (CN:01376)


Van Guard Accessories Ltd
Fair Oak Close, Exeter Airport Business Park,
Exeter, Devon, EX5 2UL
www.van-guard.co.uk

# 350-5

**Vehicle:**
Nissan Interstar 2025 on
Renault Master 2025 on
**Wheel Base:** L3
**Roof Height:** H2
**Rear Doors:** Twin

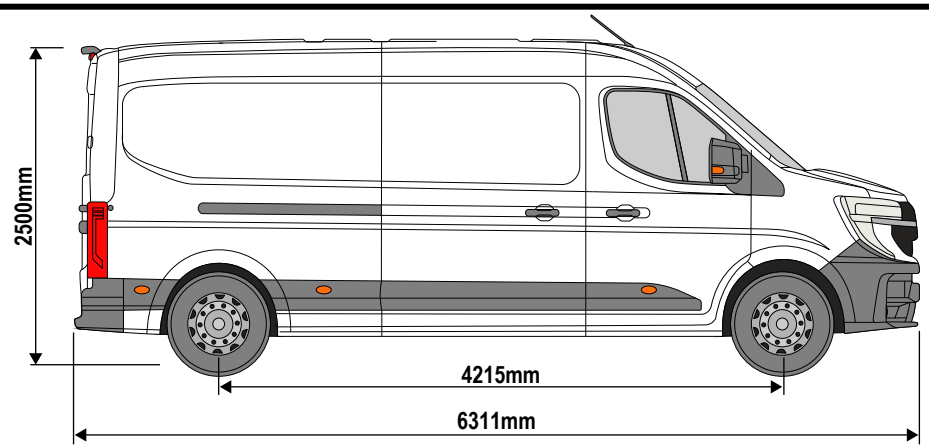


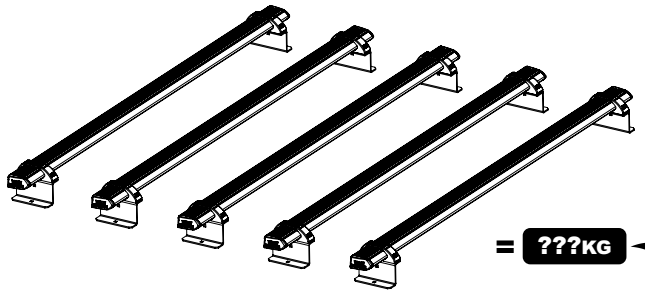

**ULTI Bar Trade** (Steel) = **23.5KG**

**ULTI Bar+** (Aluminium) = **15.8KG**


**01**

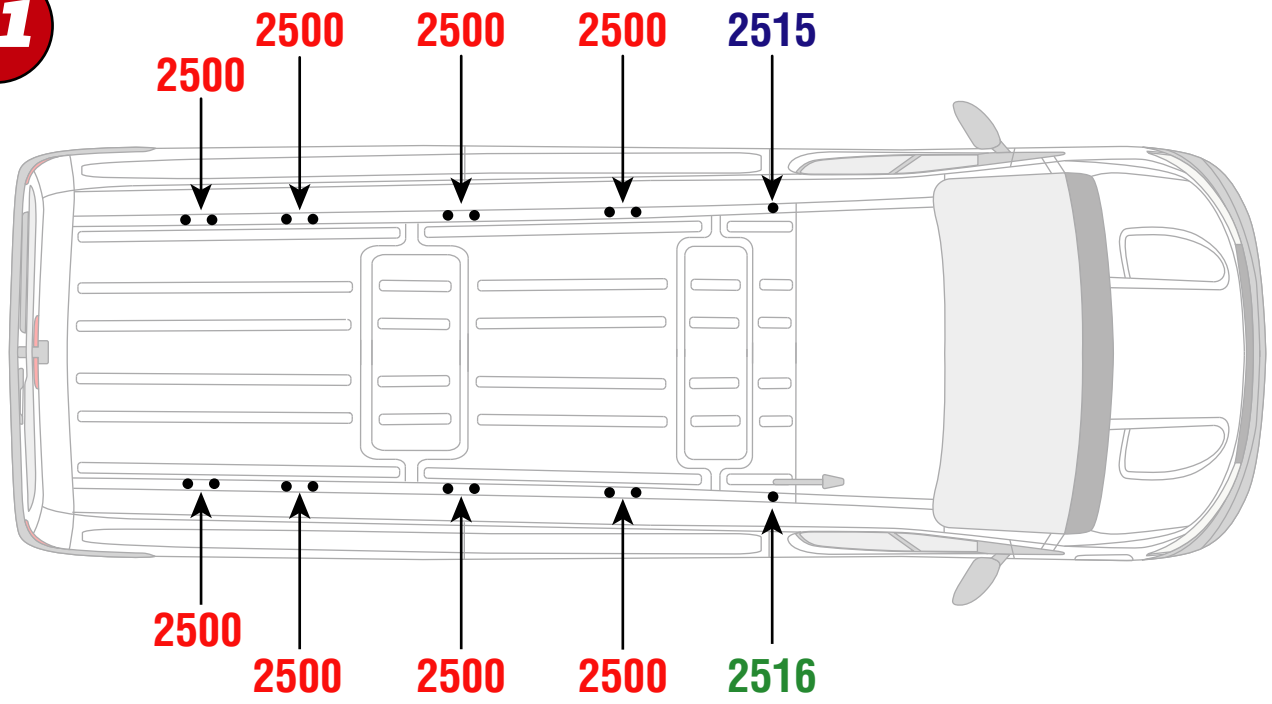



2500

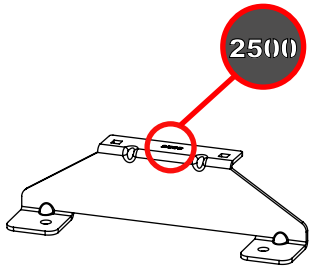



2515

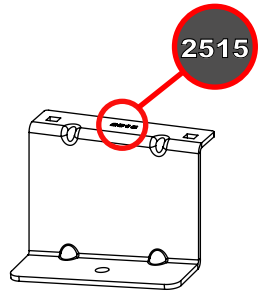


2516

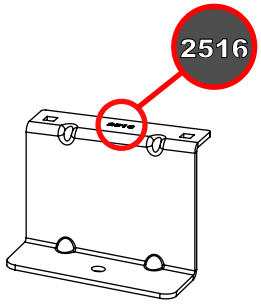



**02**

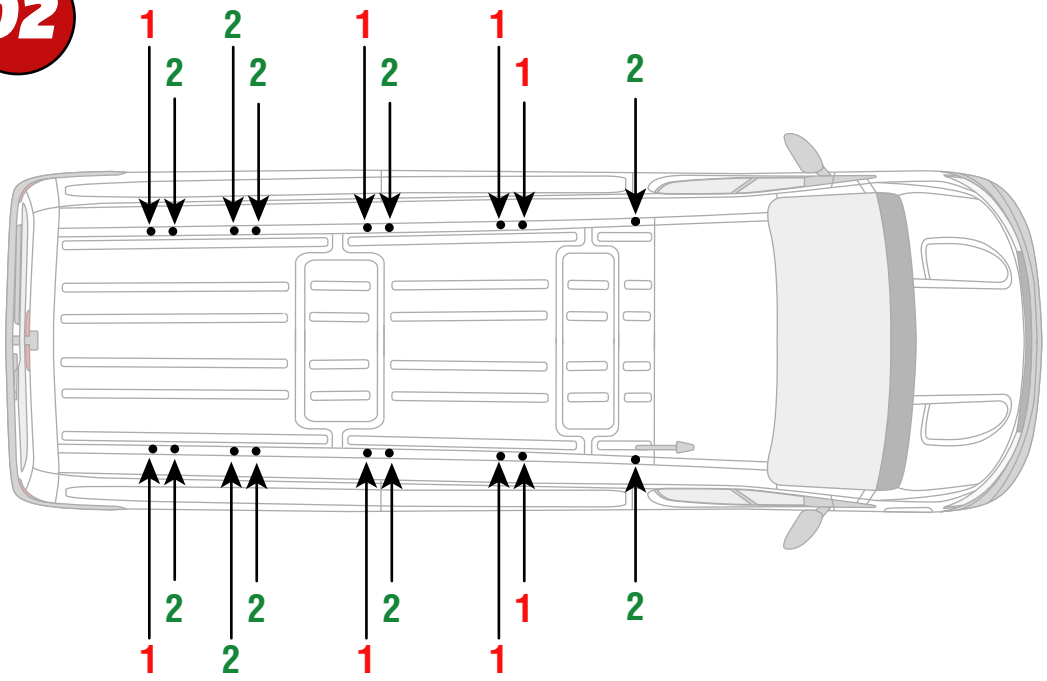



**1**




**03**

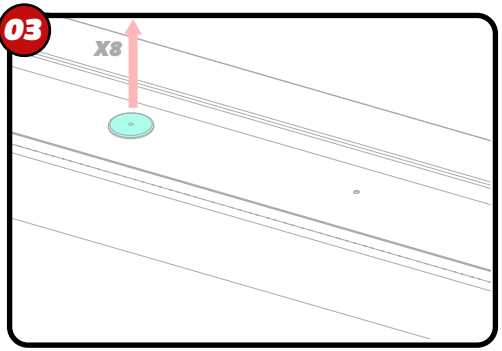




**2**

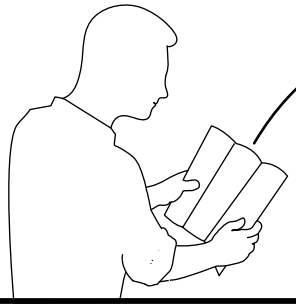



**04**

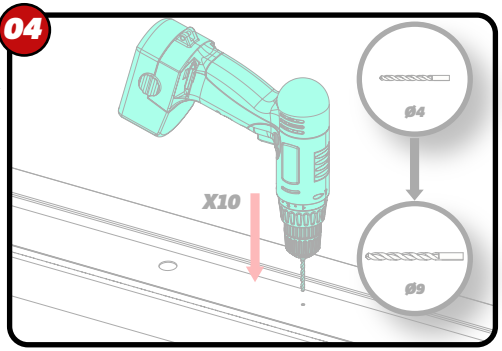

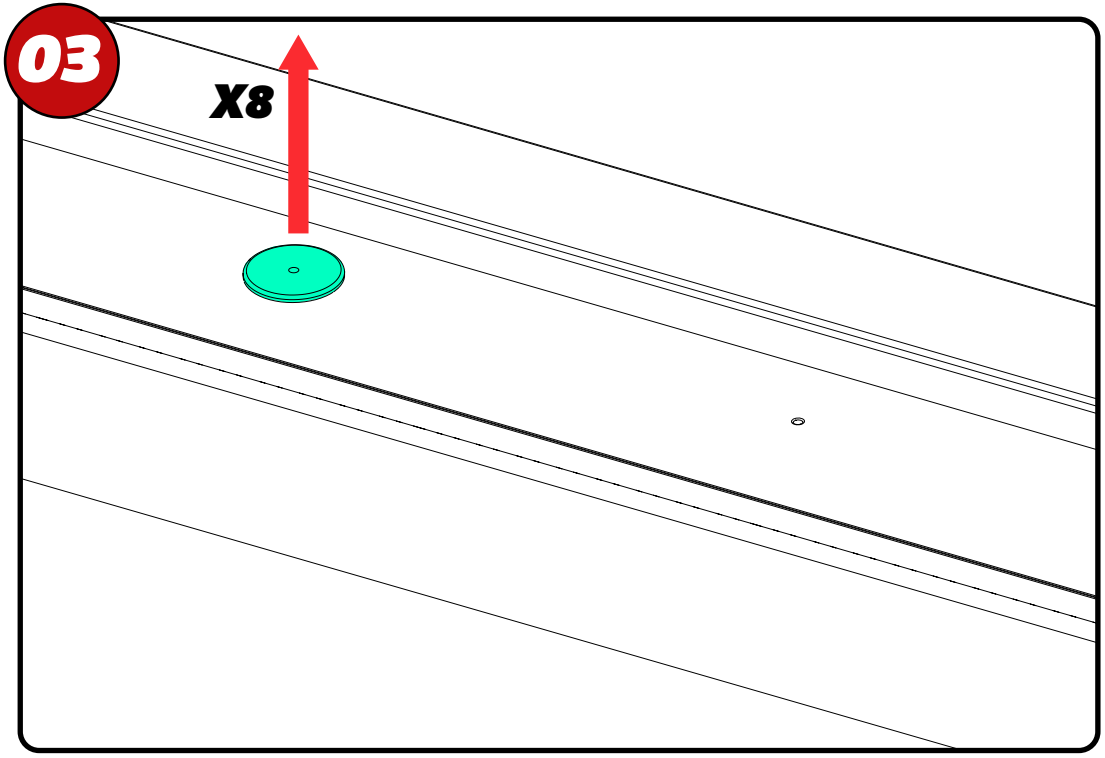

03
X8

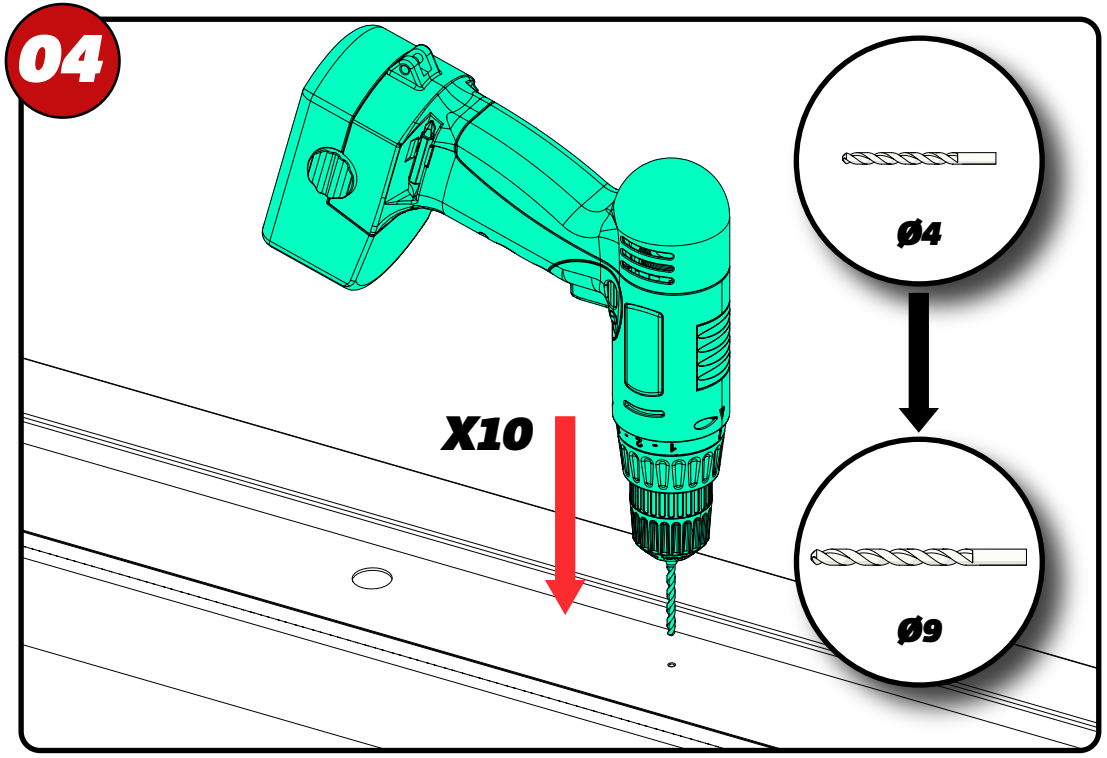

04
X10
Ø4
Ø9

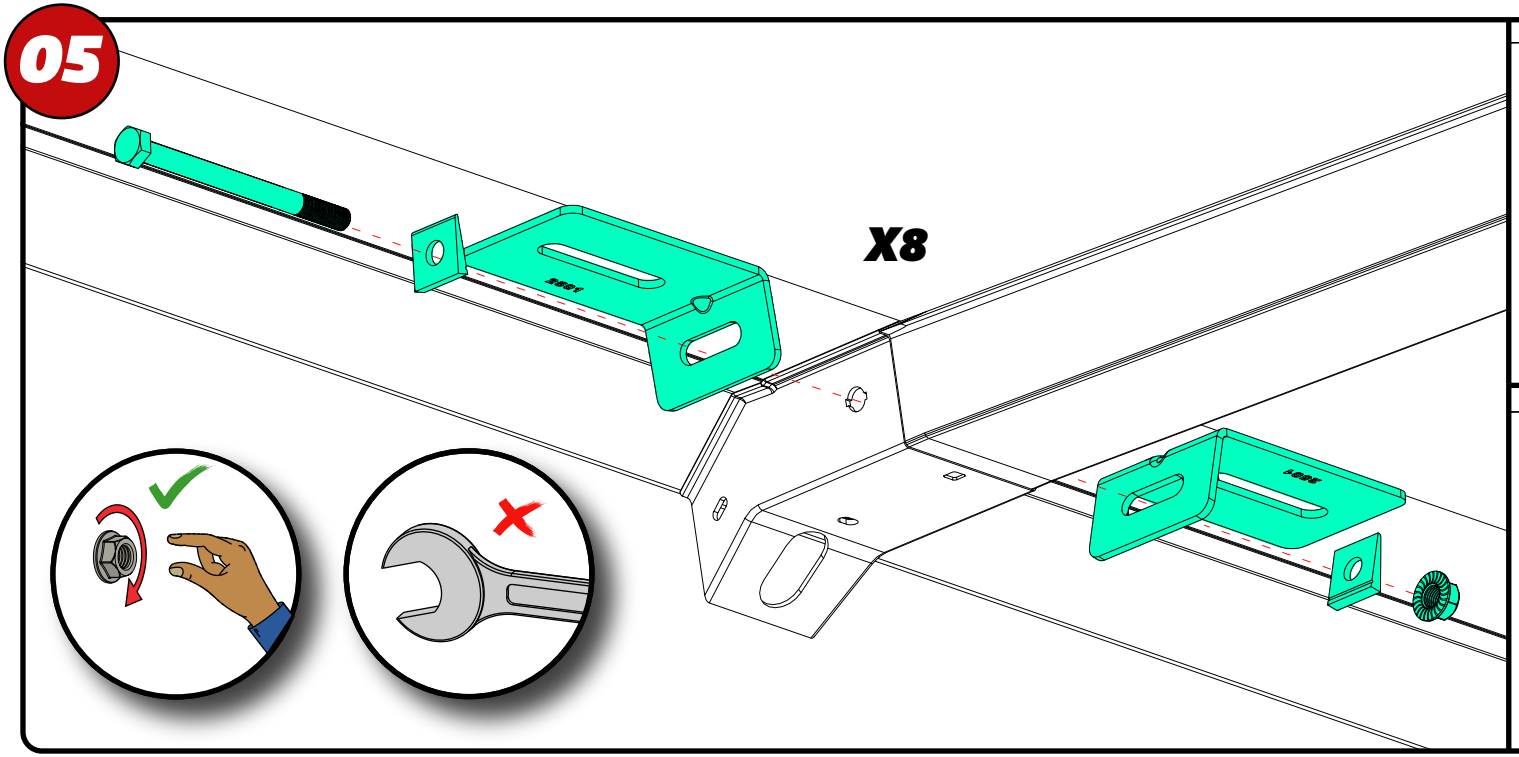
05
X8

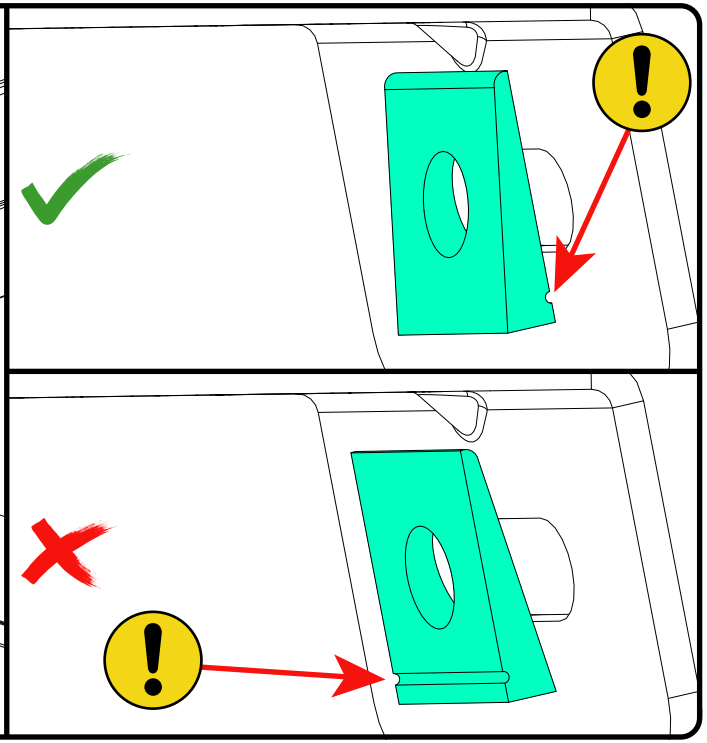


## 06

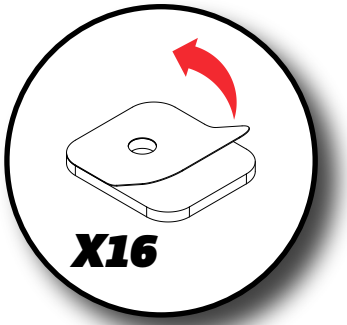

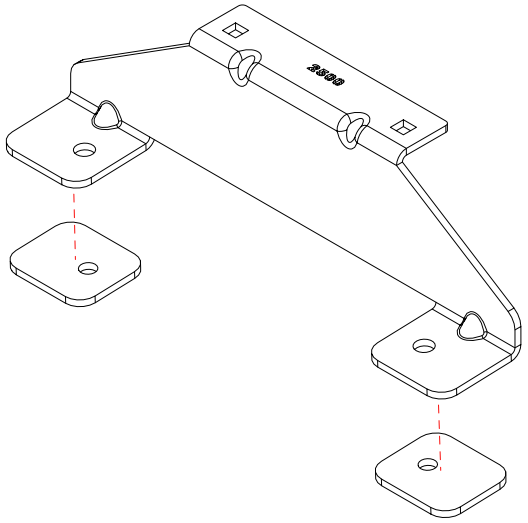



**EN** - STICK GASKETS TO ALL BRACKETS
**DE** - KLEBEN SIE DIE DICHTUNG AN ALLEN HALTERUNGEN
**FR** - COUSSINETS ADHÉSIFS À TOUS LES SUPPORTS
**NL** - PLAK PAKKING OP ALLE BEUGELS
**ES** - PEGA LAS ALMOHADILLAS A TODOS LOS SOPORTES
**IT** - ADESIVI GUARNIZIONI A TUTTE LE STAFFE
**SV** - FÄST GUMMI PÅ ALLA FÄSTEN
**DA** - KLÆB GUMMI PÅ ALLE BESLAG
**NO** - PLIST GUMMI PÅ ALLE BRAKKETTER
**PL** - NAKLEJ USZCZELKI DO WSZYSTKICH WSPORNIKÓW
**CS** - PŘILEPTE TĚSNĚNÍ NA VŠECHNY DRŽÁKY


## 07

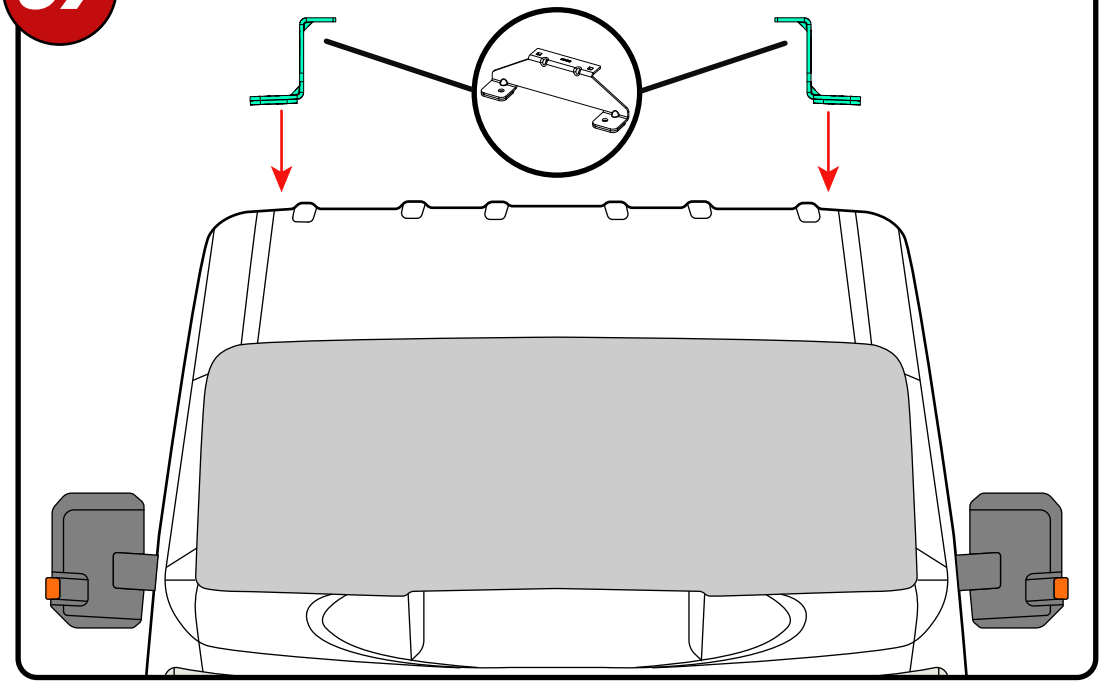


## 08

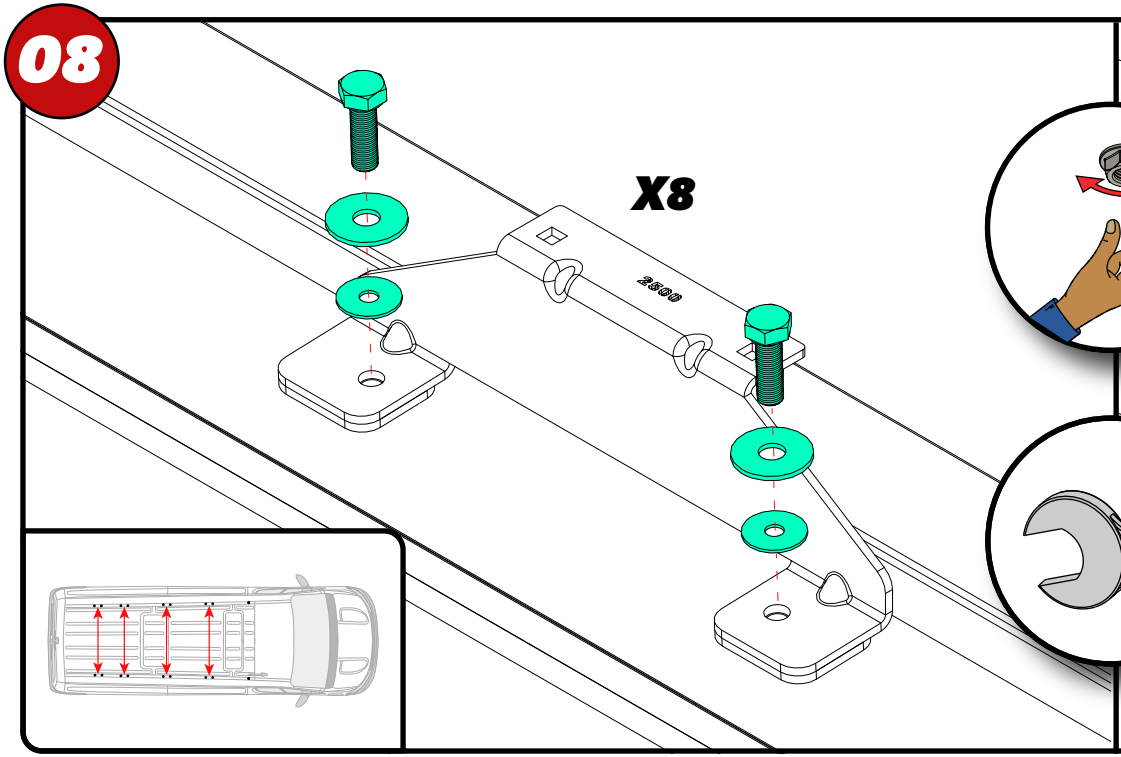


## 09

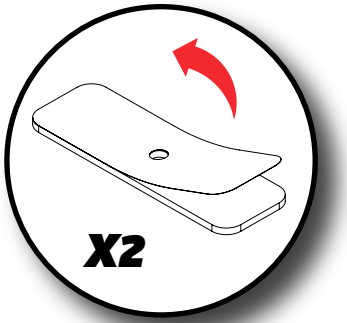

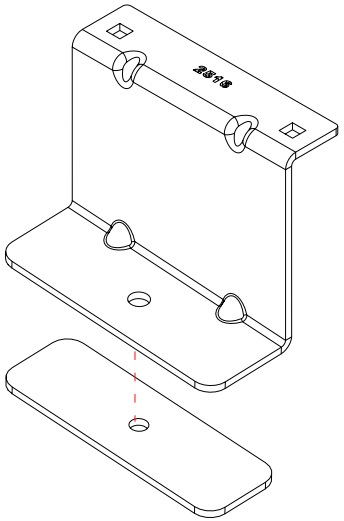



**EN** - STICK GASKETS TO ALL BRACKETS
**DE** - KLEBEN SIE DIE DICHTUNG AN ALLEN HALTERUNGEN
**FR** - COUSSINETS ADHÉSIFS À TOUS LES SUPPORTS
**NL** - PLAK PAKKING OP ALLE BEUGELS
**ES** - PEGA LAS ALMOHADILLAS A TODOS LOS SOPORTES
**IT** - ADESIVI GUARNIZIONI A TUTTE LE STAFFE
**SV** - FÄST GUMMI PÅ ALLA FÄSTEN
**DA** - KLÆB GUMMI PÅ ALLE BESLAG
**NO** - PLIST GUMMI PÅ ALLE BRAKKETTER
**PL** - NAKLEJ USZCZELKI DO WSZYSTKICH WSPORNIKÓW
**CS** - PŘILEPTE TĚSNĚNÍ NA VŠECHNY DRŽÁKY

## 10

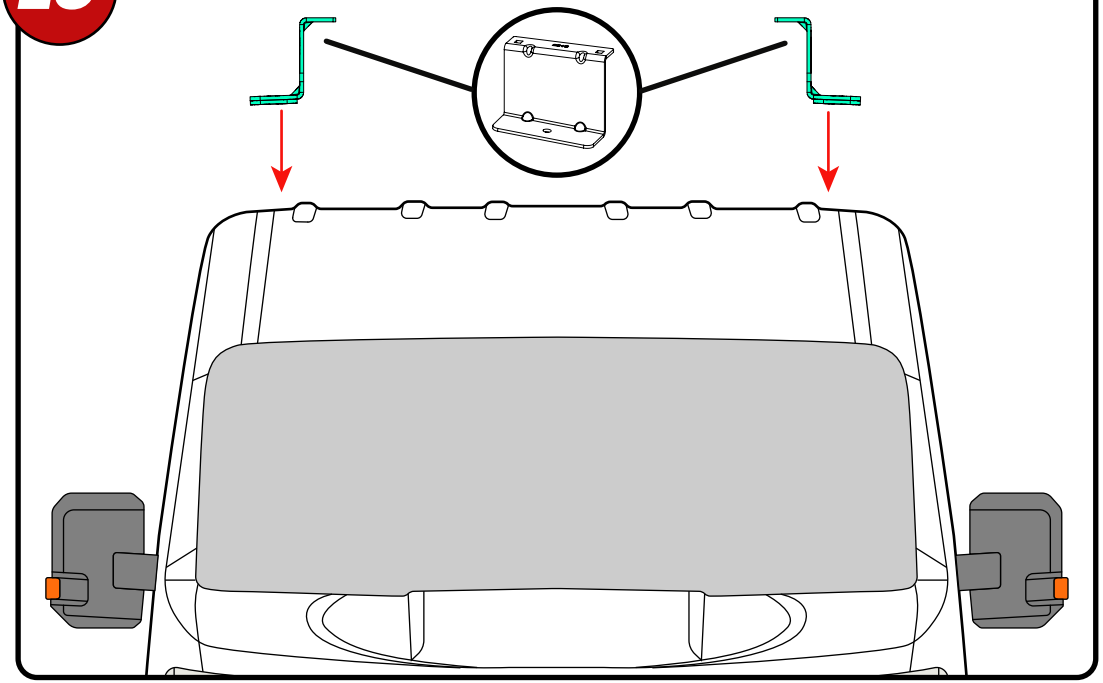


## 11

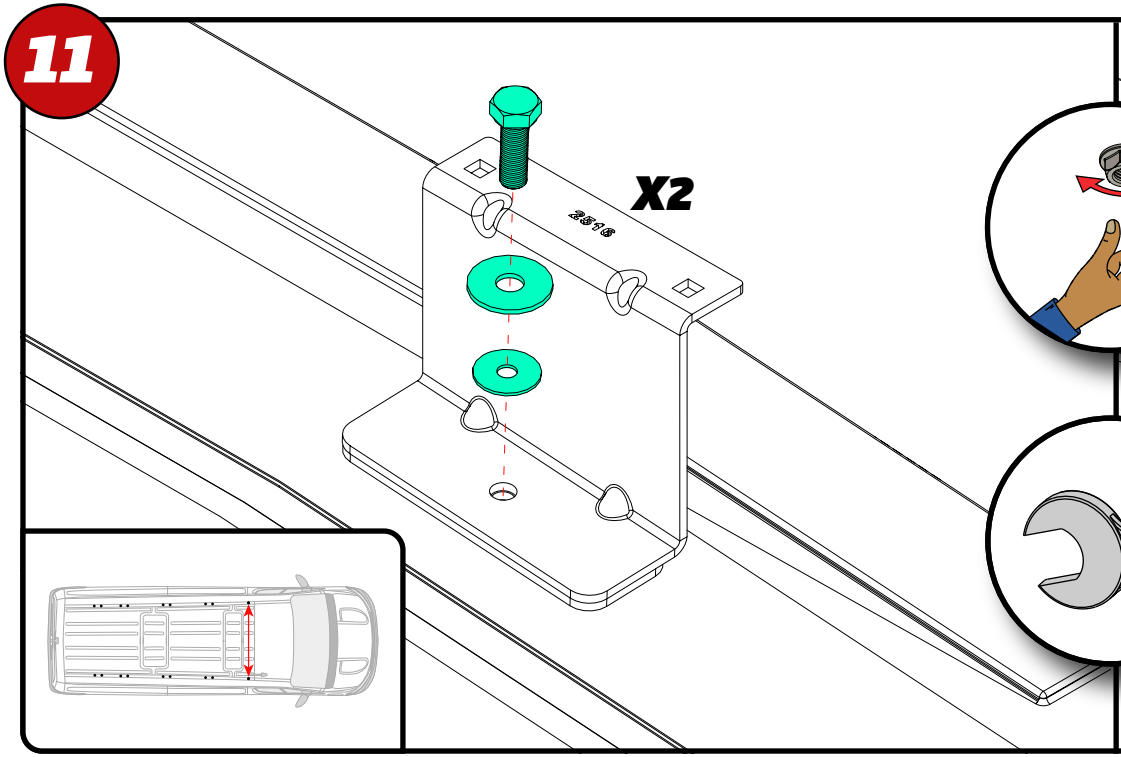






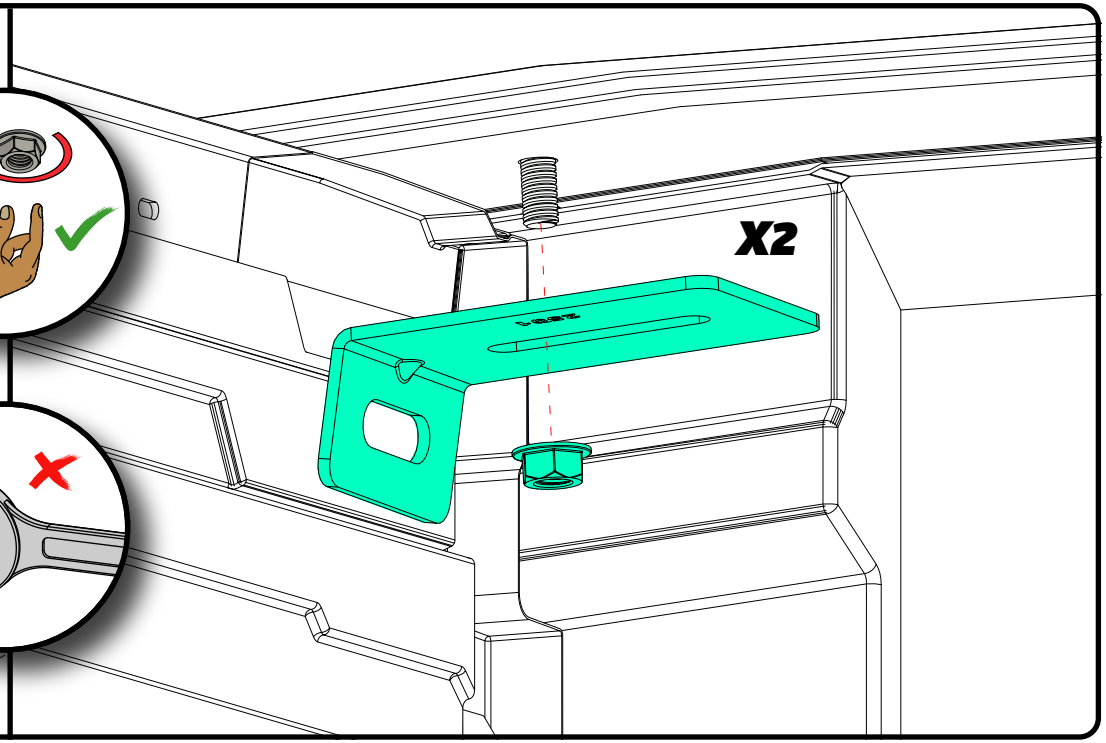



## 12

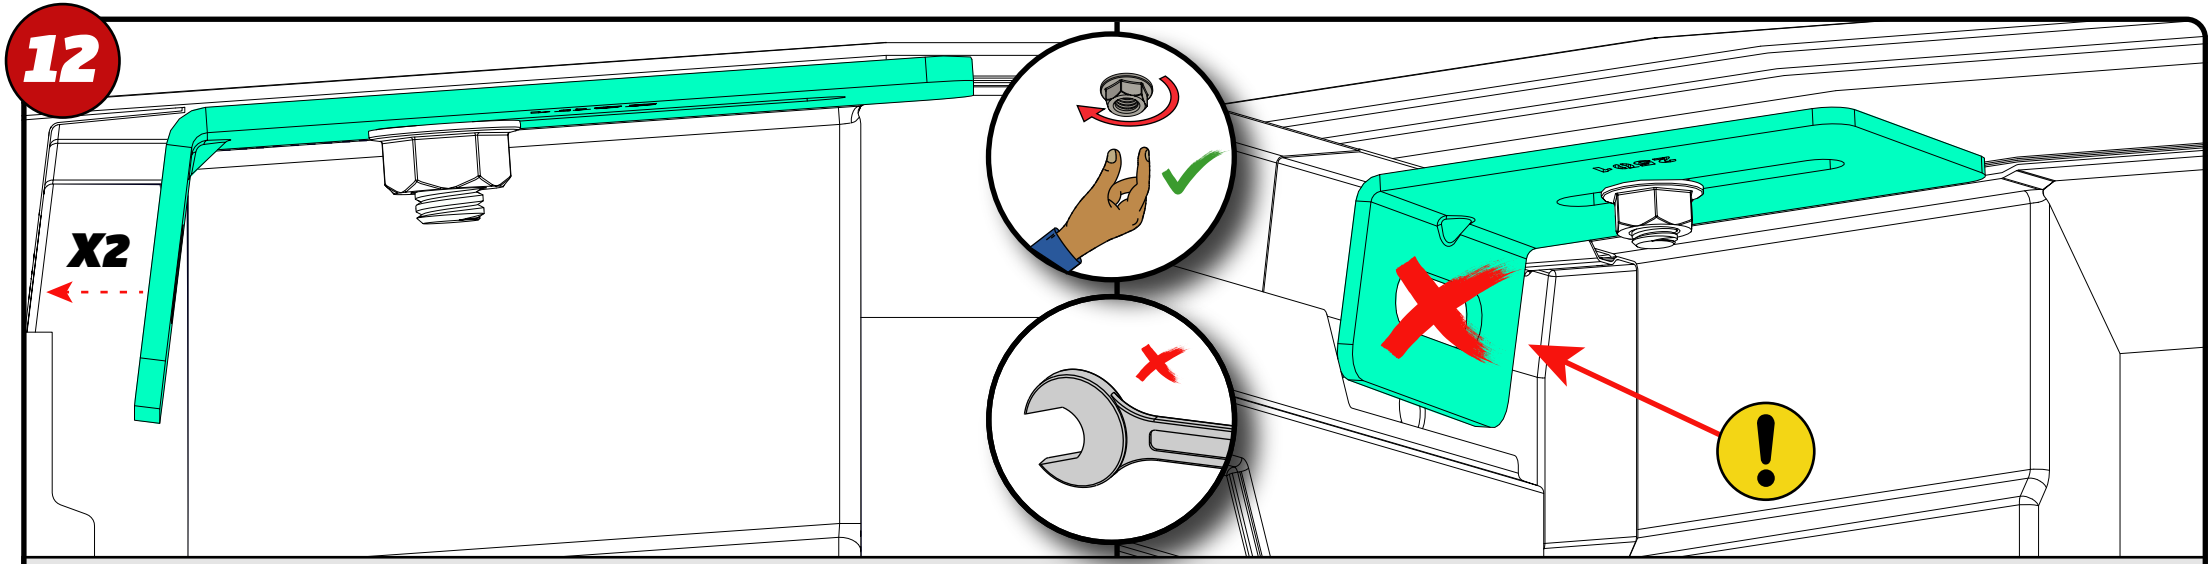



**EN** - SLIDE BRACKET BACK TO THE VAN LINING. NO ADDITIONAL FIXINGS NEEDED
**DE** - SCHIEBEN SIE DIE HALTERUNG ZURÜCK ZUR VERKLEIDUNG DES LIEFERWAGENS. KEINE ZUSÄTZLICHEN BEFESTIGUNGEN ERFORDERLICH.
**FR** - FAITES GLISSER LE SUPPORT VERS LE REVÊTEMENT DU FOURGON. AUCUNE AUTRE FIXATION NÉCESSAIRE.
**NL** - SCHUIF DE BEUGEL TERUG NAAR DE BEKLEDING VAN DE BESTELWAGEN. GEEN EXTRA BEVESTIGINGEN NODIG.
**ES** - DESLICE EL SOPORTE DE VUELTA AL REVESTIMIENTO DE LA FURGONETA. NO SE NECESITAN FIJACIONES ADICIONALES.
**IT** - FAR SCORRERE LA STAFFA INDIETRO FINO AL RIVESTIMENTO DEL FURGONE. NESSUN FISSAGGIO AGGIUNTIVO NECESSARIO.
**SV** - SKJUT TILLBAKA FÄSTET MOT SKÅPBILENS BEKLÄDNAD. INGA YTTERLIGARE FÄSTEN BEHÖVS.
**DA** - SKUB BESLAGET TILBAGE TIL VAREVOGNENS BEKLÆDNING. INGEN YDERLIGERE FASTGØRELSE NØDVENDIG.
**NO** - SKYV BRAKETTEN TILBAKE TIL VAREBILENS KLEDNING. INGEN EKSTRA FESTER NØDVENDIG.
**PL** - PRZESUŃ WSPORNIK Z POWROTEM DO WYŚCIÓŁKI VANA. NIE SĄ POTRZEBNE DODATKOWE MOCOWANIA.
**CS** - POSUŇTE DRŽÁK ZPĚT K OBLOŽENÍ DODÁVKY. ŽÁDNÉ DALŠÍ UPEVNĚNÍ NENÍ NUTNÉ.


## 13

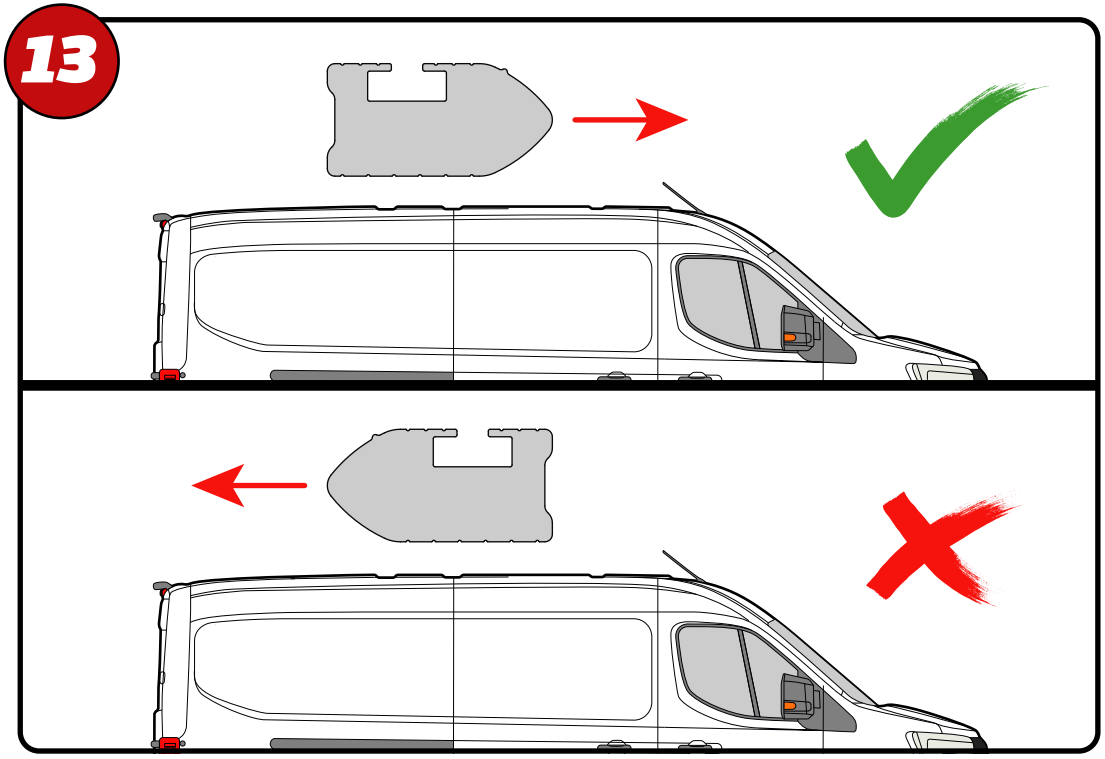


## 12

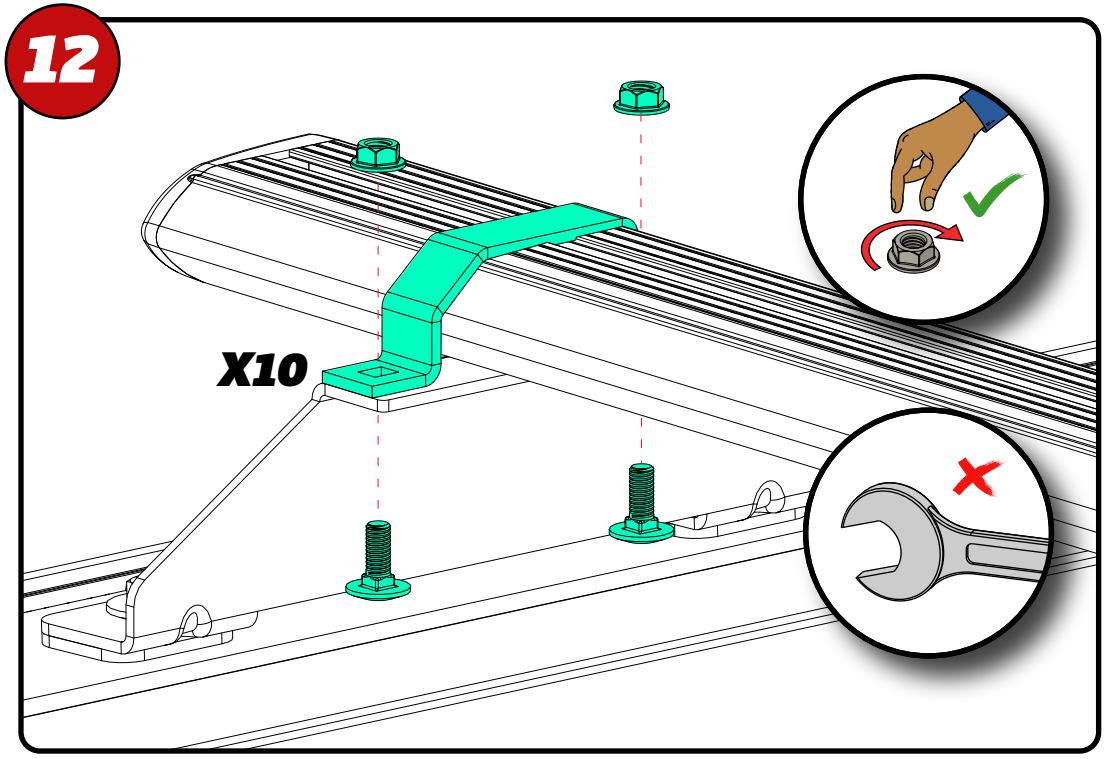


15

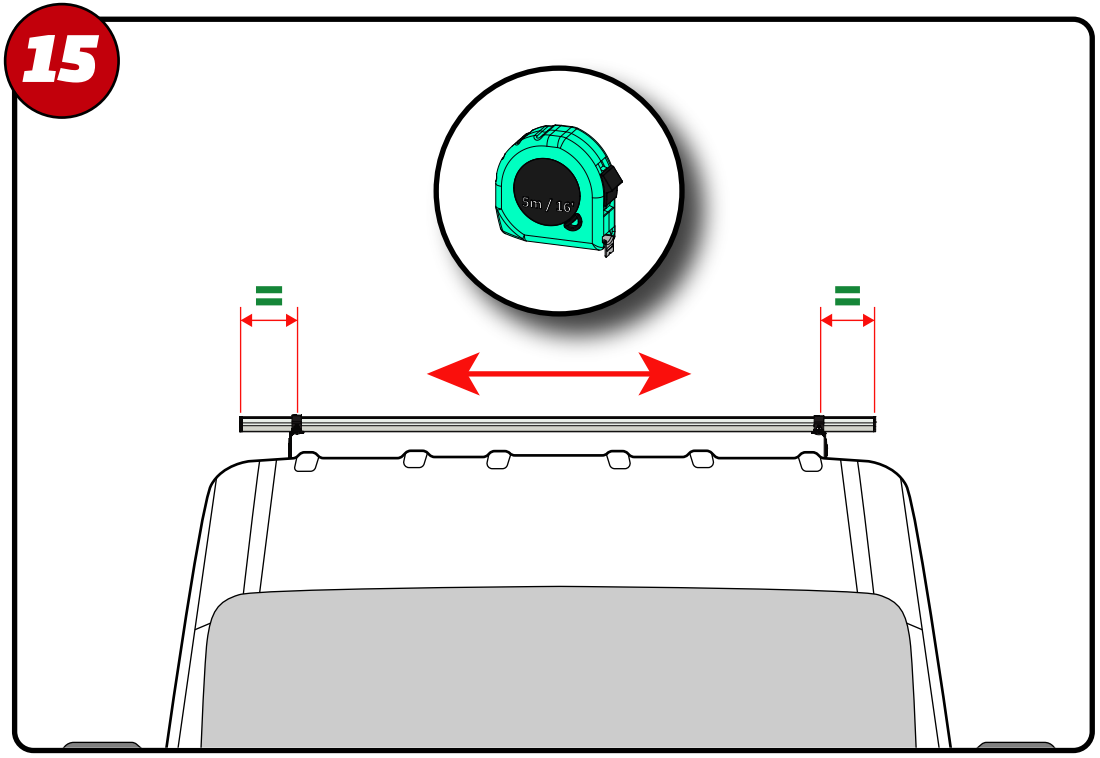


16

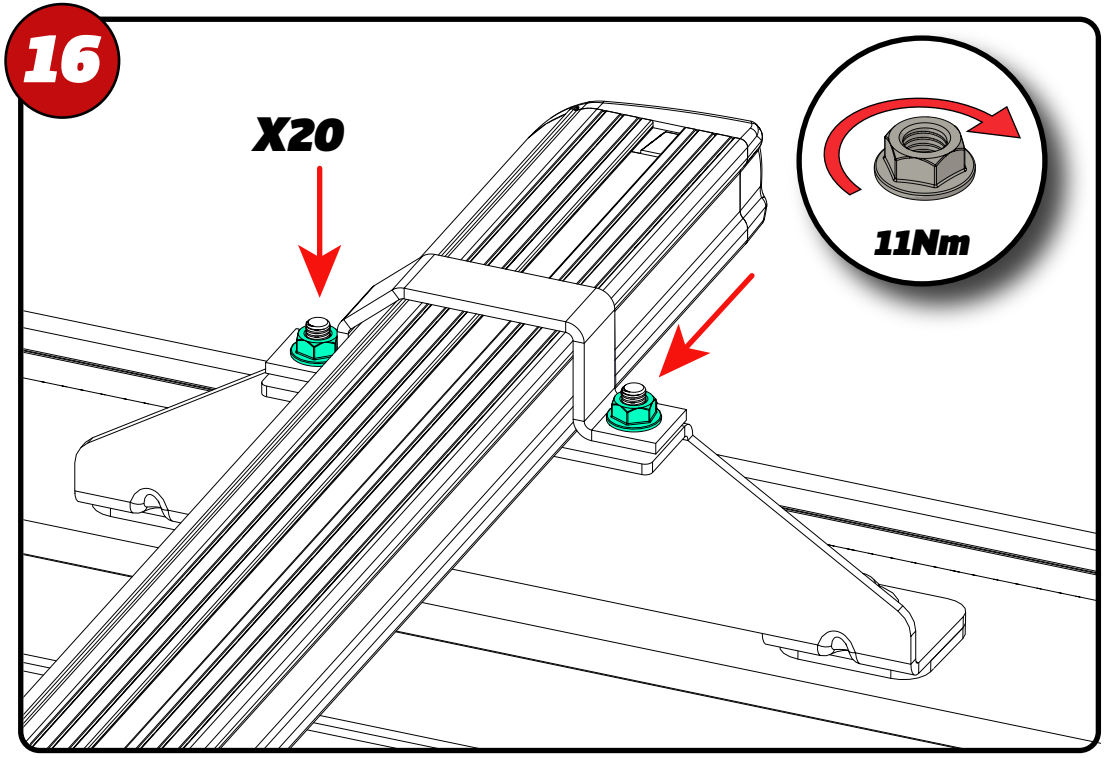



17

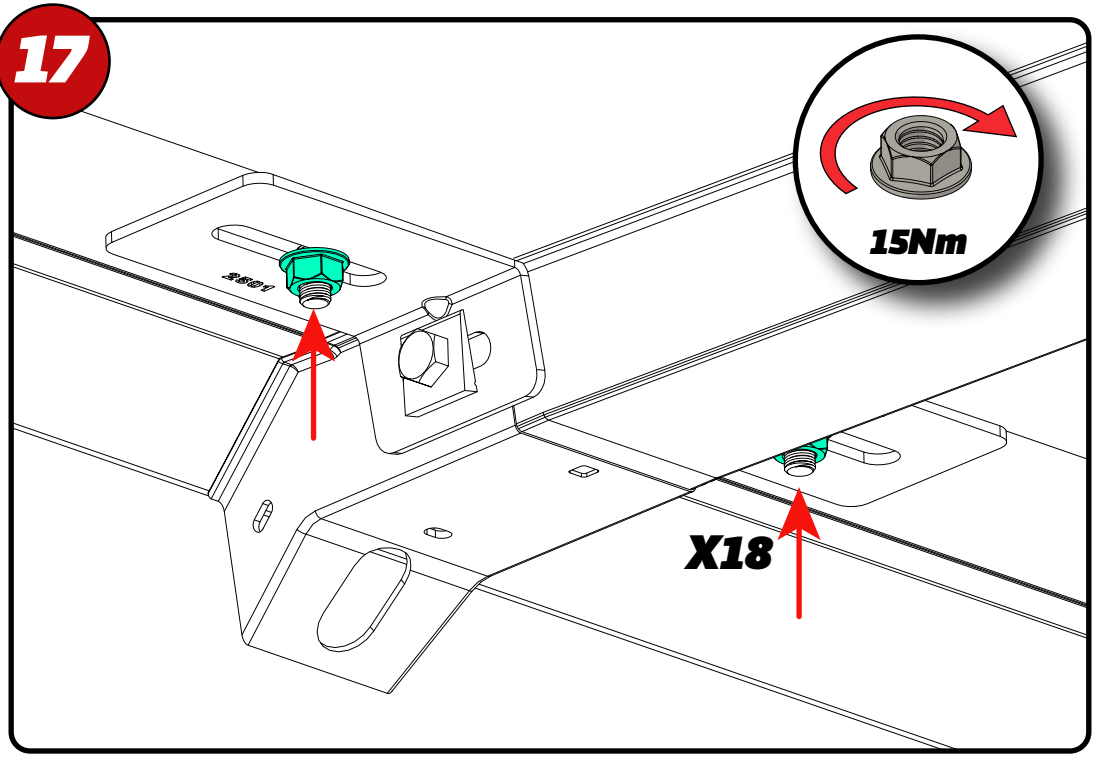



18

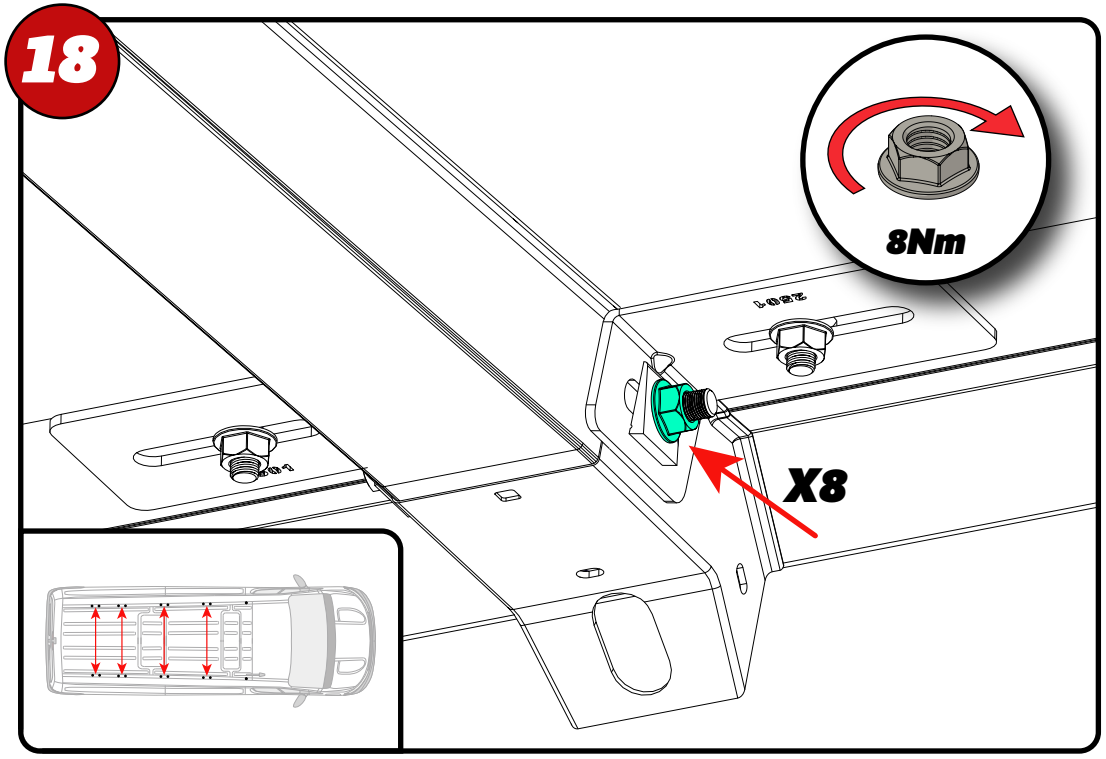


19

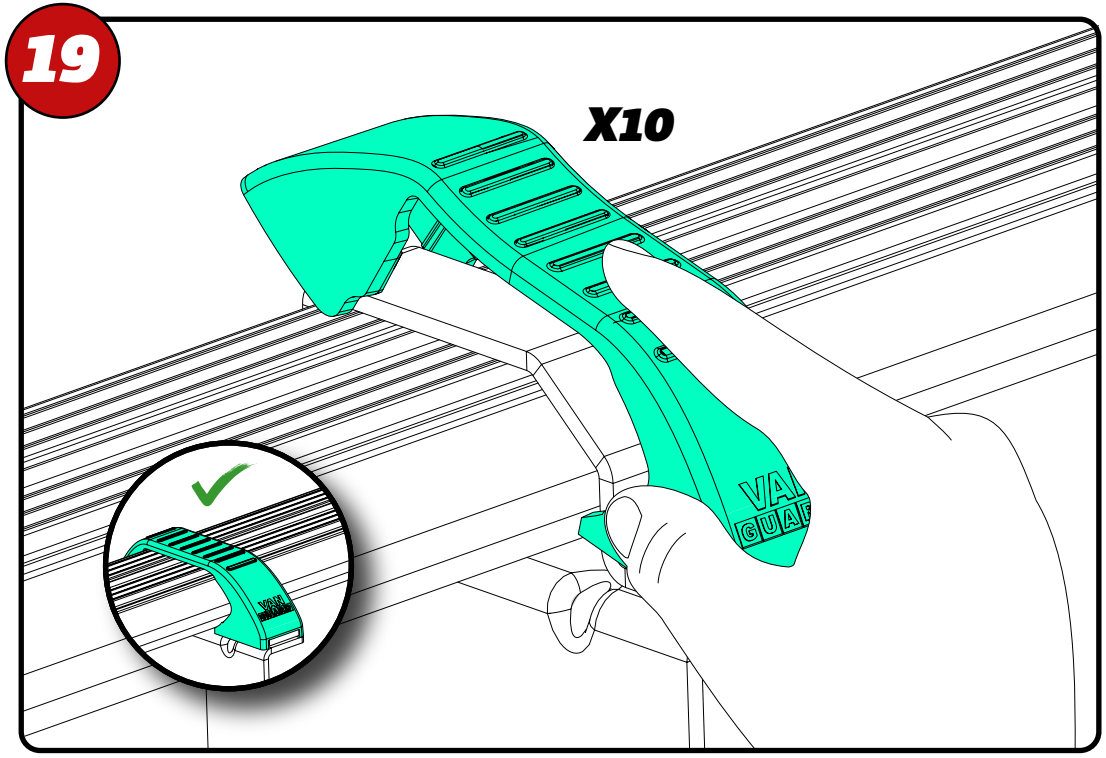



20

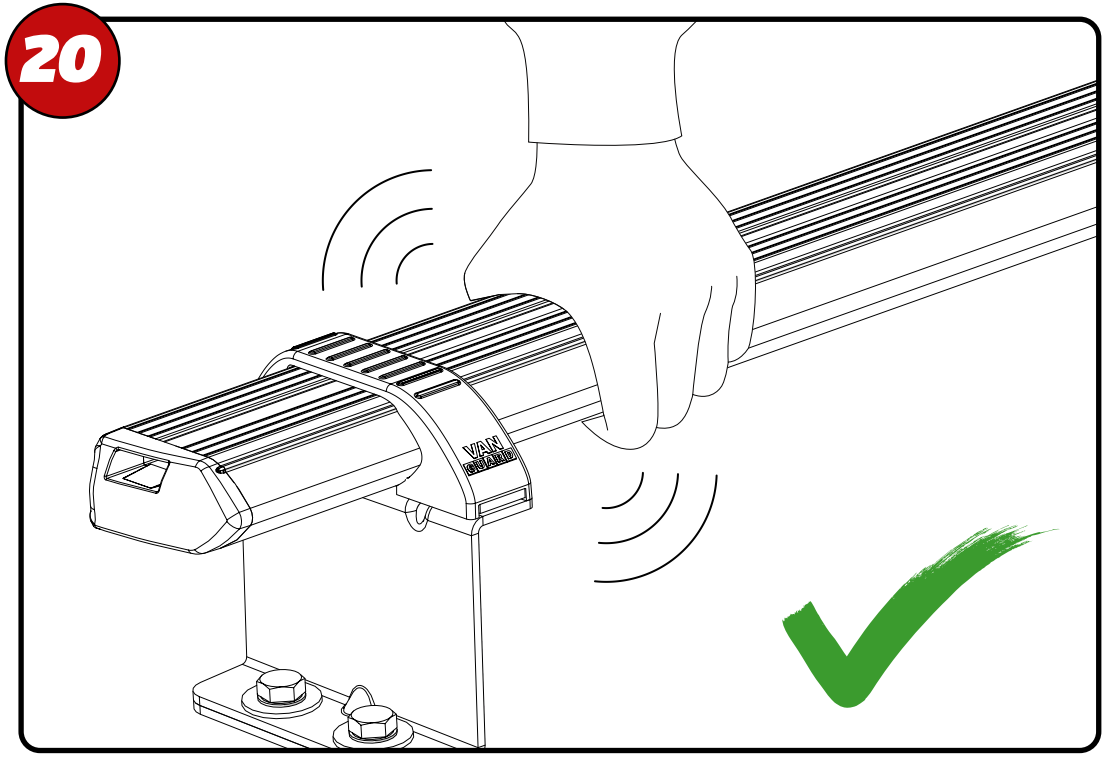


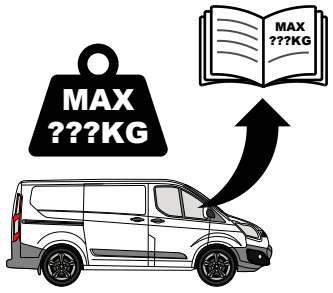



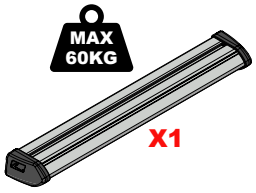

| ULTI Bar Trade (Steel) | ULTI Bar+ (Aluminium) |
|---|---|
|   X1 |   X1 |

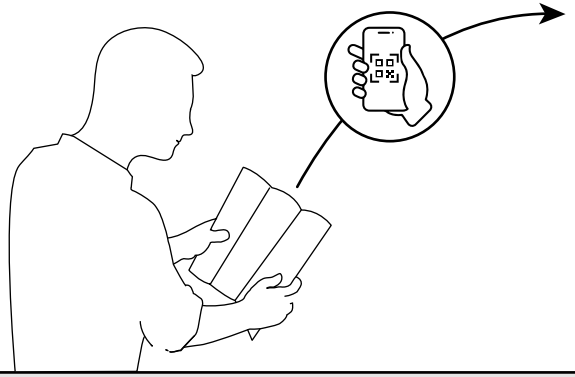

**EN** - SAFETY AND PRODUCT INFORMATION
**DE** - SICHERHEITS- UND PRODUKTINFORMATIONEN
**FR** - INFORMATIONS DE SÉCURITÉ ET DU PRODUIT
**NL** - VEILIGHEIDS- EN PRODUCTINFORMATIE
**ES** - INFORMACIÓN DE SEGURIDAD Y DEL PRODUCTO
**IT** - INFORMAZIONI SULLA SICUREZZA E SUL PRODOTTO
**SV** - SÄKERHETS- OCH PRODUKTINFORMATION
**DA** - SIKKERHEDS- OG PRODUKTINFORMATION
**NO** - SIKKERHETS- OG PRODUKTINFORMASJON
**PL** - INFORMACJE O BEZPIECZEŃSTWIE I PRODUKCIE
**CS** - INFORMACE O BEZPEČNOSTI A PRODUKTU